

PFL / PF_ (5-85A) Series B Power Pole and Control Module Replacement



(Cat PFL-0005_, PFL -0025_, PFL-0043_, PFL-0060_, PFL-0085_)

(Cat PFB, PFB-024, PFD-0085, PFD-0085-024, PFS, PFS-024)



ATTENTION: To prevent electrical shock, disconnect from power source before installing or servicing. Install in suitable enclosure. Keep free from contaminants.

Control Module Removal

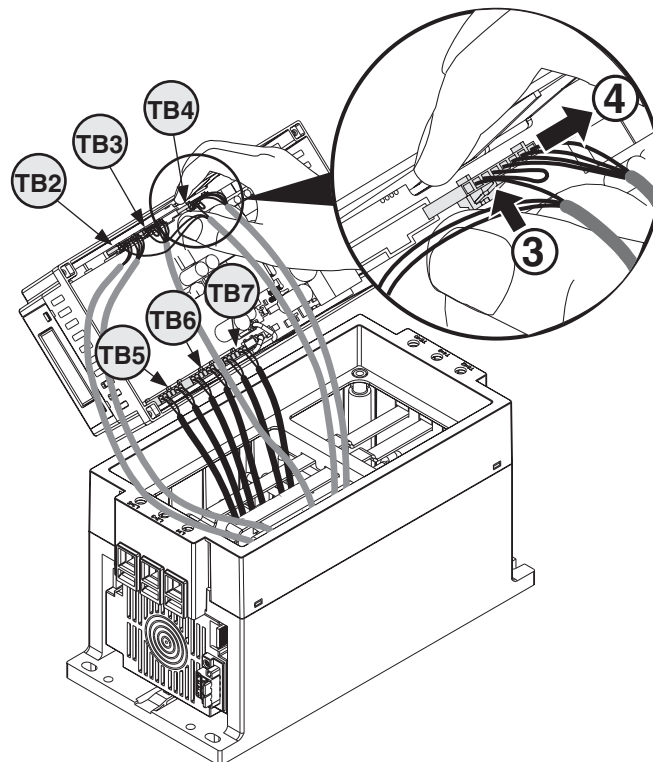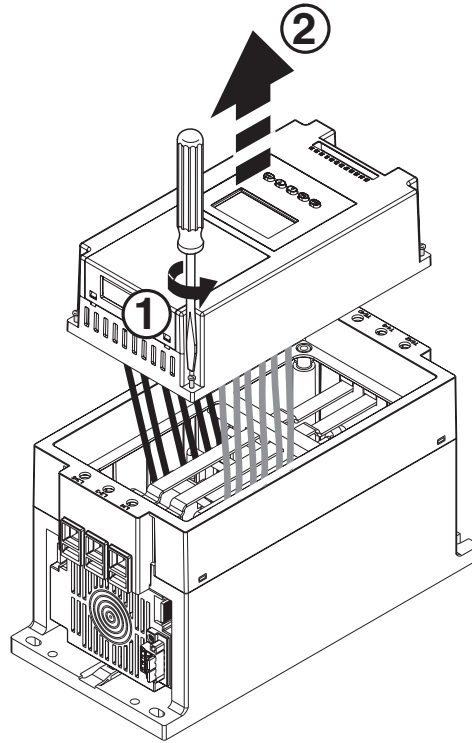

Control Module Installation

