




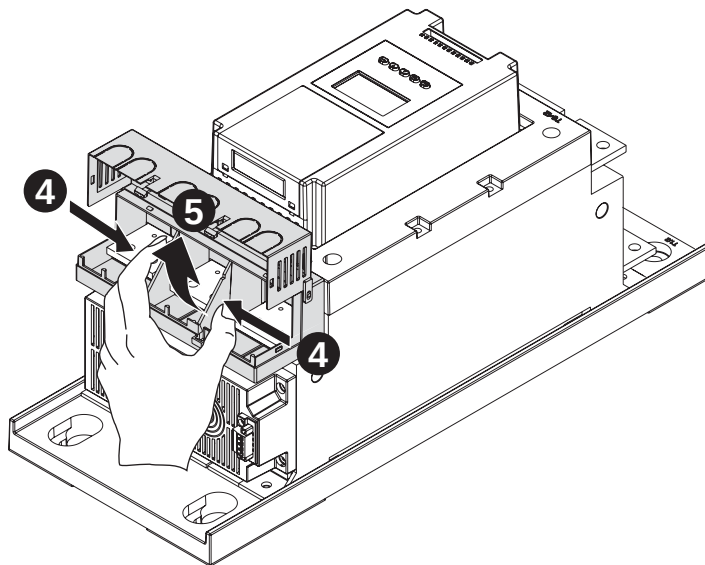


ATTENTION: To prevent electrical shock, disconnect from power source before installing or servicing.
Install in suitable enclosure. Keep free from contaminants.


Terminal Cover Removal (PFL / PF_ Shown)

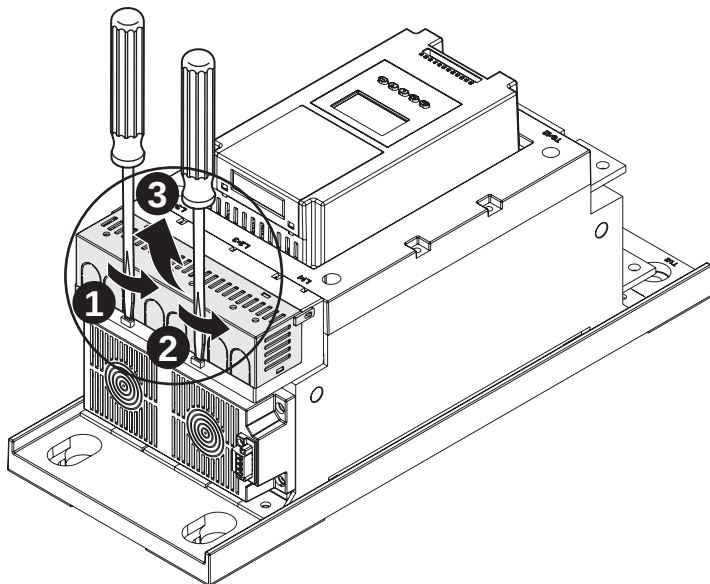


Control Module Removal

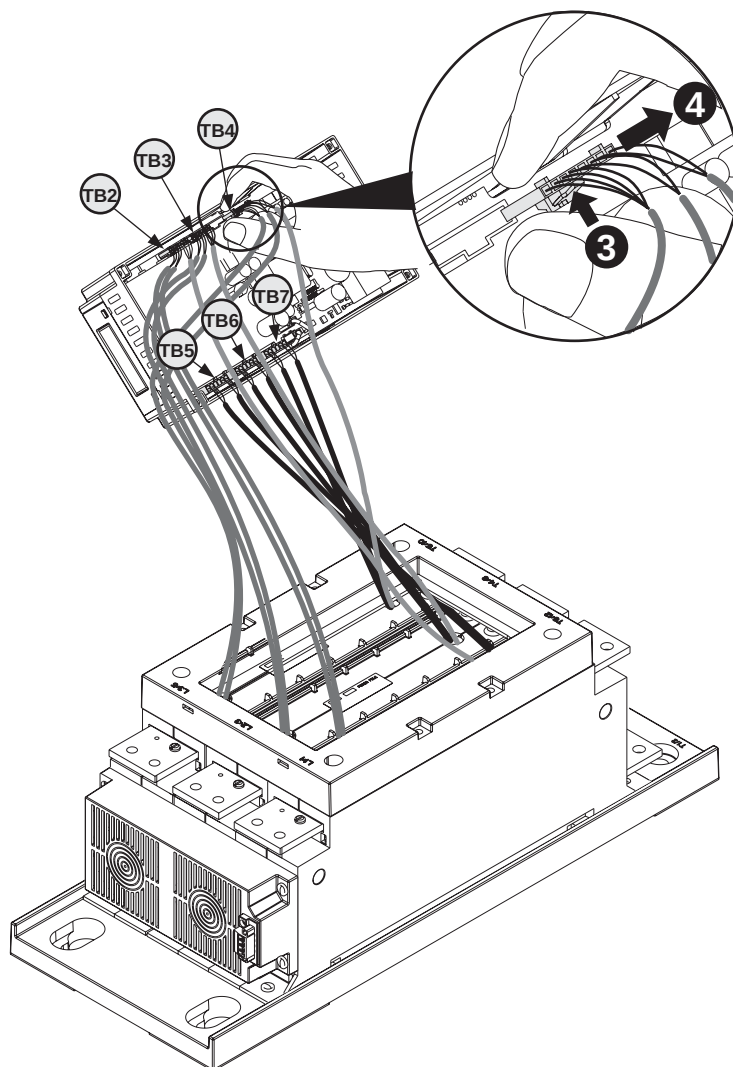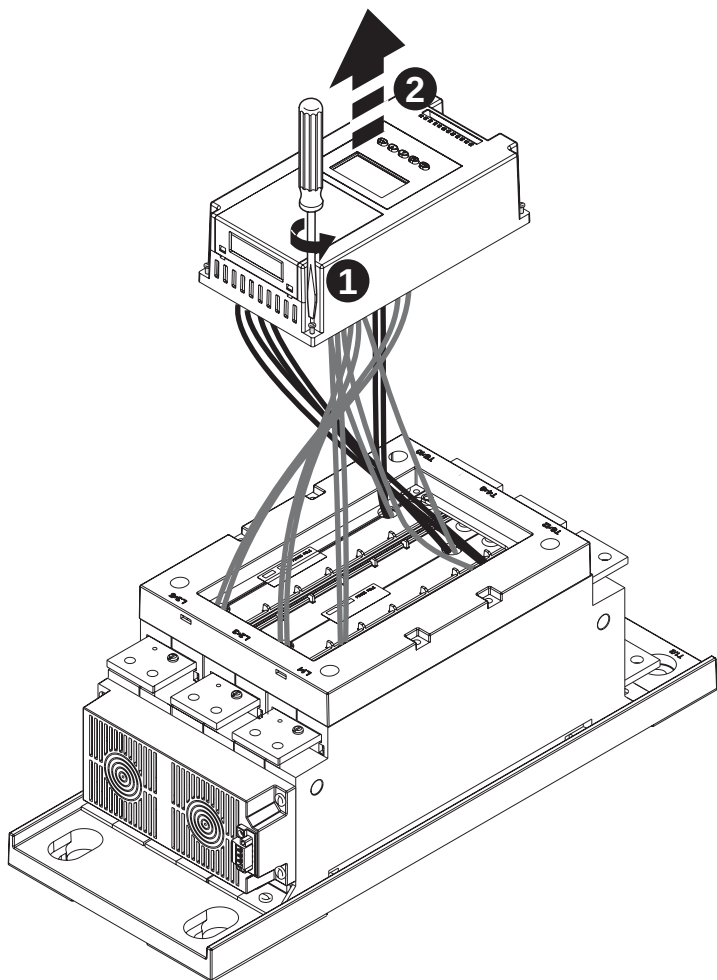

Power Pole and Fan Removal

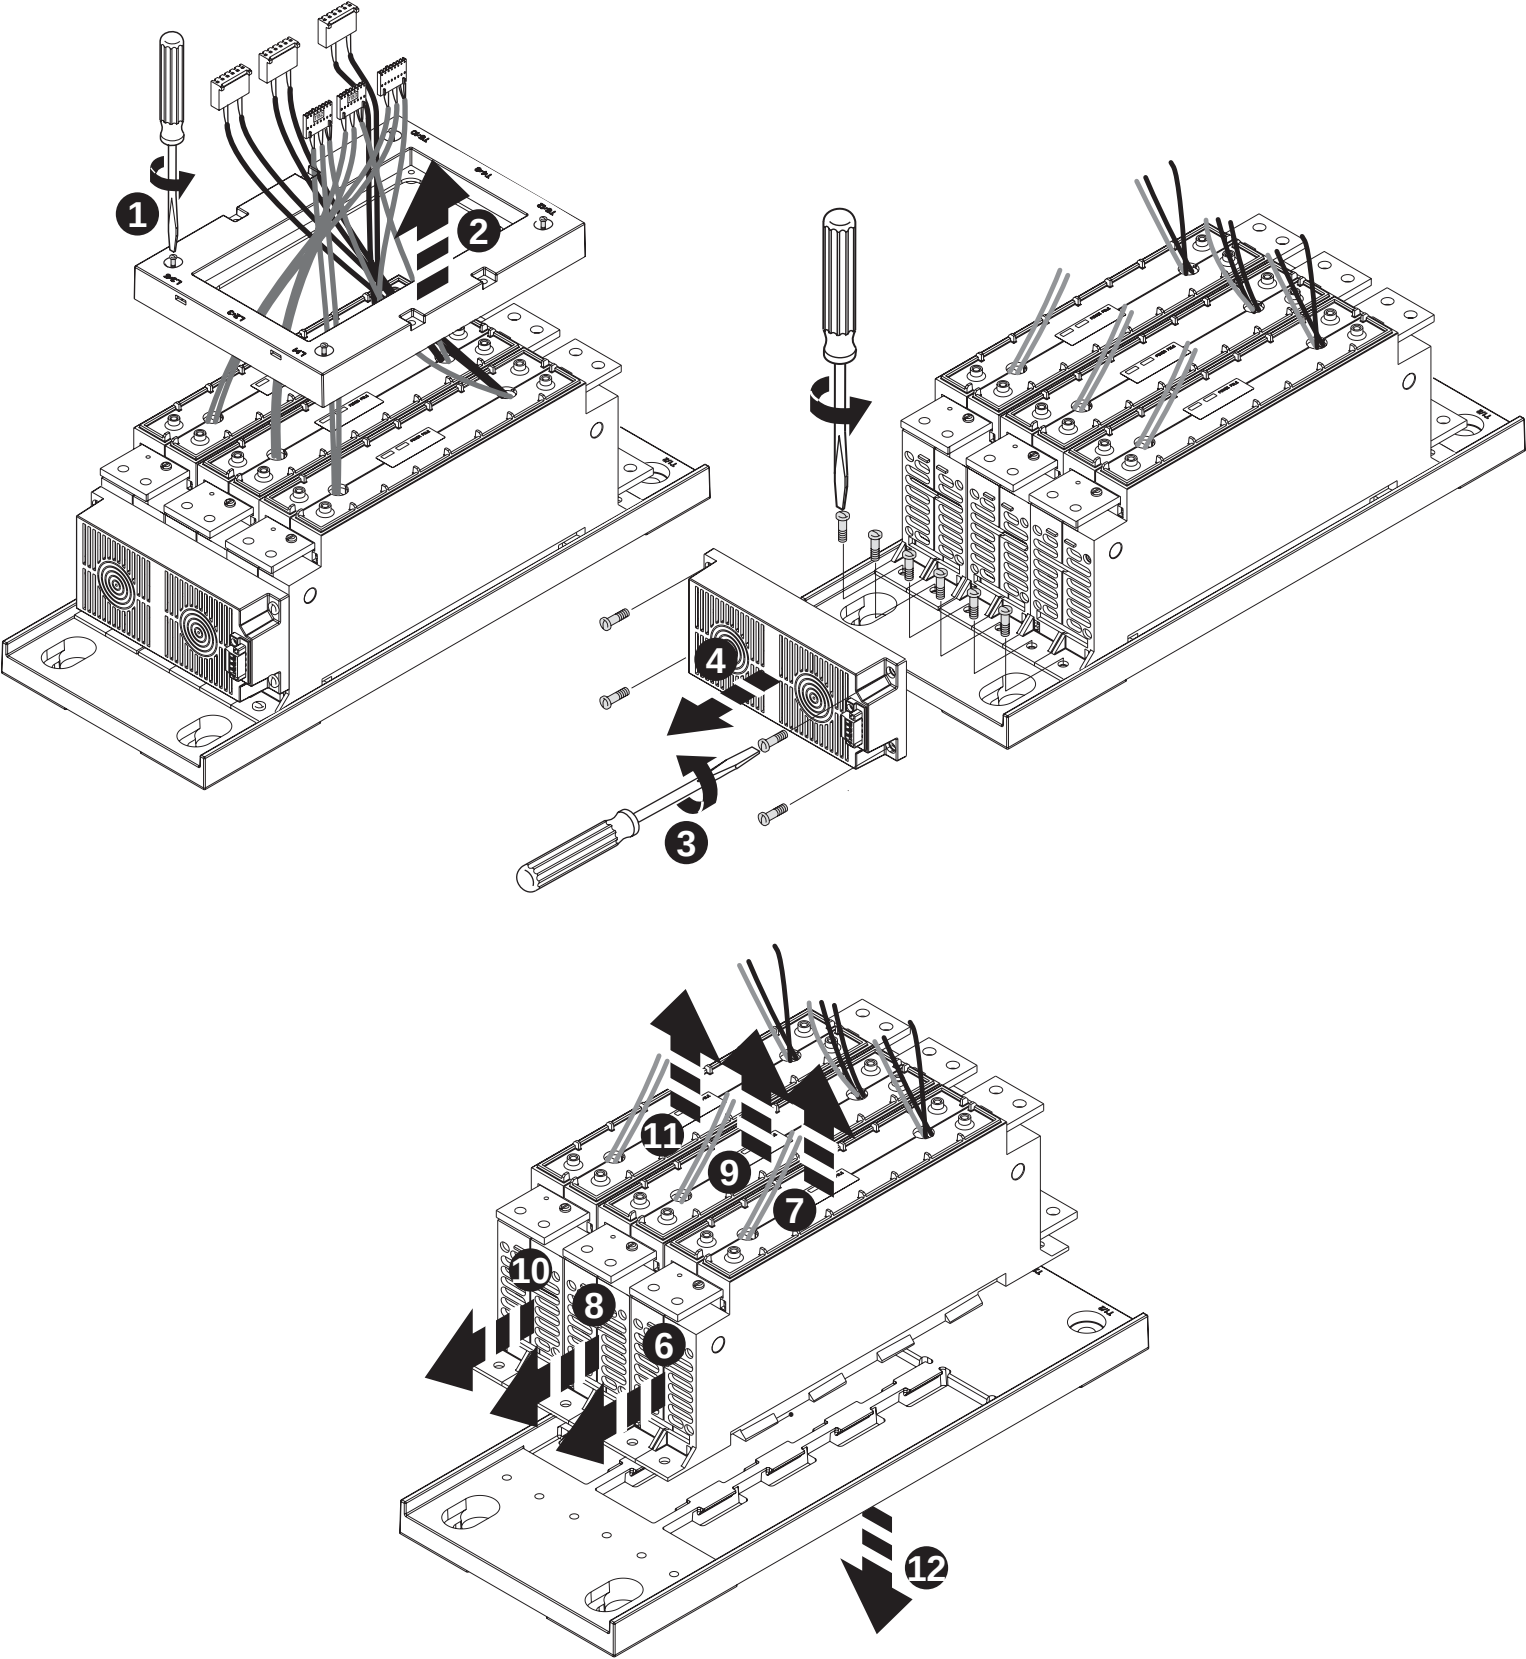


Power Module and Fan Installation



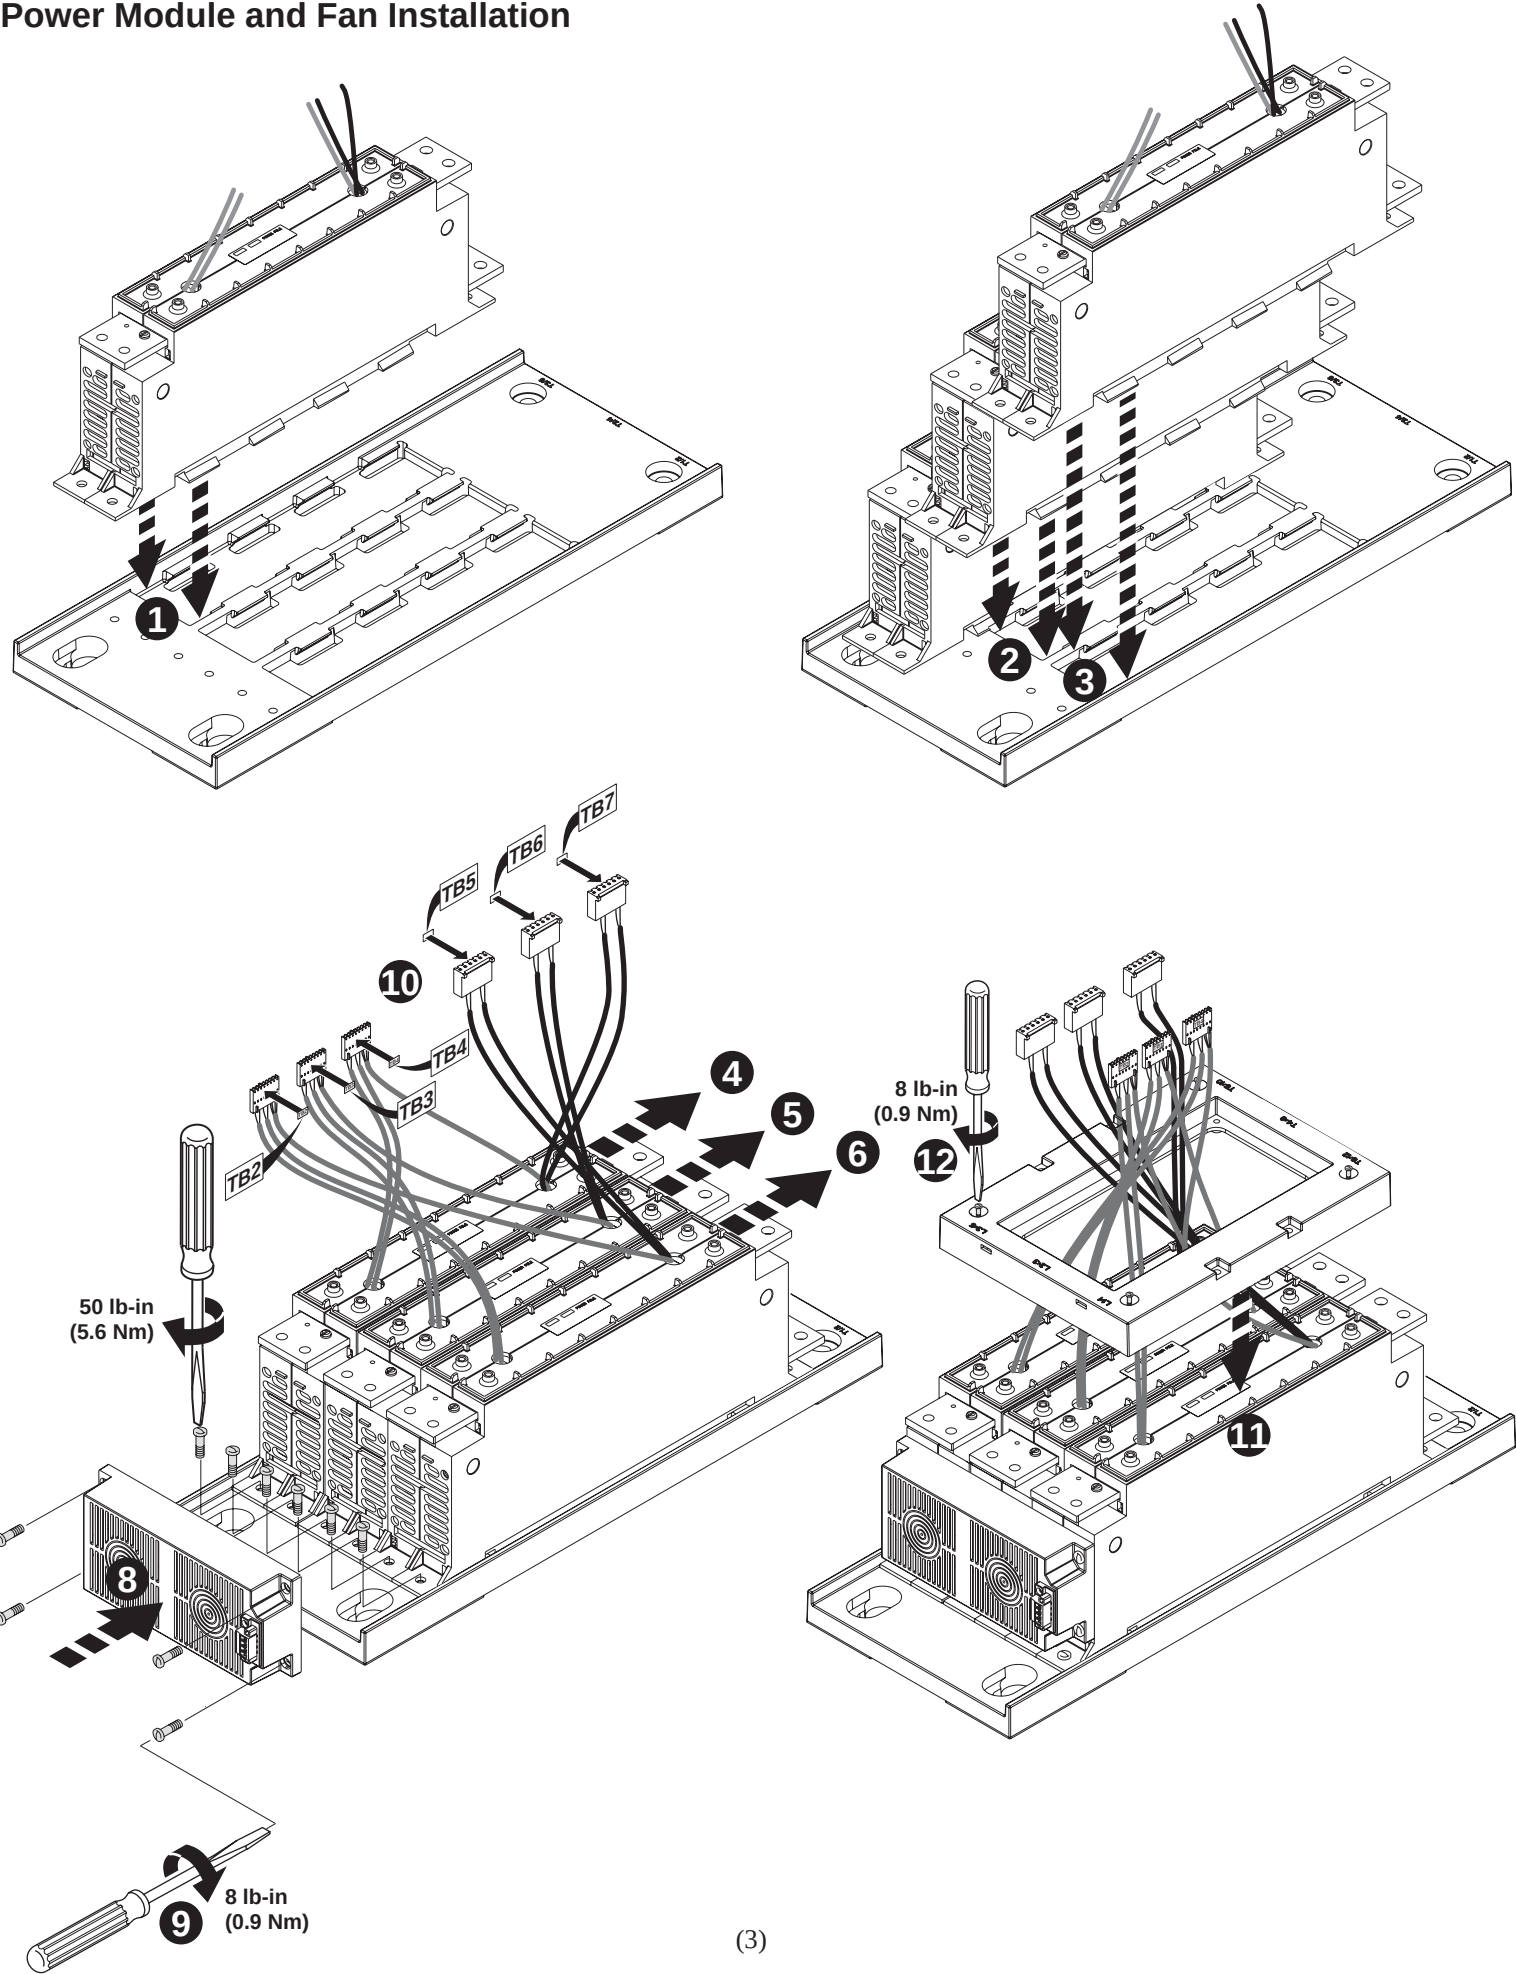


Control Module Installation

PCS / PDS

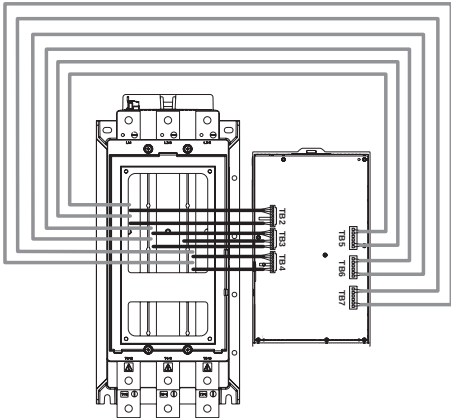

PFL / PF _

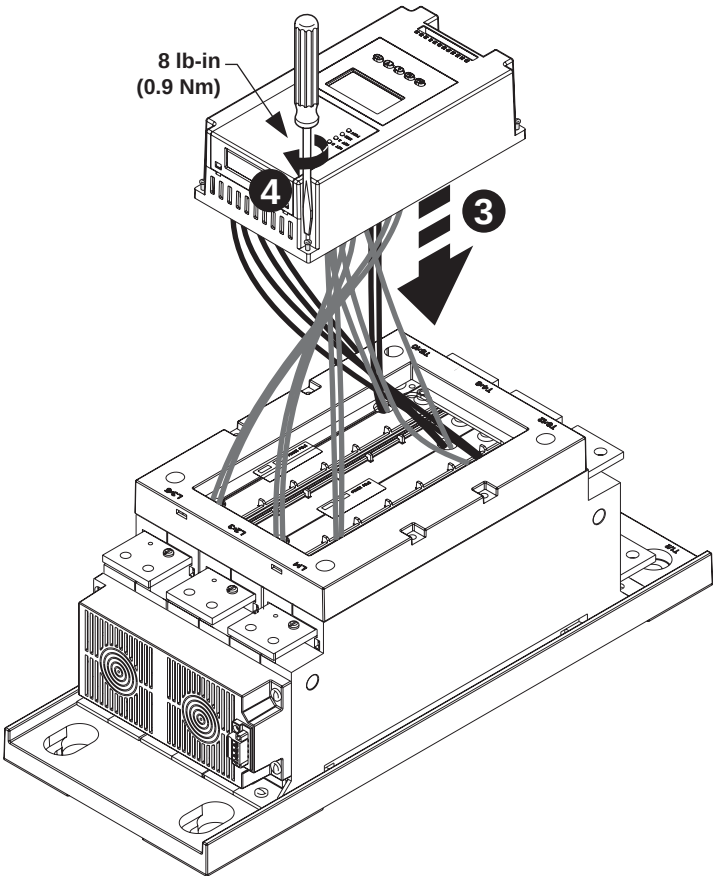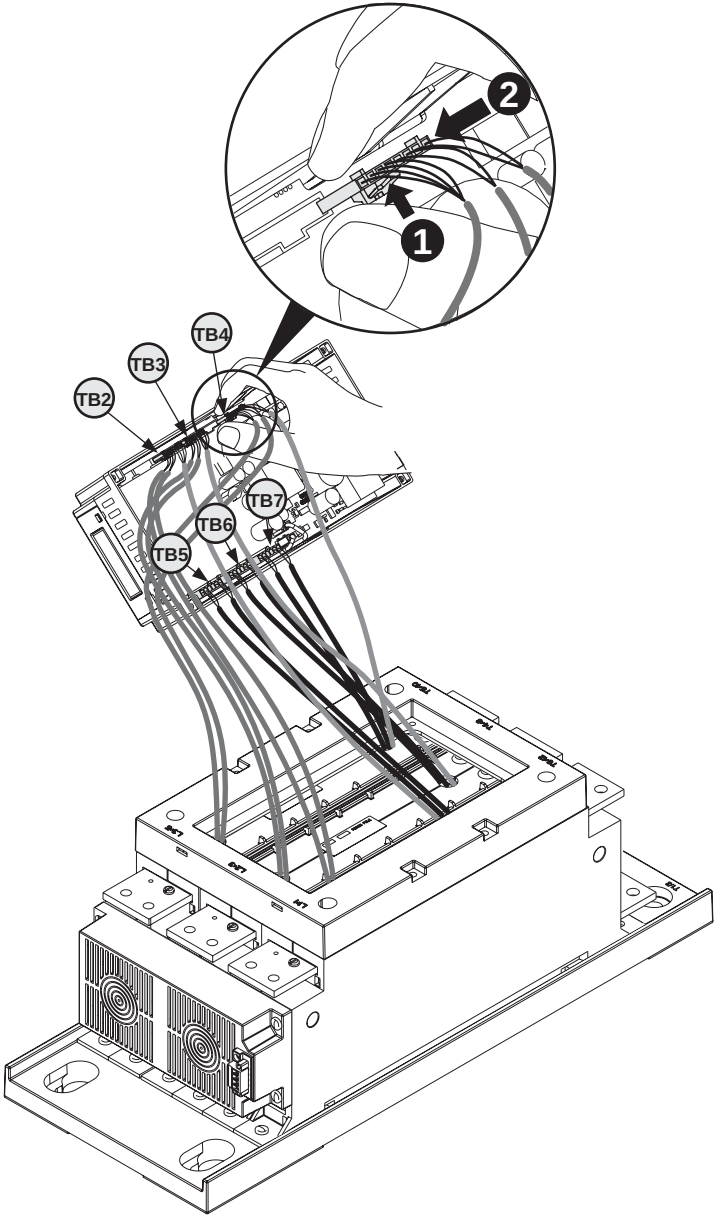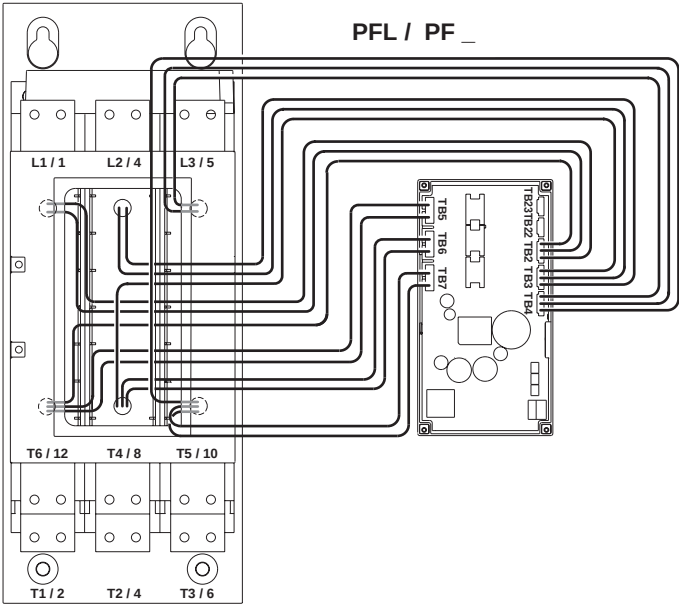

Terminal Cover Installation

