

Accessories - CEP7-1

Accessory	Description		For use with...	Package Quantity	Catalog No.		
	Base Unit Anti-Tamper Shield		CEP7-1EE, CEP7-1EF	10	CEP7-1BC8		
	External Reset Adapter			1	CEP7-1ERA		
	Remote Reset Solenoid	240V AC		1	CEP7-1EMRA		
		120V AC		1	CEP7-1EMRD		
		24V AC/DC		1	CEP7-1EMRZ		
 CEP7-1EPB	 CEP7-1EPD	 CEP7-1EPE	DIN Rail/Panel Adapter	CEP7-1__B	1	CEP7-1EPB	
				CEP7-1__D	1	CEP7-1EPD	
				CEP7-1__E	1	CEP7-1EPE	
			Universal Protection Module ❶ ❷ (ground fault/jam)	CEP7-1EF	1	CEP7-1EGJ	
			Protection Accessory Anti-Tamper Shield	CEP7-1EGJ	25	CEP7-1EMC	
			Reset Adapter (electronic remote reset)	CEP7-1EF	1	CEP7-1ERR	
			Electronic Remote Indication Display	with reset	CEP7-1EGJ, CEP7-1ERR	1	CEP7-ERID
						no reset	1
			Panel/DIN Mounting Kit (includes comm. cable)	CEP7-1EGJ, CEP7-1ERR	1	CEP7-1EIKIT1	
			Accessory Installation Kit and Spare Terminal Blocks (includes comm. cable)		1	CEP7-1EIKIT2	

❶ ATTENTION: The CEP7 Overload relay is not a ground fault circuit interrupter for personnel protection as defined in Article 100 of the NEC.

❷ Dynamic inhibit: Protective function is enabled after the motor current goes above 150% and then falls below 125%