

#### Accessories

B  
CEP7 Overloads

Accessory	Description	For use with...	Catalog Number	Price
	<b>Remote Indication Display "Intellibutton" ③</b> Connects, communicates, and receives power from CEP7 Side Mount Modules to remotely view status of CEP7-EE Overload Relays 	CEP7-EJM CEP7-EGF CEP7-EGJ CEP7-EPT CEP7-ERR	CEP7-ERID	55.39
	<b>Replacement Parts Kit for CEP7-ERID</b> Includes (1) each Mounting Ring (Plastic), Terminal Block Plug, and L.E.D. Fault Code Label	CEP7-ERID	CEP7-NCRID	26.27
	<b>DIN-rail / Panel Adaptor</b> For separate mounting of overload relay to back pan or top hat DIN-rail	CEP7-ED1...B CEP7(S)-EE...B	CEP7-EPB	27.08
		CEP7-ED1..D CEP7(S)-EE...D	CEP7-EPD	27.08
		CEP7(S)-EE...E	CEP7-EPE	33.01
	<b>Current Adjustment Shield</b> Prevents inadvertent adjustment of the current setting	all CEP7-ED1 CEP7-EE	CEP7-BC8	11.86
	<b>Solenoid Remote Reset ④ -</b> For remote resetting of the solid state overload relay. Replace * in Catalog Number with Coil Code.	CEP7 all	CEP7-EMR*	74.71
	<b>External Reset Button</b> Used for manually resetting overloads mounted in enclosures	all CEP7	Use D7 Reset - See Section H.	
	<b>External Reset Button Adaptor</b> Provides a larger "target area" for resetting the overload relay when using an External Reset Button	CEP7-ED1(all), CEP7-EE_B, CEP7-EE_D, CEP7-EE_E, CEP7-EE_P ①	CEP7-ERA	13.29

#### Solenoid Remote Reset Coil Codes

(Replace \* with coil code below)

A.C. Coil Code	Voltage Range 50 / 60 Hz ⑤
J	24V
D	120V
A	240V

D.C. Coil Code	Voltage ⑥
Z24	24VDC
Z48	48VDC
Z01	115VDC

① CEP7-ERA does not fit CEP7-EE J units without removing the CEP7 cover.

② Solenoid Reset Modules only mount on CEP7 Series C or later.

③ See page B21 for additional details on installation and LED functions.

④ Coil consumption of AC coils is 8VA.

⑤ Coil consumption of DC coils is 12 watts.