


<i>General Description.....</i>	<i>C0:2</i>
<i>Catalog Number Coding.....</i>	<i>C0:4</i>
<i>Enclosure Ratings.....</i>	<i>C0:6</i>
<i>Custom Control Panels.....</i>	<i>C0:8</i>
KWIKstarters.....	C1:1
<i>Wiring Diagrams.....</i>	<i>C1:13</i>
<i>Dimensions.....</i>	<i>C1:15</i>
Enclosed Contactors.....	C2:1
<i>Reversing Contactors.....</i>	<i>C2:4</i>
<i>Single-Phase Contactors.....</i>	<i>C2:6</i>
<i>Lighting Contactors.....</i>	<i>C2:8</i>
Non-Combination Motor Starters.....	C3:1
<i>Reversing.....</i>	<i>C3:4</i>
<i>Single-Phase.....</i>	<i>C3:6</i>
Combination Starters.....	C4:1
<i>Thermal Magnetic Circuit Breakers (MCCB).....</i>	<i>C4:2</i>
<i>Fusible Disconnect.....</i>	<i>C4:7</i>
<i>Non-Fusible Disconnect.....</i>	<i>C4:9</i>
Explosion-Proof Starters.....	C5:1
Multi-Speed Starters.....	C5:4
Reduced Voltage Starters.....	C5:8
Pump Controllers.....	C6:1
<i>Simplex Controllers.....</i>	<i>C6:2</i>
<i>NEMA Labeled.....</i>	<i>C6:4</i>
<i>Duplex Controllers.....</i>	<i>C6:5</i>
NEMA Starters for HVAC/R Applications.....	C7:1
<i>Fractional Manual Starters.....</i>	<i>C7:2</i>
<i>KWIKstarters.....</i>	<i>C7:4</i>
<i>Wiring Diagrams.....</i>	<i>C7:15</i>
<i>Dimensions.....</i>	<i>C7:17</i>
<i>Enclosed Contactors.....</i>	<i>C7:19</i>
<i>Non-Combination Starters.....</i>	<i>C7:21</i>
<i>Combination Starters.....</i>	<i>C7:27</i>
Accessories & Modifications.....	C8:1
<i>Coil & Overload Relay Codes.....</i>	<i>C8:3</i>
<i>Modifications - Factory Assembled.....</i>	<i>C8:6</i>
<i>Control Power Sizing.....</i>	<i>C8:11</i>
<i>Wiring Diagrams.....</i>	<i>C8:12</i>
<i>Enclosure Dimensions.....</i>	<i>C8:23</i>

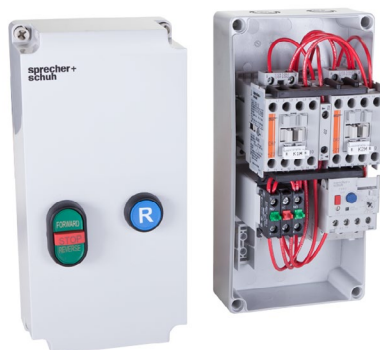

Motor Starters and Enclosed Product

Open & Enclosed pre-wired motor starters and enclosed contactors for any application

C0 Starters & Enclosed Products



KWIKstarters



In addition to selling “open” components, Sprecher + Schuh also offers a full array of preassembled and enclosed products ready to install when they reach your dock.

Standard or customized

The cataloged products in this section comprise Sprecher + Schuh’s standard offerings. In most cases, engineering drawings and bills-of-material have already been created and assembly procedures have been standardized. Generally speaking, lead times are shorter on these standard items.

- Fractional Manual Starters
- Enclosed contactors
- Magnetic motor starters
- KWIKstarters
- Combination starters
- Explosion-proof starters
- Multi-speed starters
- Reduced voltage starters
- Pump controllers
- Softstarters (see Section D)
- Type E/F combination controllers (see Section F)

Your sales representative and our Engineering department will also work with you to customize any of our standard pre-assembled or enclosed products to suit your exact specifications. Any combination of enclosure types, pilot devices, control power transformers, meters and other modifications can be combined to provide exactly the panel



you need.

UL/CSA approved shop

Sprecher + Schuh’s assembly operations are UL Approved UL508A and CSA certified. This means, upon customer request, we can build UL 508A Listed and CSA compliant panels that satisfy the most rigorous UL inspection. Regardless of whether your panel has a UL508A Listing, panels built by Sprecher + Schuh adhere to UL mandated design and wiring standards.

Built with quality and pride


Every panel built by Sprecher + Schuh is meticulously designed and constructed.



Enclosed Contactor




Enclosed
Non-combination Starter

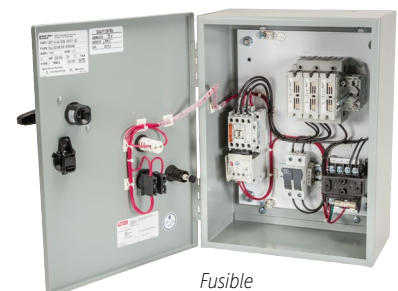

Fusible
Combination Starter



*Duplex
Pump Control*

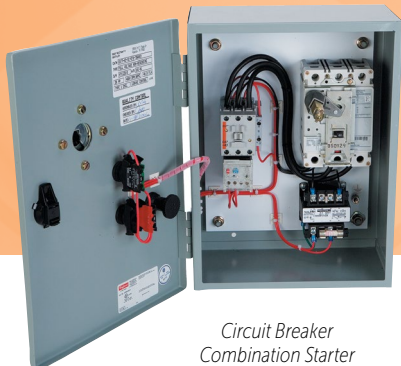

*Circuit Breaker
Combination Starter*




*Pump Control
Panel*

Where possible, all panels are laid out with generous wiring space. Control wiring is neatly bundled and tied to the back pan. Outsourced components are industrial control quality from name brand manufacturers. Control wiring and device function is electrically tested before the panel leaves our facility.


ISO 9001 and ATEX Certified

Sprecher + Schuh is committed to a quality system, focused on customer solutions. This is achieved through superior products and services, excellent customer service, technical expertise, supplier partnerships, and industry leadership.


Our facility is ISO 9001 certified. That was the catalyst in allowing Sprecher + Schuh to obtain Atmospheres Explosives certification (ATEX). ATEX certification permits us to build explosion-proof equipment and panels to be supplied across the European Union, including Canada.

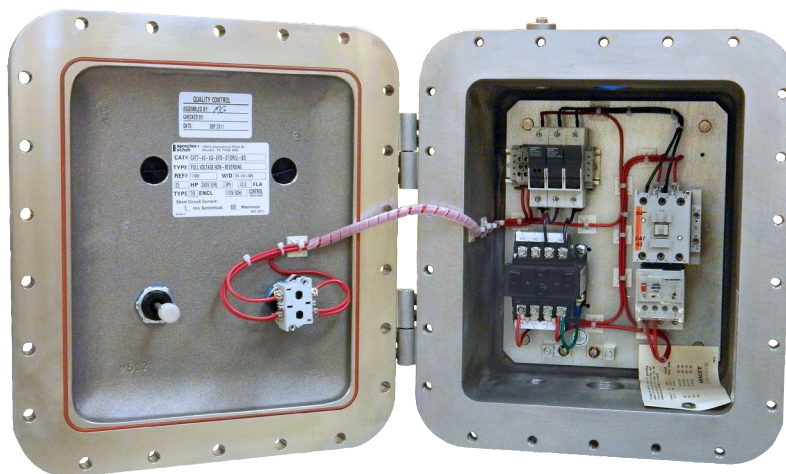


*Explosion Proof
Non-combination Starter*

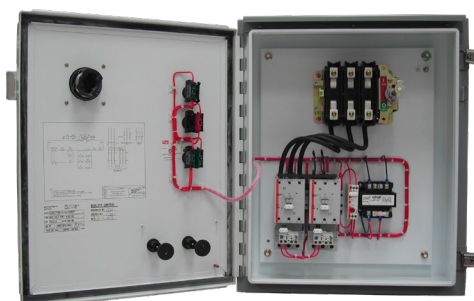

Part-Winding Starter

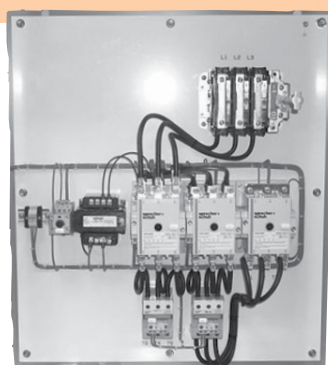

Multi-Speed Starter

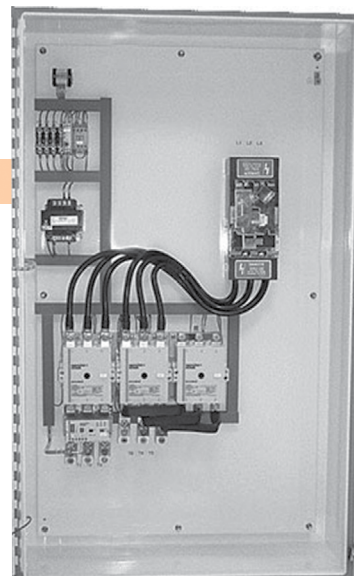

Wye-Delta Starter

Catalog Number Coding

Standard Starters and Enclosed Contactors

FMS and KWIKstarters do not use these principles

CAT

7-30

480

Contactors or Starter Type

CA
CAT
CBT
CATN
CBTN

Non-reversing

Contactors
Starter
Starter (Single Phase)
Starter (NEMA- Three Phase)
Starter (NEMA- Single Phase)

Reversing

CAU
CBU
CAUT
CBUT
CAUTN
Reversing Contactor
Reversing Contactor (Single Phase)
Reversing Starter
Reversing Starter (Single Phase)
Reversing Starter (NEMA)

Multi-speed

CAZTT
CAZHT
CAETT
CAEHT
Multispeed-Two Wind. (Conts/VAR TQ)
Multispeed-Two Wind. (Const. HP)
Multispeed-One Wind. (Conts/VAR TQ)
Multispeed-One Wind. (Const. HP)

Reduced Voltage

CAAT
CAYT
CAPWT
Autotransformer Starter
Wye-Delta Starter
Part Winding Starter

Pump Panels

CAPT
CAPTN
CADPT
Simplex Pump Panel
Simplex Pump Panel (NEMA Size)
Duplex Pump Panel

Contactor Size

Small - Series CA7 ①

7-9(E)
7-12(E)
7-16(E)
7-23(E)
7-30(E)
7-37(E)
7-43(E)
7-55(E)
7-60(D)
7-72(D)
7-85(D)
7-97(D)

Medium - Series CA9

9-116(-EI)
9-146(-EI)
9-190(-EI)
9-205(-EI)
9-265(-EI)
9-305(-EI)
9-370(-EI)
9-400(-EI)
9-460(-EI)
9-580(-EI)
9-750(-EI)
9-860(-EI)
9-1060(-EI)

Coil Code (or CPT)

AC	DC
24Z	12E
120	24E, 24DD
220W	24W
277	36E
415	48E
480	110E, 110DD
600	220E

AC/DC

24W
48W
120W
480W

Control Transformer

Code	Primary	Secondary
XA	208	120
XB	240	120
XC	480	120
XD	575	120
XE	240	24
XF	480	24
XG	380	110

For additional Control Transformer Codes, refer to Modification pages in this section.

This illustration is for reference only.
Turn to the appropriate page to determine
specific catalog number.

① (D) & (E) suffix designates contactors with DC coils

EED**TB20****G****3****Overload Relay****Short-Circuit /
Disconnect****Enclosure****Enclosure Cover
Control****Options****CEP7-1 - Third Generation Solid State
CA7-9 thru CA7-97****1E...** CEP7 O/L Relay, 1 or 3Ø, Class 10, man. reset**F...** CEP7 O/L Relay, 3Ø, (selectable)**CEP9 - Advanced Solid State****CA9-116(-EI) thru CA9-1060-EI****9...** CEP9 O/L Relay 3Ø, (selectable)**CT..** Current Transformers**CT7N - Bimetallic Thermal
CA7-9 thru CA7-97****...A-C** CT7N O/L Relay, Class 10,
manual or automatic reset**...P** CT7N O/L Relay, Class 10,
manual or automatic reset,
separate mount**G** General Purpose - Type 1
D Dusttight - Type 12
W Watertight - Type 4
C Watertight Corrosion
Resistant - Type 4X
R Raintight - Type 3R
E Explosion proof - Type 7**Non-Reversing****1** Pilot Light Only
2 Pilot Lights (2) Only
3 "Start-Stop" PB
4 "On-Off" PB
5 "Hand-Auto" S/S
6 "Off-On" S/S
7 "Hand-Off-Auto" S/S
9 "Emergency Stop" PB
0 None**Reversing****2** Pilot Lights (2) Only
3 "For-Stop-Rev" PB
4 "Up-Stop-Down" PB
5 "Open-Stop-Close" PB
6 "For-Off-Rev" S/S
7 "Up-Off-Close" S/S
8 "Open-Off-Close" S/S
0 None**Multi-speed****2** Pilot Lights (2) Only
3 "High-Stop-Low"
4 "Fast-Stop-Slow"
5 "High-Off-Low"
6 "Fast-Off-Slow" S/SFor additional Cover Control
Codes, or combinations of cover
controls, refer to Modification
pages in this section.**Through-the-Door Operated Combo****Thermal Magnetic
Circuit Breaker****TB(H)15** 15 Amp**TB20** 20 Amp**TB25** 25 Amp↓ thru ↓
TB1200 1200 Amp**Blank** None**Fusible
Disconnect****JF61** 600V/30A**JF62** 600V/60A**JF63** 600V/100A**JF64** 600V/200A**JF65** 600V/400A**JF66** 600V/600A**JF67** 600V/800A**Blank** None**Non Fusible
Disconnect****JU61** 600V/30A**JU62** 600V/60A**JU63** 600V/100A**JU64** 600V/200A**JU65** 600V/400A**Blank** None

* TBH represents high interrupt capacity breaker

C0

Starters & Enclosed Products

For complete listing of
Option Codes, refer to
Modification pages in
this section.

NEMA / UL Enclosure Type Definitions






For a degree of protection against:	NEMA / UL Type (IP Equivalent ①)								
	Indoor Use			Outdoor Use		Indoor or Outdoor Use			
	1 (IP23)	12 (IP55/65)	13 (IP65)	3R	3 (IP64)	4 (IP66)	4X (IP66)	6P	6 (IP67)
Incidental contact with enclosed equipment	✓	✓	✓	✓	✓	✓	✓	✓	✓
Falling dirt	✓	✓	✓	✓	✓	✓	✓	✓	✓
Rust	✓	✓	✓	✓	✓	✓	✓	✓	✓
Circulating dust, lint, fibers and flyings		✓	✓		✓	✓	✓	✓	✓
Windblown dust					✓	✓	✓	✓	✓
Falling liquids and light splashing		✓	✓		✓	✓	✓	✓	✓
Rain (limited water allowed inside)				✓	✓	✓	✓	✓	✓
Rain (no water allowed inside)					✓	✓	✓	✓	✓
Snow and sleet				✓	✓	✓	✓	✓	✓
Hosedown and splashing water						✓	✓	✓	✓
Occasional prolonged submersion								✓	✓
Oil or coolant spraying or splashing			✓						
Corrosive agents							✓	✓	
Occasional temporary submersion								✓	✓

Explosion-Proof Enclosure Type Definitions

NEMA Classifications - Marked with Rated Class, Division, and Group			
NEMA 7	For use in indoor locations classified as Class I, Groups A, B, C or D, as defined in the National Electrical Code		
NEMA 8	For use in indoor or outdoor locations classified as Class I, Groups A, B, C or D, as defined in the National Electrical Code - oil immersed		
NEMA 9	For use in indoor locations classified as Class II, Groups E, F or G, as defined in the National Electrical Code		
Summary of NEC Classes and Group Examples			
Group A	Class I (Potentially explosive gas or vapor) Acetylene	Group E	Class II (Potentially explosive dusts) Metallic Dusts (all metals)
B	Hydrogen, Ethylene Oxide, Propylene Oxide	F	Carbonaceous Dusts (coal, asphalt, etc.)
C	Ether, Hydrogen Sulfide, Hydrazine, Nitroethane	G	Nonconductive Dusts (grain, drugs, pesticides, plastics, dyes, etc.)
D	Methane, Acetone, Benzene, Gasoline, Naptha		
Summary of NEC Divisions			
Division 1	Potentially explosive substance present under normal operating conditions		
Division 2	Potentially explosive substance present under abnormal operating conditions		

① IP Equivalents are only approximate. It is the responsibility of the user to verify the enclosure rating necessary for the given application.

IP Ratings Definitions

IP Ratings Definitions The first IP number (left side of chart) is protection against solid objects. The second IP number (across top) is protection against liquids. The chart itself shows degrees of protection according to IEC 529.	 No protection	 Protected against vertically falling drops of water (condensation)	 Protected against dripping water with enclosure up to 15° from vertical	 Protected against sprayed water up to 60° from vertical	 Protected against sprayed water from all directions (limited ingress permitted)	 Protected against low pressure water jets from all directions (limited ingress permitted)	 Protected against strong jets of water from all directions	 Protected against immersion up to one meter	 Protected against long periods of immersion under pressure
	IP...0	IP...1	IP...2	IP...3	IP...4	IP...5	IP...6	IP...7	IP...8
IP0...  No protection	IP00								
IP1...  Protected against solid objects up to 50mm (accidental touch by hands)	IP10	IP11	IP12						
IP2...  Protected against solid objects up to 12mm (fingers, knuckles)	IP20	IP21	IP22	IP23					
IP3...  Protected against solid objects up to 2.5mm (tools, wires)	IP30	IP31	IP32	IP33	IP34				
IP4...  Protected against solid objects up to 1mm (wires)	IP40	IP41	IP42	IP43	IP44				
IP5...  Protected against dust (limited ingress permitted)	IP50			IP53	IP54	IP55	IP56		
IP6...  Totally protected against dust	IP60					IP65	IP66	IP67	


Custom Control Panels

Designed and built to meet *Your* needs

C0

Custom Control Panels

ISO9001, UL508 & UL1203 (NNNY) Certified Panel Shop
Including ATEX Solutions



Need Custom Control Panels? You Got It

Sprecher + Schuh is your go to builder for custom motor control panels. Our panel shops are UL508 and CSA approved. This means our knowledgeable team can design your panel for custom applications to meet UL/CSA, ATEX, UL1203, and CE standards. Our engineering and custom quotes staff work with the customer one-on-one in designing a motor control panel that best fits the customer's needs. No job is too small or too big for our staff to take on.


We continuously strive to develop innovative, new products and improve existing designs. We constantly strive to maintain a superior level of service including our ISO 9001 Certification.

Our large panel shop is designed to accommodate our customers' needs. We stock not only Sprecher + Schuh components but also MCCB and popular enclosures in a variety of sizes and types (metallic, non-metallic, and explosion-proof). This means we can design, assemble, wire, and quickly ship a variety of custom panels.



What Can We Build For You?

Regardless of your industry or custom control panel needs, we at Sprecher + Schuh have the engineering experience and manufacturing facilities to design and build your panels. Whether your need is to design an OEM panel that will be repeated, or a one-of-a-kind, we have an experienced engineering and quality control team dedicated to providing the best solution to your custom control panels. Our manufacturing facilities are staffed with experienced wiring and installation technicians, ensuring your custom panel meets safety and performance criteria. Through this commitment to service, and never-ending attention to detail, we continue to be the first and last words in motor protection.

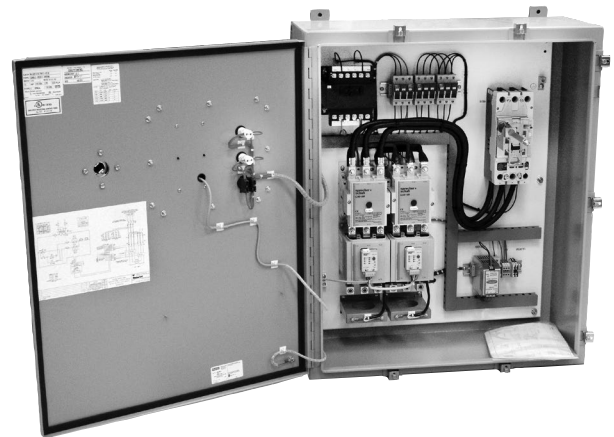

Custom Built Panels

Custom built to your specifications!

- Multi-Motor Starter Panels
- Combination & Non-Combination Motor Starters
- Reduced Voltage Starters
- Softstarter Panels (see Section D)
- Multi-plex Pump Panels
- Door-in-Door Panels
- Explosion-Proof Starters
- UL508/CSA Labeled Custom Panels
- ATEX Explosion Proof Panels
- Labeled Service Entrance Rated Panels
- and many more!





C0

Custom Control Panels



For your
**Custom
application**
contact:
customquotes@sprecherschuh.com

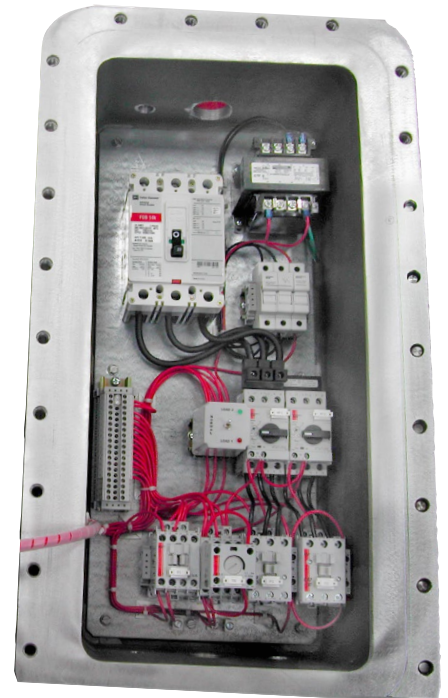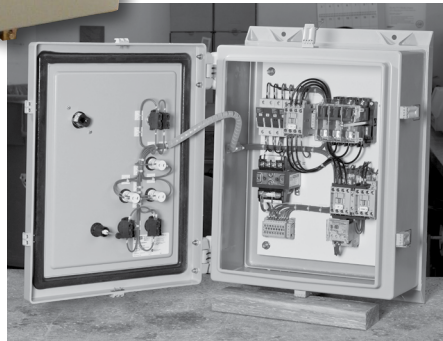

Notes

C0

Starters & Enclosed Products

KWIKstarters

Preassembled or build from stock – Easy, fast, economical enclosed starters for applications up to 40HP

C1
KWIKstarters



KWIKstarters are equipped with our advanced CEP7 Solid State Overload Relay as a standard

Sprecher + Schuh offers a broad selection of pre-assembled or “build-from-stock” starters housed in a high impact, non-metallic, cUL Approved, Type 1, 12, 4, 4X enclosure. Alternatively, an ABS IP66 IEC only enclosure offers a more economical choice in competitive situations. Built for convenience, space savings and economy, KWIKstarters are efficiently designed to use standard CA7/CA8 contactors and CEP7/CT8 overloads, usually stocked by distributors. Contactor and overload are either pre-wired and pre-mounted onto the enclosure’s built-in DIN-rail or may be ordered as separate components. Ample knockouts and open terminals guarantee quick, no fuss wiring.

Sized for most industrial applications

KWIKstarters control motors up to 40HP @ 460V in three sizes of enclosures, measuring:

- Q0 dim 163 x 83mm (6.4" x 3.3")
- Q1 dim 208 x 98mm (7.4" x 3.9")
- Q2/Q3 dim 250 x 150mm (9.85" x 4.93")

This covers over 85% of industrial motor control applications in a very compact package that can be mounted adjacent to or directly on equipment.

Build it yourself...

KWIKstarters may be assembled from stock components. Just grab a CA8 or CA7 contactor, an appropriate overload,

and snap them into the enclosure. Minimal wiring is required and assembly can be completed in minutes.

Thermal overload protection


KWIKstarters, using the CA8-09 to CA8-12 contactors, are equipped with Sprecher + Schuh’s CT8 bimetallic thermal overload relays. Protection is ensured by a complex current calibration procedure performed after each unit is at full operating temperature.

Solid state overload options

KWIKstarters, using CA7-9 to 55 amp contactors, are supplied with Sprecher + Schuh’s CEP7 solid state overload relay. The CEP7-1EE_ overload with manual reset is standard. The optional CEP7-1EF_ automatic reset device is also available on most units.

The CEP7 solid state overload relays measure motor current directly through integrated current transformers and on board electronics. The electronics provide increased accuracy and numerous other advantages over electromechanical relays. Learn more about Sprecher + Schuh overload relays in Section B of this catalog.

See Section F for
Type E/F
CL-K
KWIKstarters

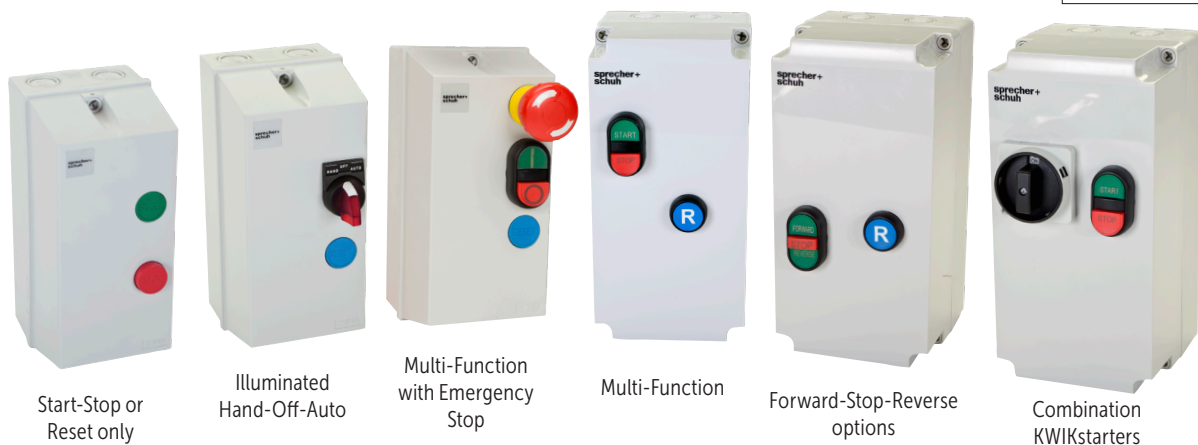

Start-Stop or Reset only

Illuminated Hand-Off-Auto

Multi-Function with Emergency Stop

Multi-Function

Forward-Stop-Reverse options

Combination KWIKstarters

KWIKstarter Type	
Non-reversing	
CL	KWIKstarter IEC 3-Phase
CLB	KWIKstarter IEC 1-Phase
CLN	KWIKstarter NEMA 3-Phase ①
CLNB	KWIKstarter NEMA 1-Phase ①
Reversing	
CLU	FVR KWIKstarter IEC
CLUN	FVR KWIKstarter NEMA ①

Enclosure Type	
KA	Type 4/4X/12 - IP66 Plastic
VA	ABS IP66 IEC Only

Enclosure Size	
BLANK	Standard 9...23 Amps
L	Large 30...55 Amps ②

Contactor Size	
<u>Miniature - Series CA8</u>	
COMING SOON!	809
	812
<u>Standard - Series CA7</u>	
	709
	712
	716
	723
	730
	737
	743
	755

Contactor Coil	
AC	DC
Miniature - Series CA8	
024Z	012D
0120	024D
0480	110D
0600	220D
Standard - Series CA7	
024Z	012E
0120	024E
220W	036E
0277	048E
0415	110E
0480	220E
0600	

CL	-	KA		812		024Z	-	C10	-	3	-	
CL	-	KA	L	730		0480	-	1EED	-	3U	-	

Overload Relay	
CT8 - Bimetallic Thermal	
CA8-09 thru CA8-12	
A-C...	CT8 O/L Relay, Class 10, manual or automatic reset
CEP7 - 3rd Gen. Solid State	
CA7-9(E) thru CA7-55(E)	
1E...	CEP7 O/L Relay, Man. Reset, Class 10 or 20
F...	CEP7 O/L Relay, Auto/Manual Reset, Class 10...30

Cover Control	
Non-Reversing	
1Y	Pilot Light Only
3	"Start-Stop" PB
4	"On-Off" PB
5	"Hand-Auto" S/S
6	"Off-On" S/S
17	"Hand-Off-Auto" Illum. S/S
3U	"Start-Stop" Multi-function PB
4U	"I-O" Multi-function PB
9	"Emergency Stop"
0	Reset Only
Reversing	
3U	"For-Stop-Rev" Multi-function
4U	"Up-Stop-Down" Multi-function
5U	"Open-Stop-Close" Multi
6	"For-Off-Rev" S/S
7	"Up-Off-Close" S/S
8	"Open-Off-Close" S/S
0	Reset Only/Plug

Options
For complete listing of Option Codes, refer to each Modification table in the section.

This illustration is for reference only.
Turn to the appropriate page to determine specific catalog number.

① See Section C7 for NEMA labeled KWIKstarter selection pages.
② Enclosure size "L" can also be used as an oversized enclosure on 9...23A starters.

KWIKstarters / Non-Reversing with CT8 Overload Relays ①④

Cover Control/ Enclosure (KS8-COS1/COS4)	Maximum Horsepower						Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	Dimension Code
	Single Ø		Three Ø							
	115V	230V	200V	230V	460V	575V	NO	NC		
KWIKstarter with Start & Raised Stop ④⑥										
 KS8-COS4	0.5	1.5	2	2	5	5	1 ②	0	CL-KA809*-◆-3	Q0
	0.75	2	3	3	7.5	7.5	1 ②	0	CL-KA812*-◆-3	Q0
KWIKstarter with Reset										
 KS8-COS1	0.5	1.5	2	2	5	5	1 ②	0	CL-KA809*-◆-0	Q0
	0.75	2	3	3	7.5	7.5	1 ②	0	CL-KA812*-◆-0	Q0



Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table.

AC Coil Codes (*) ⑤

AC Coil Code	Voltage Range	
	50 Hz	60 Hz
024Z	24V	24V
0120	110V	120V
0480	440V	480V
0600	525V	600V

DC Coil Codes (*) ⑤⑥

DC Coil Code	Voltage
024D	24V

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Replace (◆) with O/L Relay	See this page only
Important Note: KWIKstarters (Q0 dim.) are only designed to accommodate CT8 Thermal Overload Relays.	

Replace ◆ with one if the following Overload Relays

For use with contactor...	Amp Range	Overload Relay Code (◆)	Catalog No. (of overload Relay used)
1 or 3-Phase, Auto/Manual, Class 10			
CA8-09	0.10...016	A16	CT8-A16
	0.16...0.25	A25	CT8-A25
	0.25...0.4	A40	CT8-A40
	0.35...0.5	A50	CT8-A50
	0.45...0.63	A63	CT8-A63
	0.55...0.8	A80	CT8-A80
	0.75...1.0	B10	CT8-B10
	0.90...1.3	B13	CT8-B13
	1.10...1.6	B16	CT8-B16
	1.4...2.0	B20	CT8-B20
	1.8...2.5	B25	CT8-B25
	2.3...3.2	B32	CT8-B32
	2.9...4.0	B40	CT8-B40
	3.5...4.8	B48	CT8-B48
	4.5...6.3	B63	CT8-B63
	5.5...7.5	B75	CT8-B75
CA8-09 or 12	7.2...10	C10	CT8-C10
CA8-12	9.0...12.5	C12	CT8-C12

① KWIKstarters are designed for three-wire control circuits. Two-wire (maintain) control can be accomplished by adding pushbutton latch LA2-KS8-PCA.

② A special design NO auxiliary contact (Cat.# KS8-PCK) is used as the holding circuit interlock, as well as, the START button interface. It is not available for other use.

③ Refer to dimensional information on page C1:12.

④ STOP button also functions as RESET button. Plastic Bezel is standard.

⑤ Other voltages available, see Section A.

⑥ List price adder may apply.

KWIKstarters / Non-Reversing with CEP7 Overload Relays

Cover Control/ Enclosure (KS7-COS1/COS4)	Maximum Horsepower						Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	Dimension Code	
	Single Ø		Three Ø								
	115V	230V	200V	230V	460V	575V	NO	NC	Catalog Number	④	
KWIKstarter with Start & Raised Stop ④⑤											
 KS7-COS4	0.5 ~	1.5 ~	~ 2	~ 2	~ 5	~ 7.5	1 ②	0	CLB-KA709*-◆-3 CL-KA709*-◆-3	Q1	
	0.5 ~	2 ~	~ 3	~ 3	~ 7.5	~ 10	1 ②	0	CLB-KA712*-◆-3 CL-KA712*-◆-3	Q1	
	1 ~	3 ~	~ 5	~ 5	~ 10	~ 15	1 ②	0	CLB-KA716*-◆-3 CL-KA716*-◆-3	Q1	
	2 ~	3 ~	~ 5	~ 7.5	~ 15	~ 15	1 ②	0	CLB-KA723*-◆-3 CL-KA723*-◆-3	Q1	
	KWIKstarter with Reset										
	 KS7-COS1	0.5 ~	1.5 ~	~ 2	~ 2	~ 5	~ 7.5	1	0	CLB-KA709*-◆-0 CL-KA709*-◆-0	Q1
		0.5 ~	2 ~	~ 3	~ 3	~ 7.5	~ 10	1	0	CLB-KA712*-◆-0 CL-KA712*-◆-0	Q1
		1 ~	3 ~	~ 5	~ 5	~ 10	~ 15	1	0	CLB-KA716*-◆-0 CL-KA716*-◆-0	Q1
2 ~		3 ~	~ 5	~ 7.5	~ 15	~ 15	1	0	CLB-KA723*-◆-0 CL-KA723*-◆-0	Q1	

AC Coil Codes (*) ⑥

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-phase	3-phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200V-220V	208V-240V	Common	Common
0277	240V	277V	Common	~
0415	400-415V	~	~	Common
0480	440V	480V	~	Common
0600	550V	600V	~	Common

DC Coil Codes (*) ⑥⑦

DC Coil Codes	Voltage
012E	12V
024E	24V

Replace ◆ with one if the following Overload Relays

For use with KWIKstarter	Amp Range	Overload Relay Code	Catalog No. (of overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CL-KA709...723 CLB-KA709...723	0.1...0.5	1EAB	CEP7-1EEAB
	0.2...1.0	1EBB	CEP7-1EEBB
	1.0...5.0	1ECB	CEP7-1EECB
	3.2...16	1EDB	CEP7-1EEDB
	5.4...27	1EEB	CEP7-1EEEB
1-Phase & 3-Phase / Auto or Manual Reset / Class 10...30 ⑦			
CL-KA709...723 CLB-KA709...723	0.1...0.5	FAB	CEP7-1EFAB
	0.2...1.0	FBB	CEP7-1EFBB
	1.0...5.0	FCB	CEP7-1EFCB
	3.2...16	FDB	CEP7-1EFDB
	5.4...27	FEB	CEP7-1EFEB

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Replace (◆) with O/L Relay	See this page only
Important Note: KWIKstarters (Q1 dim.) are only designed to accommodate CEP7 Solid State Overload Relays.	

- ① KWIKstarters are designed for three-wire control circuits. Two-wire (maintain) control can be accomplished by adding pushbutton latch KS7-PLA.
- ② A special design NO auxiliary contact (Cat.# KS7-PCK) is used as the holding circuit interlock, as well as, the START button interface. It is not available for other use.
- ③ Refer to page C1:15 for dimensional information.
- ④ STOP button also functions as RESET button. Plastic Bezel is standard.
- ⑤ Other voltages available, see Section A.
- ⑥ CA7-9E...23E with electronic coils are not interchangeable with non-electronic DC or AC coils
- ⑦ List price adder may apply.

KWIKstarters / Non-Reversing with CEP7 Overload Relays ①

Cover Control/ Enclosure (KS7-C2S4)	Maximum Horsepower						Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	Dimension Code
	Single Ø		Three Ø							
	115V	230V	200V	230V	460V	575V	NO	NC	Catalog Number	③
	KWIKstarters with Start-Stop Multifunction and Reset									
	2	5	~	~	~	~	1	0	CLB-KAL730*-◆-▼ CL-KAL730*-◆-▼	Q2
	3	5	~	~	~	~	1	0	CLB-KAL737*-◆-▼ CL-KAL737*-◆-▼	Q2
	3	7.5	~	~	~	~	1	0	CLB-KAL743*-◆-▼ CL-KAL743*-◆-▼	Q2
	5	10	~	~	~	~	1	0	CLB-KAL755*-◆-▼ CL-KAL755*-◆-▼	Q2



Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table. Pilot lights are 240 VAC maximum.

AC Coil Codes (*) ②③

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-phase	3-phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200-220V	208-240V	Common	Common
0277	240V	277V	Common	~
0415	400-415V	~	~	Common
0480	440V	480V	~	Common
0600	550V	600V	~	Common

DC Coil Codes (*) ④⑤⑦⑧

D.C. Coil Code	Voltage [DC]
012E	12V
024E	24V

Optional CA7 Modifications (Factory Assembled) ⑥

Description	Add to end of catalog number
Electronic Interface	-JE
Surge Suppressor RC	-C
Surge Suppressor Varistor	-V
Additional NC Contact	-L01
Additional NO Contact	-L10

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See this page only
Replace (◆) with O/L Relay	
Replace (▼) with Pilot Device Option	

Replace ◆ with one of the following Overload Relays

For use with KWIKstarter...	Amp Range	Overload Relay Code (◆)	Catalog No. (of Overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CL-KAL730...55	5.4...27	1EED	CEP7-1EED
CLB-KAL730...55	11...55	1EFD	CEP7-1EFD
1-Phase & 3-Phase / Auto or Manual Reset / Class 10...30 ⑧			
CL-KAL730...55	5.4...27	FED	CEP7-1EFED
CLB-KAL730...55	11...55	FFD	CEP7-1EFFD

Pilot Device Options (includes reset) ⑨

Pushbutton Description	Replace ▼ in catalog number with
START-STOP Multi-function (shown)	3U
I-O Multi-function	4U
OFF-ON 2-Position Selector switch	6
Pilot Light Red (LED) with START-STOP Multi-function ⑧	13U
Pilot Light Red (LED) with I-O Multi-function ⑧	14U

① Use CEP7-1__ overloads only. Also backward compatible to CEP7-ED1/EE.

② Plastic Bezel is standard. Pilot Device options include D7-BX_ Base Mounted contact blocks. See page H6.7 for more information.

③ Refer to page C1.16 for dimensional information.

④ Other voltages available, see Section A.

⑤ One and only one Pilot Device option must be selected. If Pilot Light option is selected then coil voltage must be 24V, 120V or 240V AC only.

⑥ CPT not possible with KS7-C2S4 (Q2) enclosure.

⑦ CA7-9E...23E with electronic coils are not interchangeable with non-electronic DC or AC coils

⑧ List price adder may apply.

KWIKstarters / Non-Reversing with CEP7 Overload Relays and Illuminated H-O-A ①②

Cover Control/ Enclosure	Maximum Horsepower						Total Aux. Contacts Installed ③		cUL Approved- Type 1/12/4/4X IP66	Dim Code
	Single Ø		Three Ø							
	115V	230V	200V	230V	460V	575V	NO	NC	Catalog Number	②
	KWIKstarter with Illuminated H-O-A Selector Switch and Reset									
	0.5	1.5	~	~	~	~	1	0	CLB-KA709*~◆-17	Q1
	~	~	2	2	5	7.5			CL-KA709*~◆-17	
	0.5	2	~	~	~	~	1	0	CLB-KA712*~◆-17	Q1
	~	~	3	3	7.5	10			CL-KA712*~◆-17	
	1	3	~	~	~	~	1	0	CLB-KA716*~◆-17	Q1
	~	~	5	5	10	15			CL-KA716*~◆-17	
2	3	~	~	~	~	1	0	CLB-KA723*~◆-17	Q1	
~	~	5	7.5	15	15			CL-KA723*~◆-17		

Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table.

C1

KWIKstarters

AC Coil Codes (*) ④

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-phase	3-phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200-220V	208-240V	Common	Common

DC Coil Codes (*) ④⑤⑥

D.C. Coil Code	Voltage Range
	VDC
012E	12V
024E	24V

Replace ◆ with one if the following Overload Relays

For use with KWIKstarter	Amp Range	Overload Relay Code	Catalog No. (of overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CL-KA709...723 CLB-KA709...723	0.1...0.5	1EAB	CEP7-1EEAB
	0.2...1.0	1EBB	CEP7-1EEBB
	1.0...5.0	1ECB	CEP7-1EECB
	3.2...16	1EDB	CEP7-1EEDB
	5.4...27	1EEB	CEP7-1EEEB
1-Phase & 3-Phase / Auto or Manual Reset / Class 10...30 ⑥			
CL-KA709...723 CLB-KA709...723	0.1...0.5	FAB	CEP7-1EFAB
	0.2...1.0	FBB	CEP7-1EFBB
	1.0...5.0	FCB	CEP7-1EFCB
	3.2...16	FDB	CEP7-1EFDB
	5.4...27	FEB	CEP7-1EFEB

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code Replace (◆) with O/L Relay	See this page See this page
Important Note: KWIKstarters (Q1 dim.) are only designed to accommodate CEP7 Solid State Overload Relays.	

① This is a factory assembly. The KS7-C0S1 (Q1) enclosure does not include knock-outs for field assembly of this starter.

② Refer to page C1:14 for wiring and dimensional information. This is a clam-shell enclosure design with wires to cover controls.

③ One NO auxiliary for customer use. There is no room for additional auxiliaries.

④ Other voltages available. See Section A.

⑤ CA7-9E...23E with electronic coils are not interchangeable with non-electronic DC or AC coils

⑥ List price adder may apply.

KWIKstarters with CEP7 Overload Relays with I-O Multifunction and E-Stop ①②③④

Cover Control/ Enclosure	Maximum Horsepower						Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	Dim Code
	Single Ø		Three Ø							
	115V	230V	200V	230V	460V	575V	NO	NC	Catalog Number	④
	KWIKstarter with Multifunction I-O Pushbutton, E-Stop and Reset ②									
	0.5	1.5	~	~	~	~	1	0	CLB-KA709*-◆-4U-9 CL-KA709*-◆-4U-9	Q1
	~	~	2	2	5	7.5				
	0.5	2	~	~	~	~	1	0	CLB-KA712*-◆-4U-9 CL-KA712*-◆-4U-9	Q1
	~	~	3	3	7.5	10				
	1	3	~	~	~	~	1	0	CLB-KA716*-◆-4U-9 CL-KA716*-◆-4U-9	Q1
	~	~	5	5	10	15				
	2	3	~	~	~	~	1	0	CLB-KA723*-◆-4U-9 CL-KA723*-◆-4U-9	Q1
	~	~	5	7.5	15	15				

Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table.

AC Coil Codes (*) ①②

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-phase	3-phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200-220V	208-240V	Common	Common
0277	240V	277V	Common	~
0415	400-415V	~	~	Common
0480	440V	480V	~	Common
0600	550V	600V	~	Common

DC Coil Codes (*) ③④⑦⑧

D.C. Coil Code	Voltage [DC]
012E	12V
024E	24V

Replace ◆ with one if the following Overload Relays

For use with KWIKstarter	Amp Range	Overload Relay Code	Catalog No. (of overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CL-KA709...723 CLB-KA709...723	0.1...0.5	1EAB	CEP7-1EEAB
	0.2...1.0	1EBB	CEP7-1EEBB
	1.0...5.0	1ECB	CEP7-1EECB
	3.2...16	1EDB	CEP7-1EEDB
	5.4...27	1EEB	CEP7-1EEEB
1-Phase & 3-Phase / Auto or Manual Reset / Class 10...30 ⑥			
CL-KA709...723 CLB-KA709...723	0.1...0.5	FAB	CEP7-1EFAB
	0.2...1.0	FBB	CEP7-1EFBB
	1.0...5.0	FCB	CEP7-1EFCB
	3.2...16	FDB	CEP7-1EFDB
	5.4...27	FEB	CEP7-1EFEB

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code	See this page
Replace (◆) with O/L Relay	
Important Note: KWIKstarters (Q1 dim.) are only designed to accommodate CEP7 Solid State Overload Relays.	

- ① This is a factory assembly. The KS7-C0S1 (Q1) enclosure does not include knock-outs for field assembly of this starter.
- ② Uses D7P-U2EFFEPX11 Two-Position Multifunction push button with legend I/O.
- ③ Uses D7P-MT44PX01 Emergency Stop Push Button.
- ④ Refer to page C1:14 for wiring and dimensional information. This is a clam-shell enclosure design with wires to cover controls.
- ⑤ There is no room for additional auxiliaries.
- ⑥ List price adder may apply.
- ⑦ CPT not possible with KS7-C2S4 (Q2) enclosure.
- ⑧ CA7-9E...23E with electronic coils are not interchangeable with non-electronic DC or AC coils

KWIKstarters / Reversing with CEP7 Overload Relays

Cover Control/ Enclosure (KS7-COS4R)	Maximum Horsepower						Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	Dimension Code
	Single Ø		Three Ø							
	115V	230V	200V	230V	460V	575V	NO	NC	Catalog Number	③
	FVR KWIKstarter with Multi-function Pushbutton and Reset									
	0.5	1.5	2	2	5	7.5	1①	0	CLU-KAL709*-◆-▼	Q3
	0.5	2	3	3	7.5	10	1①	0	CLU-KAL712*-◆-▼	Q3
	1	3	5	5	10	15	1①	0	CLU-KAL716*-◆-▼	Q3
	2	3	5	7.5	15	15	1①	0	CLU-KAL723*-◆-▼	Q3



C1

KWIKstarters

AC Coil Codes (*) ①②

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-phase	3-phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200-220V	208-240V	Common	Common
0277	240V	277V	Common	~
0415	400-415V	~	~	Common
0480	440V	480V	~	Common
0600	550V	600V	~	Common

DC Coil Codes (*) ③④⑤

D.C. Coil Code	Voltage Range
	VDC
012E	12V
024E	24V

Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table. Pilot lights are 240 VAC maximum.

Replace ◆ with one of the following Overload Relays

For use with KWIKstarter...	Amp Range	Overload Relay Code (◆)	Catalog Number (of Overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CLU-KAL709...723	0.1...0.5	1EAB	CEP7-1EEAB
	0.2...1.0	1EBB	CEP7-1EEBB
	1.0...5.0	1ECB	CEP7-1EECB
	3.2...16	1EDB	CEP7-1EEDB
	5.4...27	1EEB	CEP7-1EEEB
1-Phase & 3-Phase / Auto or Manual Reset / Class 10...30 ③			
CLU-KAL709...723	0.1...0.5	FAB	CEP7-1EFAB
	0.2...1.0	FBB	CEP7-1EFBB
	1.0...5.0	FCB	CEP7-1EFCB
	3.2...16	FDB	CEP7-1EFDB
	5.4...27	FEB	CEP7-1EFEB

Pilot Device Options (includes reset) ⑥⑦

Pushbutton Description	Replace ▼ in catalog number with
FOR-STOP-REV Multi-function (shown)	3U
UP-STOP-DOWN Multi-function	4U
OPEN-STOP-CLOSE Multi-function	5U
FOR-STOP-REV 3-Position Selector switch	6
UP-OFF-DOWN 3-Position Selector switch	7
OPEN-OFF-CLOSE 3-Position Selector switch	8
Overload Alarm Pilot Light	1Y
D7-N8 22mm Hole Plug (Reset Only)	0

Optional CA7 Modifications (Factory Assembled) ⑧

Description (supplied on each contactor)	Add to end of catalog number
Electronic Interface	-2JE
Surge Suppressor RC	-2C
Surge Suppressor Varistor	-2V

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See this page only
Replace (◆) with O/L Relay	
Replace (▼) with Pilot Device Option	

- ① Use CEP7-1... overloads only. Backward compatible to CEP7-ED1/EE.
- ② Plastic Bezel is standard. Pilot Device options include D7-BX_ Base Mounted contact blocks. See page H6.7 for more information.
- ③ Refer to page C1.13 for wiring diagram and C1.16 for dimensional information.
- ④ Other voltages available, see Section A.
- ⑤ One Pilot Device option must be selected. Blanks are not available. If Pilot Light option is selected then coil voltage must be 24V, 120V or 240V AC only.
- ⑥ CPT not possible with KS7-C0S4R (Q3) enclosure.
- ⑦ One N.C. auxiliary contact is used for electrical interlocking. On CLU reversing starters, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat# CM7-02).
- ⑧ List price adder may apply.

KWIKstarter Enclosures with CA8 and CT8 Overload Relays

Component	Description	For Use With		Environmental Approvals	Catalog Number
		Contactors	Overload		
	Flush Green START / Extended Red STOP- Mechanical interface auxiliary contact (KS8-PCK) included in enclosure.	CA8-09...12	CT8	cUL Type 1/12/4/4x IEC IP66	KS8-C0S4
	Blue RESET Only	CA8-09...12	CT8	cUL Type 1/12/4/4x IEC IP66	KS8-C0S1

COMING SOON!

KWIKstarter Enclosures with CA7-9..55 and CEP7 Overload Relays

Component	Description	For Use With		Environmental Approvals	Catalog Number
		Contactors	Overload		
	Flush Green START / Extended Red STOP- Mechanical interface auxiliary contact (KS7-PCK) included in enclosure.	CA7-9...23	CEP7-1...B	cUL Type 1/12/4/4x IEC IP66	KS7-C0S4
				ABS IP66 IEC Only	KS7-A0S4
	Blue RESET Only	CA7-9...23	CEP7-1...B	cUL Type 1/12/4/4x IEC IP66	KS7-C0S1
				ABS IP66 IEC Only	KS7-A0S1
	Enclosure for KWIKstarter ② CL-KAL730...755 CLB-KAL730...755	CA7-30...55 CA7-30E...55E	CEP7-1...D ④	cUL Type 1/12/4/4x IEC IP66	KS7-C2S4
	Enclosure for Reversing KWIKstarter ③ CLU-KAL709...723	CAU7-9...23 CAU7-9E...23E	CEP7-1...B ④	cUL Type 1/12/4/4x IEC IP66	KS7-C0S4R

① KWIKstarters in this dimension are only designed to accommodate CA7-9...23 contactors with CEP7 Solid State Overload Relays. If ordering components, select contactor from Section A and overload relay from Section B in this catalog.


② KWIKstarter enclosure KS7-C2S4 are designed to fit CA7-30(E)...55(E) contactors with CEP7 Overload Relays. CT7N Thermal Overloads can not be substituted.

③ KWIKstarter enclosure KS7-C0S4R are designed to fit CAU7-9(E)...23(E) reversing contactors with CEP7 Overload Relays. CT7N Thermal Overloads can not be substituted.

④ KS7-C2S4 and KS7-C0S4R are supplied with two 22mm holes for Pilot Devices. A Reset is required and one additional pilot device kit from page C1:11 must be selected. Use of a CPT is not possible.

⑤ KS7-C_ Series B enclosures are compatible to 3rd gen CEP7-1 and backwards compatible with 2nd gen CEP7-ED1/EE.

KWIKstarter Components (for use with Start/Stop & Reset _0S1/0S4 Only)

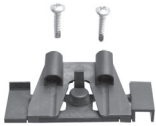Component	Description	For Use With...	Catalog Number
	Start - Contact kit Specially designed NO auxiliary; mechanically interfaces with the START button. Mounts on right side. A KS7-PCK is included in every KS7-C0S4 enclosure.	KS7-C0S4 (Replacement Part)	KS7-PCK
	Pushbutton Latch - For maintain contact control (2-wire control)	KS8-C0S4	LA2-KS8-PCA
		KS7-C0S4 KS7-A0S4	KS7-PLA
	Neutral Terminal	All KWIKstarter Enclosures	KS7-PNT
	Grounding Kit (for use with metal conduit)	KS7-C0S1 KS7-C0S4 enclosures	KS7-GR1

COMING SOON!
C1
KWIKstarters

KWIKstarter Pilot Device Kits (for use with KS7-C2S4 / KS7-C0S4R) ❶


Kits	Description	For Use With Enclosure...	Contact Blocks included		Catalog Number
			NO	NC	
	Multi-Function Pushbutton kit Non-illuminated, plastic START-STOP I-O	KS7-C2S4 Type 1, 12, 4, 4X	1	1	KS7-P3U KS7-P4U
	FOR-STOP-REV UP-STOP-DOWN OPEN-STOP-CLOSE	KS7-C0S4R Type 1, 12, 4, 4X	2	1	KS7-P3U-REV KS7-P4U-REV KS7-P5U-REV
	Selector switch kits: Non-illuminated, plastic, includes legend plate ON-OFF 2-Position	KS7-C2S4 Type 1, 12, 4, 4X	1	-	KS7-P6
	FOR-OFF-REV 3-Position UP-OFF-DOWN 3-Position OPEN-OFF-CLOSE 3-Position	KS7-C0S4R Type 1, 12, 4, 4X	2	-	KS7-P6-REV KS7-P7-REV KS7-P8-REV
	Reset Pushbutton, Blue Plastic push button, flush operator with Blue Cap and R text	KS7-C2S4 KS7-C0S4	Black Plastic with Blue Cap and White "R"		D7P-F611 ❷

❶ Plastic bezel is standard. Pilot Device Kits include D7-BX_ Base Mounted contact blocks. See page H6:7 for more information.

❷ D7P-R611 and CEP7-1ERA can not be used with KS7-C2S4 or KS7-C0S4R. See Section H for more information.

KWIKstarter (in enclosure KS8-C0S1/C0S4)


COMING SOON!

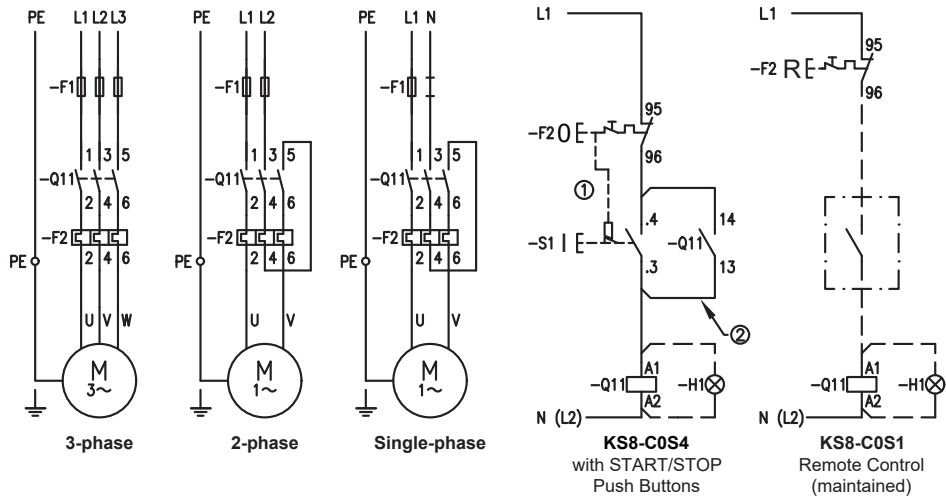

- ① Option mechanical latch LA2-KS8-PLA for maintained control
 ② Not wired when mechanical latch LA2-KS8-PLA is installed

KWIKstarter (in enclosure KS7-C0S1/C0S4 or KS7-A0S1/A0S4)

CUSTOMER MUST PROVIDE PROPER BRANCH CIRCUIT PROTECTION (F1)
 SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
 FOR MAX. FUSE SIZE & CLASS AND APPLICABLE SHORT CIRCUIT RATING
 (USE 75°C COPPER WIRE ONLY)

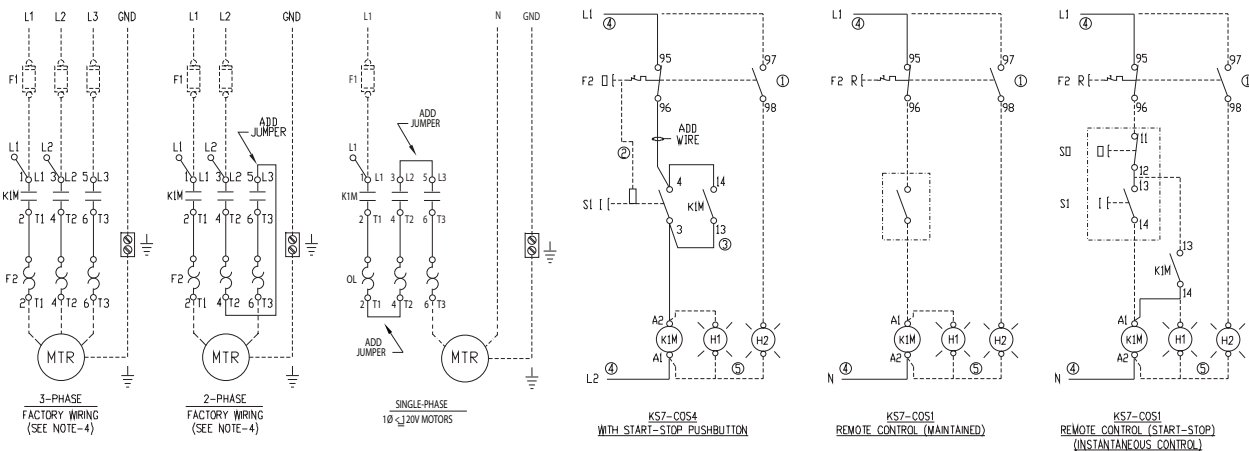


THIS DRAWING IS FOR THE FOLLOWING ENCLOSURES:
 KS7-C0S4 with integrated START-STOP push buttons
 KS7-C0S1 with integrated RESET push button


NOTES:

- 1) MECHANICAL LATCH KS7-PLA FOR MAINTAINED CONTROL (OPTIONAL).
- 2) START CONTACT KIT KS7-PCK (INCLUDED) MOUNTS ON THE RIGHT SIDE WITH MOLDED PRE-FORMED JUMPERS.
- 3) DO NOT WIRE CONTROLS CIRCUIT TO LINE SIDE OF CONTACTOR WHEN COIL VOLTAGE IS 120V OR LESS. (FACTORY WIRING STANDARD)
- 4) OPTIONAL PILOT LIGHTS.

KWIKstarter (in enclosure KS7-C2S4)

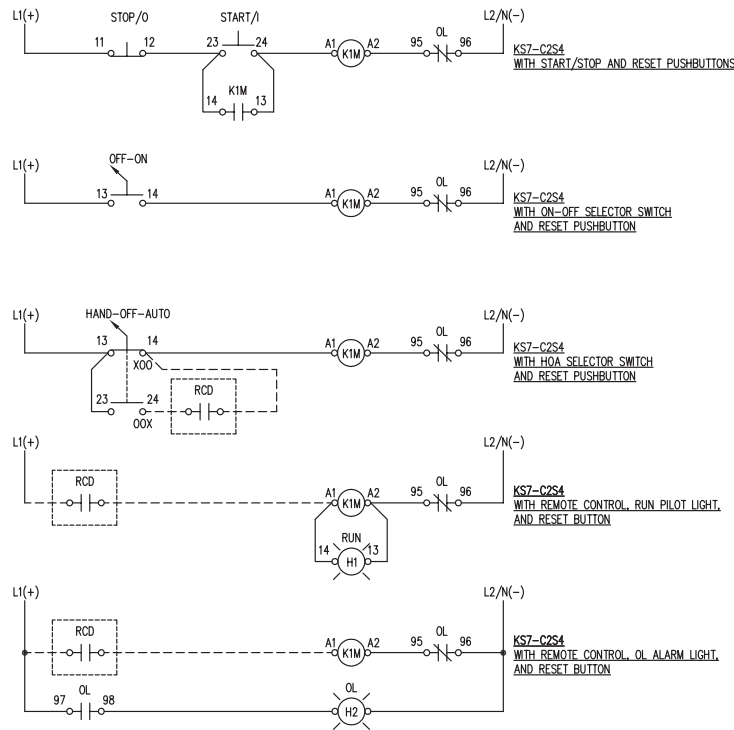


CUSTOMER WILL PROVIDE BRANCH CIRCUIT PROTECTION (F1)
SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
FOR MAX. FUSE SIZE, CLASS, AND APPLICABLE SHORT CIRCUIT RATING
(USE 75°C COPPER WIRE ONLY)

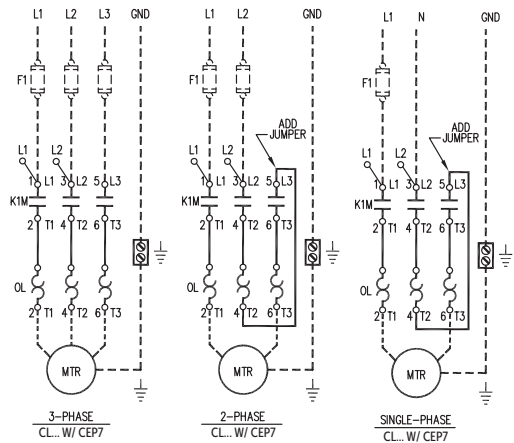

NOTES:


- DO NOT CONNECT A1-A2 TO L1-L2 UNLESS COIL VOLTAGE MATCHES LINE VOLTAGE
- PILOT LIGHTS POSSIBLE FOR REMOTE OR OVERLOAD ALARM IF NO START/STOP CONTROL DEVICES IN COVER
- RCD = REMOTE CONTROL DEVICE (BY OTHERS)

Reversing KWIKstarter (in enclosure KS7-C0S4R)

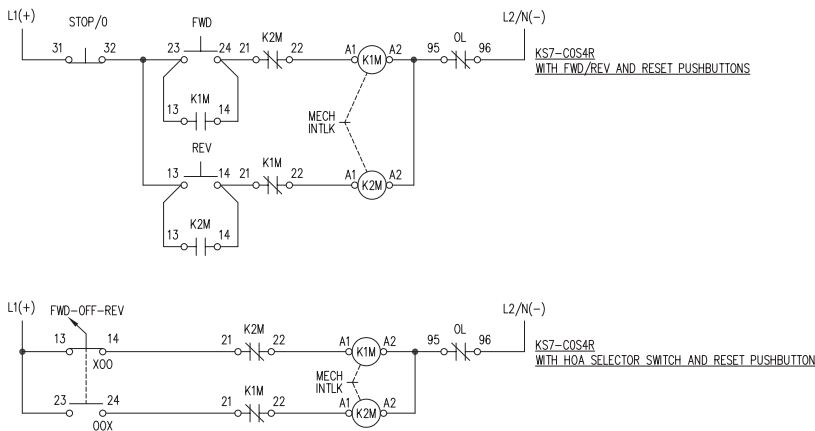



NOTE:
DO NOT CONNECT A1-A2 TO L1-L2 UNLESS COIL VOLTAGE MATCHES LINE VOLTAGE

CUSTOMER WILL PROVIDE BRANCH CIRCUIT PROTECTION (F1)
SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
FOR MAX. FUSE SIZE, CLASS, AND APPLICABLE SHORT CIRCUIT RATING
(USE 75°C COPPER WIRE ONLY)

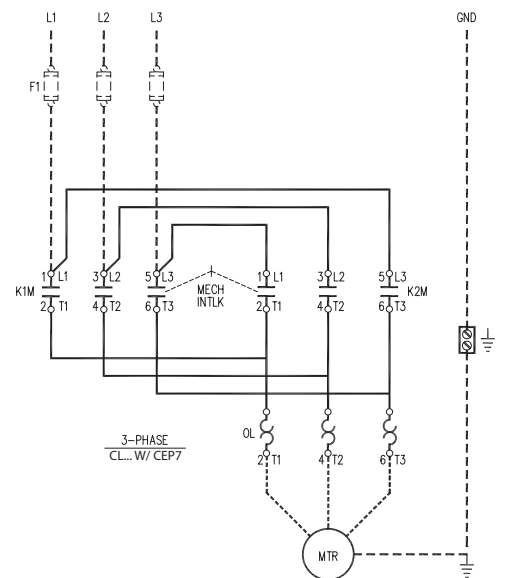

KWIKstarter (in enclosure KS7-C0S1/A0S1) with HOA option

HAND-OFF-AUTO WITH
ILLUMINATED SELECTOR SWITCH

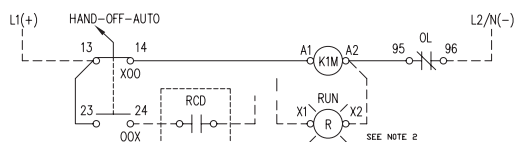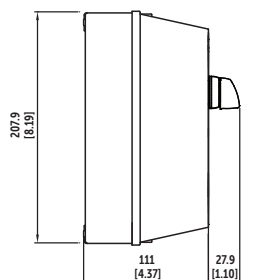


**KS7-C0S1
WITH HOA ILLUMINATED
SELECTOR SWITCH AND
RESET PUSHBUTTON**

SEE NOTE 2

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-Phase	3-Phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200V-220V	208V-240V	Common	Common
D.C. Coil Code	Voltage Range		Control Source	
	VDC		1-Phase	3-Phase
012E	12V		Separate	Separate
024E	24V		Separate	Separate

CUSTOMER WILL PROVIDE BRANCH CIRCUIT PROTECTION (F1)
SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
FOR MAX. FUSE SIZE, CLASS, AND APPLICABLE SHORT CIRCUIT RATING
(USE 75°C COPPER WIRE ONLY)


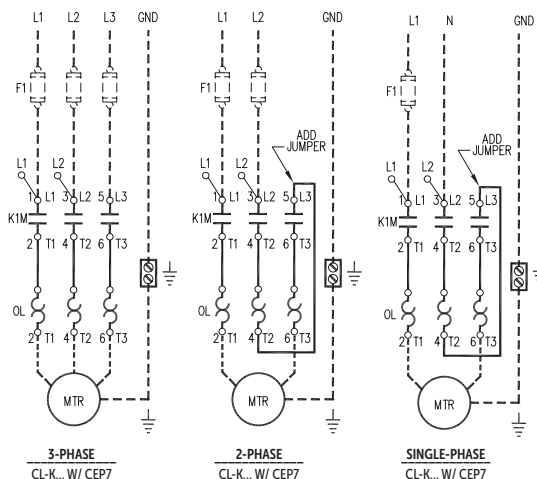


NOTES:

1. RCD = REMOTE CONTROL DEVICE (BY OTHERS). WIRE RCD TO TERMINAL 24 ON THE H-O-A SEL. SW. AND TERMINAL A1 ON THE CONTACTOR.
2. DASHED LINES - - - - - INDICATE WIRING PROVIDED IN THE FIELD.

KWIKstarter (in enclosure KS7-C0S1/A0S1) with Emergency Stop option


EMERGENCY STOP with
MULTI-FUNCTION

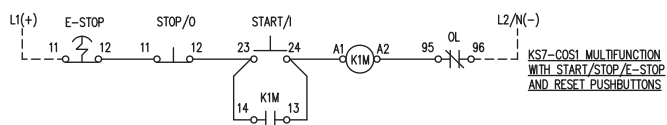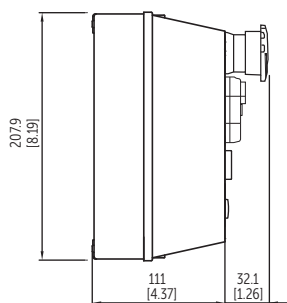

**KS7-C0S1 MULTIFUNCTION
WITH START/STOP/E-STOP
AND RESET PUSHBUTTONS**


A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-Phase	3-Phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200V-220V	208V-240V	Common	Common

CUSTOMER WILL PROVIDE BRANCH CIRCUIT PROTECTION (F1)
SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
FOR MAX. FUSE SIZE, CLASS, AND APPLICABLE SHORT CIRCUIT RATING
(USE 75°C COPPER WIRE ONLY)

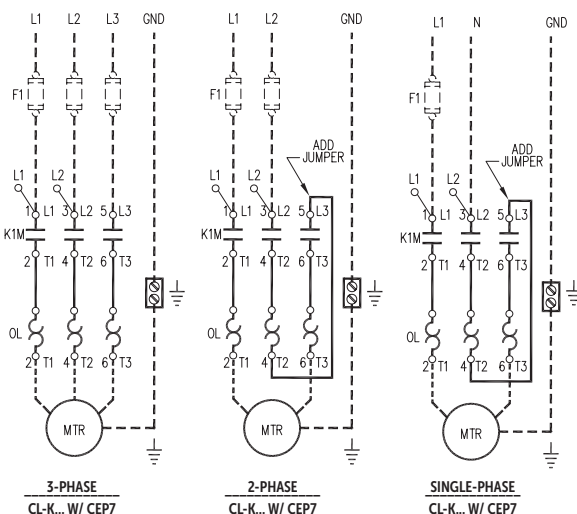


KWIKstarter Enclosure KS8-C0S1/C0S4 (Dimension Code Q0)

Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

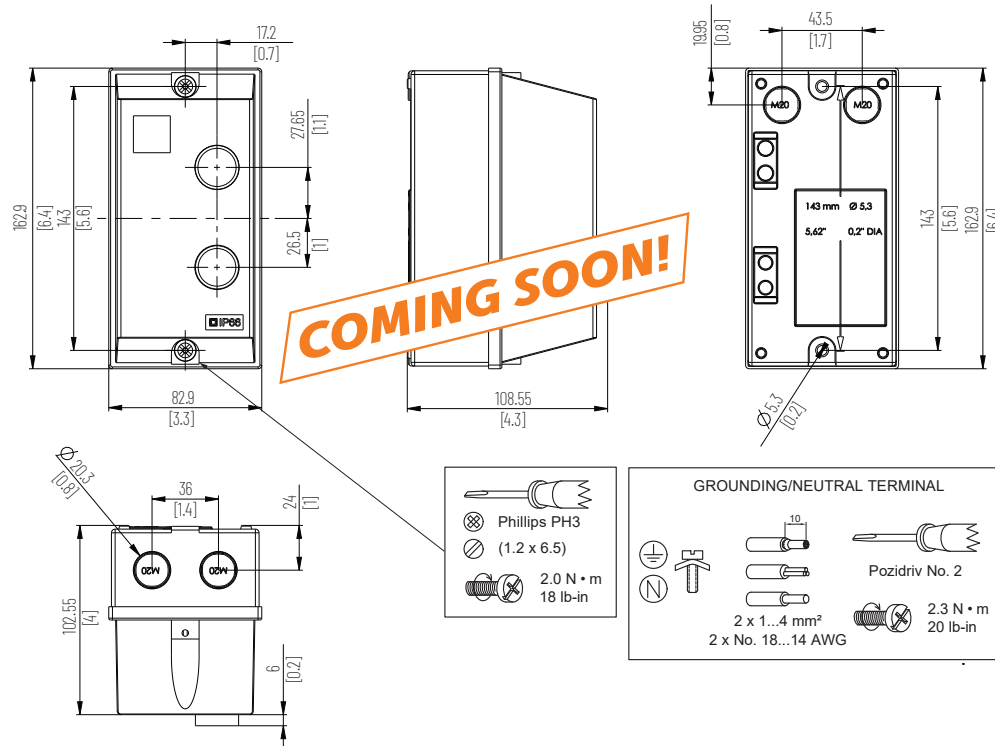


KWIKstarter Enclosure KS7-C0S1/C0S4 or KS7-A0S1/A0S4 (Dimension Code Q1)

Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

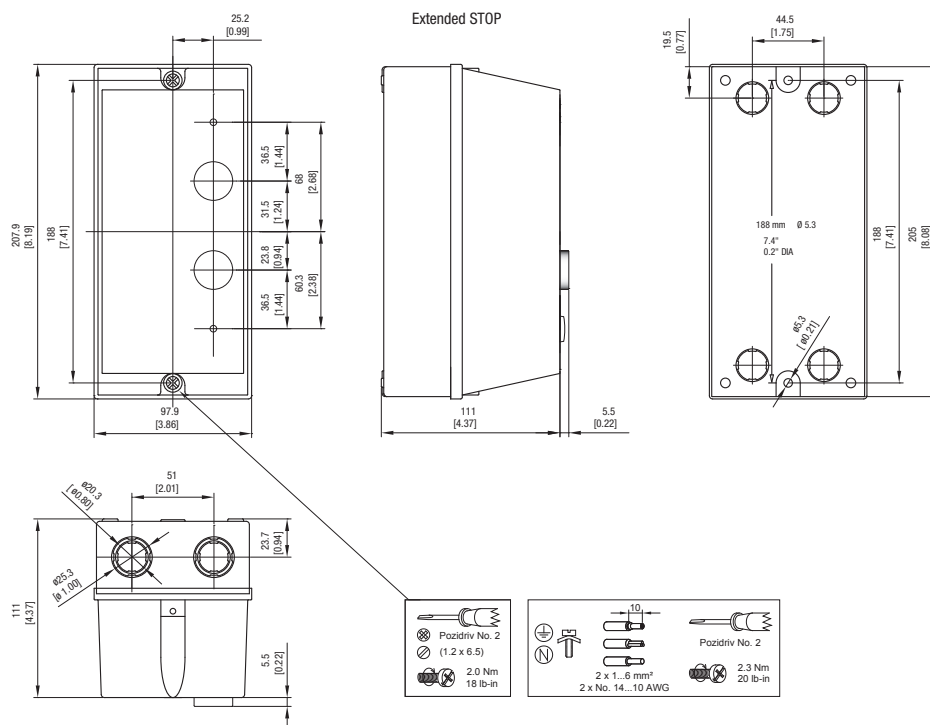


KWIKstarter Enclosure KS7-C2S4 (Dimension Code Q2)

Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

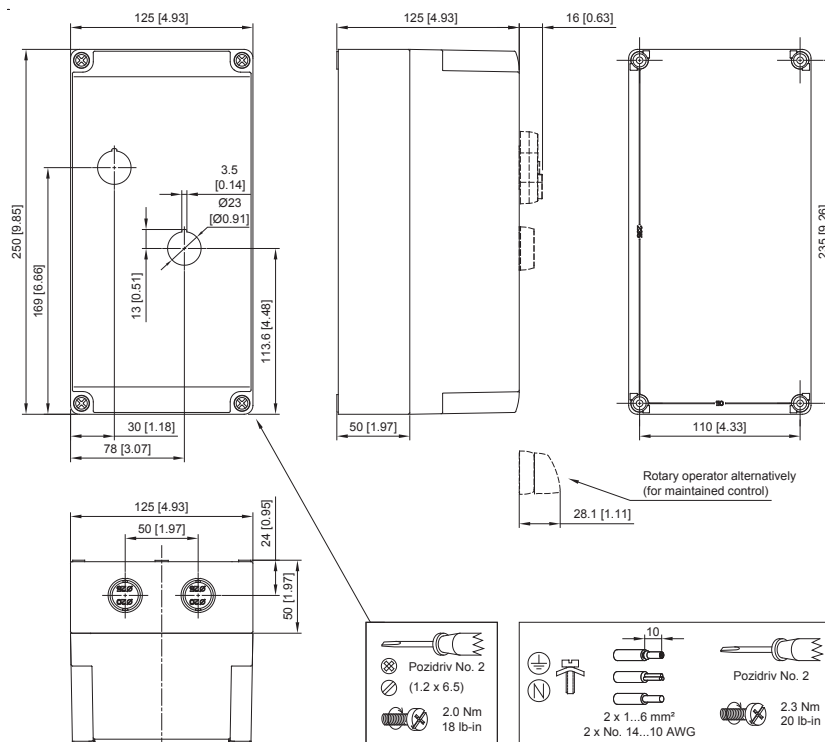**KWIKstarter Enclosure KS7-C0S4R** (*Dimension Code Q3*)

Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

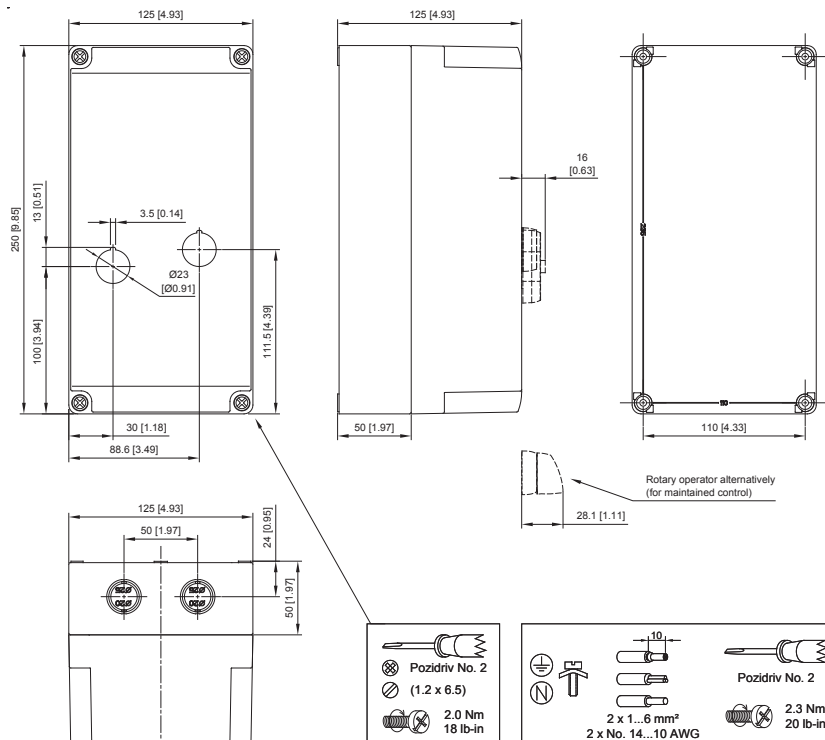

Enclosed Contactors

Sprecher + Schuh's popular contactor lines housed in a variety of enclosures

Sprecher + Schuh's broad line of IEC/UL HP rated contactors can be purchased pre-installed in a variety of standard enclosures. Cataloged enclosures include:

Type 1	General Purpose
Type 12	Industrial Dusttight
Type 3R	Raintight (outdoor)
Type 4	Watertight
Type 4X	Watertight, Corrosion Resistant Non-Metallic

Even though these are the most popular enclosure types for most industrial applications, we can house any contactor in a custom enclosure of your choice.

Quality enclosures ensure the highest confidence



Sprecher + Schuh only sources enclosures from name brand manufacturers, ensuring the highest quality. We primarily use enclosures that meet UL Standards, i.e., Type 1, Type 3R, etc., however, we can also source IEC-type enclosures at your request. Enclosures are sized first to accommodate the depth of the contactor and offer sufficient electrical clearances to satisfy UL.

Add a variety of modifications

If you need a larger enclosure than what is specified in our catalog, your sales representative and our Engineering department will work with you to customize any of our enclosed products to suit your exact specifications. Any combination of enclosure types, sizes, pilot devices, meters and other modifications can be combined to provide exactly the panel you need.



Precisely match the contactor to the application

Unique to IEC-style contactors is the ability to select the exact device required for a specific application. By identifying the conditions under which the contactor will be used, i.e., resistive loads, reversing, inching and plugging, etc., published "life-curve" data predicts contact life in millions of operations. This information enables you to select the precise contactor for your application... without buying too much or too little. Refer to Section A in this catalog for detailed technical information on all Sprecher + Schuh contactors.

Other unique features...

Virtually all Sprecher+Schuh contactors offer one or more of the latest design techniques and innovations, such as electronically controlled coils, field installable auxiliary contacts or universal accessories across the entire contactor family.



Type 1



Type 3R



Type 4



Type 4X

C2

Enclosed Contactors

Three Phase, Non-Reversing CA7 & CA9

Continuous Amp Rating - UL/CSA -	Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ③		Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M
	Enclosed	200V	230V	460V	575V	NO	NC	Catalog Number	①	Catalog Number
25	2	2	5	7.5	1	0	CA7-9-*-G0	A	CA7-9-*-D0	L
25	3	3	7.5	10	1	0	CA7-12-*-G0	A	CA7-12-*-D0	L
30	5	5	10	15	1	0	CA7-16-*-G0	A	CA7-16-*-D0	L
30	5	7.5	15	15	1	0	CA7-23-*-G0	A	CA7-23-*-D0	L
55	7.5	10	20	25	1	0	CA7-30-*-G0	A	CA7-30-*-D0	L
60	10	10	25	30	1	0	CA7-37-*-G0	A	CA7-37-*-D0	L
75	10	15	30	30	1	0	CA7-43-*-G0	A	CA7-43-*-D0	L
75	15	20	40	40	1	0	CA7-55-*-G0	A	CA7-55-*-D0	L
90	15	20	40	50	1	0	CA7-60-*-G0	B	CA7-60-*-D0	M
90	20	25	50	60	1	0	CA7-72-*-G0	B	CA7-72-*-D0	M
100	25	30	60	60	1	0	CA7-85-*-G0	B	CA7-85-*-D0	M
120	30	30	75	75	1	0	CA7-97-*-G0	B	CA7-97-*-D0	O
116	30	40	75	100	1	1	CA9-116-*-G0 ④	E	CA9-116-*-D0 ④	Q
146	40	50	100	125	1	1	CA9-146-*-G0 ④	E	CA9-146-*-D0 ④	Q
190	50	60	125	150	1	1	CA9-190-*-G0 ④	E	CA9-190-*-D0 ④	R
205	60	75	150	200	1	1	CA9-205-*-G0 ④	F	CA9-205-*-D0 ④	T
265	75	100	200	250	1	1	CA9-265-*-G0 ④	F	CA9-265-*-D0 ④	T
305	100	125	250	300	1	1	CA9-305-*-G0 ④	H	CA9-305-*-D0 ④	H
370	125	150	300	350	1	1	CA9-370-*-G0 ④	H	CA9-370-*-D0 ④	H
400	125	150	350	400	1	1	CA9-400-EI-*-G0	R/F	CA9-400-EI-*-D0	R/F
460	150	200	400	500	1	1	CA9-460-EI-*-G0	R/F	CA9-460-EI-*-D0	R/F
480	200	250	500	600	1	1	CA9-580-EI-*-G0	R/F	CA9-580-EI-*-D0	R/F
750	250	300	600	700	1	1	CA9-750-EI-*-G0	R/F	CA9-750-EI-*-D0	R/F
860	~	400	800	1000	1	1	CA9-860-EI-*-G0	R/F	CA9-860-EI-*-D0	R/F
1060	~	450	900	1150	1	1	CA9-1060-EI-*-G0	R/F	CA9-1060-EI-*-D0	R/F

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Factory Modifications available	Refer to page C8:3 Refer to pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example catalog number CA7-23-*-D0 becomes CA7-23-*-R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ④ CA9-116...CA9-370 contactors are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CA9-116-*-G0 becomes CA9-116-EI-*-G0. Price adder applies.

Three Phase, Non-Reversing CA7 & CA9

Continuous Amp Rating - UL/CSA -	Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ②		Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
	Enclosed	200V	230V	460V	575V	NO				
							Catalog Number	①	Catalog Number	①
25	2	2	5	7.5	1	0	CA7-9-**-W0	N	CA7-9-**-C0	S1
25	3	3	7.5	10	1	0	CA7-12-**-W0	N	CA7-12-**-C0	S1
30	5	5	10	15	1	0	CA7-16-**-W0	N	CA7-16-**-C0	S1
30	5	7.5	15	15	1	0	CA7-23-**-W0	N	CA7-23-**-C0	S1
55	7.5	10	20	25	1	0	CA7-30-**-W0	N	CA7-30-**-C0	S1
60	10	10	25	30	1	0	CA7-37-**-W0	N	CA7-37-**-C0	S1
75	10	15	30	30	1	0	CA7-43-**-W0	N	CA7-43-**-C0	S1
75	15	20	40	40	1	0	CA7-55-**-W0	N	CA7-55-**-C0	S1
90	15	20	40	50	1	0	CA7-60-**-W0	O	CA7-60-**-C0	U1
90	20	25	50	60	1	0	CA7-72-**-W0	O	CA7-72-**-C0	U1
100	25	30	60	60	1	0	CA7-85-**-W0	O	CA7-85-**-C0	U1
120	30	30	75	75	1	0	CA7-97-**-W0	O	CA7-97-**-C0	U1
116	30	40	75	100	1	1	CA9-116-**-W0 ④	Q	CA9-116-**-C0 ④	W2
146	40	50	100	125	1	1	CA9-146-**-W0 ④	Q	CA9-146-**-C0 ④	W2
190	50	60	125	150	1	1	CA9-190-**-W0 ④	R	CA9-190-**-C0 ④	X1
205	60	75	150	200	1	1	CA9-205-**-W0 ④	T	CA9-205-**-C0 ④	X1
265	75	100	200	250	1	1	CA9-265-**-W0 ④	T	CA9-265-**-C0 ④	X1
305	100	125	250	300	1	1	CA9-305-**-W0 ④	H	CA9-305-**-C0 ④	Y1
370	125	150	300	350	1	1	CA9-370-**-W0 ④	H	CA9-370-**-C0 ④	Y1
400	125	150	350	400	1	1	CA9-400-EI-**-W0	R/F	CA9-400-EI-**-C0	R/F
460	150	200	400	500	1	1	CA9-460-EI-**-W0	R/F	CA9-460-EI-**-C0	R/F
480	200	250	500	600	1	1	CA9-580-EI-**-W0	R/F	CA9-580-EI-**-C0	R/F
750	250	300	600	700	1	1	CA9-750-EI-**-W0	R/F	CA9-750-EI-**-C0	R/F
860	~	400	800	1000	1	1	CA9-860-EI-**-W0	R/F	CA9-860-EI-**-C0	R/F
1060	~	450	900	1150	1	1	CA9-1060-EI-**-W0	R/F	CA9-1060-EI-**-C0	R/F

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Factory Modifications available	Refer to page C8:3 Refer to pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ③ CA9-116...CA9-370 contactors are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CA9-116-**-W0 becomes CA9-116-EI-**-W0. Price adder applies.

Three Phase, Reversing CAU7 & CAU9

Continuous Amp Rating - UL/CSA -	Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ④		Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M
	Enclosed	200V	230V	460V	575V	NO	NC ④	Catalog Number	①	Catalog Number
25	2	2	5	7.5	1	1	CAU7-9-**-G0	A	CAU7-9-**-D0	M
25	3	3	7.5	10	1	1	CAU7-12-**-G0	A	CAU7-12-**-D0	M
30	5	5	10	15	1	1	CAU7-16-**-G0	A	CAU7-16-**-D0	M
30	5	7.5	15	15	1	1	CAU7-23-**-G0	A	CAU7-23-**-D0	M
55	7.5	10	20	25	1	1	CAU7-30-**-G0	A	CAU7-30-**-D0	M
60	10	10	25	30	1	1	CAU7-37-**-G0	A	CAU7-37-**-D0	M
75	10	15	30	30	1	1	CAU7-43-**-G0	B	CAU7-43-**-D0	M
75	15	20	40	40	1	1	CAU7-55-**-G0	B	CAU7-55-**-D0	M
90	15	20	40	50	1	1	CAU7-60-**-G0	C	CAU7-60-**-D0	O
90	20	25	50	60	1	1	CAU7-72-**-G0	C	CAU7-72-**-D0	O
100	25	30	60	60	1	1	CAU7-85-**-G0	C	CAU7-85-**-D0	O
120	30	30	75	75	1	1	CAU7-97-**-G0	C	CAU7-97-**-D0	O
116	30	40	75	100	1	1	CAU9-116-**-G0 ⑤	E	CAU9-116-**-D0 ⑤	Q
146	40	50	100	125	1	1	CAU9-146-**-G0 ⑤	E	CAU9-146-**-D0 ⑤	Q
190	50	60	125	150	1	1	CAU9-190-**-G0 ⑤	E	CAU9-190-**-D0 ⑤	R
205	60	75	150	200	1	1	CAU9-205-**-G0 ⑤	F	CAU9-205-**-D0 ⑤	T
265	75	100	200	250	1	1	CAU9-265-**-G0 ⑤	F	CAU9-265-**-D0 ⑤	T
305	100	125	250	300	1	1	CAU9-305-**-G0 ⑤	H	CAU9-305-**-D0 ⑤	H
370	125	150	300	350	1	1	CAU9-370-**-G0 ⑤	H	CAU9-370-**-D0 ⑤	H
400	125	150	350	400	1	1	CAU9-400-EI-**-G0	R/F	CAU9-400-EI-**-D0	R/F
460	150	200	400	500	1	1	CAU9-460-EI-**-G0	R/F	CAU9-460-EI-**-D0	R/F
480	200	250	500	600	1	1	CAU9-580-EI-**-G0	R/F	CAU9-580-EI-**-D0	R/F
750	250	300	600	700	1	1	CAU9-750-EI-**-G0	R/F	CAU9-750-EI-**-D0	R/F
860	~	400	800	1000	1	1	CAU9-860-EI-**-G0	R/F	CAU9-860-EI-**-D0	R/F
1060	~	450	900	1150	1	1	CAU9-1060-EI-**-G0	R/F	CAU9-1060-EI-**-D0	R/F

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Factory Modifications available	Refer to page C8:3 Refer to pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example catalog number CAU7-23-*-D0 becomes CAU7-23-*-R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ④ One N.C. auxiliary contact is used for electrical interlocking. On CAU7 reversing contactors, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat # CM7-02).
- ⑤ CAU9-116...CAU9-370 contactors are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAU9-116-*-G0 becomes CAU9-116-EI-*-G0. Price adder applies.

Three Phase, Reversing CAU7 & CAU9

Continuous Amp Rating - UL/CSA -	Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ❷		Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
	Enclosed	200V	230V	460V	575V	NO				
25	2	2	5	7.5	1	1	CAU7-9-**-W0	N	CAU7-9-**-C0	U1
25	3	3	7.5	10	1	1	CAU7-12-**-W0	N	CAU7-12-**-C0	U1
30	5	5	10	15	1	1	CAU7-16-**-W0	N	CAU7-16-**-C0	U1
30	5	7.5	15	15	1	1	CAU7-23-**-W0	N	CAU7-23-**-C0	U1
55	7.5	10	20	25	1	1	CAU7-30-**-W0	N	CAU7-30-**-C0	U1
60	10	10	25	30	1	1	CAU7-37-**-W0	N	CAU7-37-**-C0	U1
75	10	15	30	30	1	1	CAU7-43-**-W0	N	CAU7-43-**-C0	U1
75	15	20	40	40	1	1	CAU7-55-**-W0	N	CAU7-55-**-C0	U1
90	15	20	40	50	1	1	CAU7-60-**-W0	O	CAU7-60-**-C0	V1
90	20	25	50	60	1	1	CAU7-72-**-W0	O	CAU7-72-**-C0	V1
100	25	30	60	60	1	1	CAU7-85-**-W0	O	CAU7-85-**-C0	V1
120	30	30	75	75	1	1	CAU7-97-**-W0	O	CAU7-97-**-C0	V1
116	30	40	75	100	1	1	CAU9-116-**-W0 ❹	Q	CAU9-116-**-C0 ❹	W2
146	40	50	100	125	1	1	CAU9-146-**-W0 ❹	Q	CAU9-146-**-C0 ❹	W2
190	50	60	125	150	1	1	CAU9-190-**-W0 ❹	R	CAU9-190-**-C0 ❹	X1
205	60	75	150	200	1	1	CAU9-205-**-W0 ❹	T	CAU9-205-**-C0 ❹	X1
265	75	100	200	250	1	1	CAU9-265-**-W0 ❹	T	CAU9-265-**-C0 ❹	X1
305	100	125	250	300	1	1	CAU9-305-**-W0 ❹	H	CAU9-305-**-C0 ❹	Y1
370	125	150	300	350	1	1	CAU9-370-**-W0 ❹	H	CAU9-370-**-C0 ❹	Y1
400	125	150	350	400	1	1	CAU9-400-EI-**-W0	R/F	CAU9-400-EI-**-C0	R/F
460	150	200	400	500	1	1	CAU9-460-EI-**-W0	R/F	CAU9-460-EI-**-C0	R/F
480	200	250	500	600	1	1	CAU9-580-EI-**-W0	R/F	CAU9-580-EI-**-C0	R/F
750	250	300	600	700	1	1	CAU9-750-EI-**-W0	R/F	CAU9-750-EI-**-C0	R/F
860	~	400	800	1000	1	1	CAU9-860-EI-**-W0	R/F	CAU9-860-EI-**-C0	R/F
1060	~	450	900	1150	1	1	CAU9-1060-EI-**-W0	R/F	CAU9-1060-EI-**-C0	R/F

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Factory Modifications available	Refer to page C8:3 Refer to pages C8:6-C8:10

- ❶ Dimensional information starts on page C8:23.
- ❷ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ❸ One N.C. auxiliary contact is used for electrical interlocking. On CAU7 reversing contactors, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat # CM7-02).
- ❹ CAU9-116...CAU9-370 contactors are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAU9-116-* -W0 becomes CAU9-116-EI-* -W0. Price adder applies.

Single Phase, Non-Reversing CB7

Continuous Amp Rating - UL/CSA -	Maximum Horsepower Single Ø		Auxiliary Contacts per Contactor ③		Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
Enclosed	115V	230V	NO	NC	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CB7-		CB7-		CB7-		CB7-	
25	1/2	1 1/2	1	0	9-*-G0	A	9-*-D0	L	9-*-W0	N	9-*-C0	S1
25	1/2	2	1	0	12-*-G0	A	12-*-D0	L	12-*-W0	N	12-*-C0	S1
30	1	3	1	0	16-*-G0	A	16-*-D0	L	16-*-W0	N	16-*-C0	S1
30	2	3	1	0	23-*-G0	A	23-*-D0	L	23-*-W0	N	23-*-C0	S1
55	2	5	1	0	30-*-G0	A	30-*-D0	L	30-*-W0	N	30-*-C0	S1
60	3	5	1	0	37-*-G0	A	37-*-D0	L	37-*-W0	N	37-*-C0	S1
75	3	7 1/2	1	0	43-*-G0	A	43-*-D0	L	43-*-W0	N	43-*-C0	S1
75	5	10	1	0	55-*-G0	A	55-*-D0	L	55-*-W0	N	55-*-C0	S1
90	5	10	1	0	60-*-G0	B	60-*-D0	M	60-*-W0	O	60-*-C0	U1
90	5	15	1	0	72-*-G0	B	72-*-D0	M	72-*-W0	O	72-*-C0	U1
100	7 1/2	15	1	0	85-*-G0	B	85-*-D0	M	85-*-W0	O	85-*-C0	U1

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Factory Modifications available	Refer to page C8:3 Refer to pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example catalog number CB7-23-*-D0 becomes CB7-23-*-R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.

Single Phase, Reversing CBUR7 (Reconnectable Winding - Three Lead Motor)

Continuous Amp Rating - UL/CSA -	Maximum Horsepower Single Ø		Auxiliary Contacts per Contactor ②		Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
Enclosed	115V	230V	NO	NC ④	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CBUR		CBUR		CBUR		CBUR	
25	1/2	1 1/2	1	1	7-9-*-G0	A	7-9-*-D0	M	7-9-*-W0	N	7-9-*-C0	U1
25	1/2	2	1	1	7-12-*-G0	A	7-12-*-D0	M	7-12-*-W0	N	7-12-*-C0	U1
30	1	3	1	1	7-16-*-G	A	7-16-*-D0	M	7-16-*-W0	N	7-16-*-C0	U1
30	2	3	1	1	7-23-*-G	A	7-23-*-D0	M	7-23-*-W0	N	7-23-*-C0	U1
55	2	5	1	1	7-30-*-G0	A	7-30-*-D0	M	7-30-*-W0	N	7-30-*-C0	U1

Single Phase, Reversing CBUS7 (Series Winding - Four Lead Repulsion Induction Motor)

Continuous Amp Rating - UL/CSA -	Maximum Horsepower Single Ø		Auxiliary Contacts per Contactor ②		Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
Enclosed	115V	230V	NO	NC ④	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CBUS		CBUS		CBUS		CBUS	
25	1/2	1 1/2	1	1	7-9-*-G0	A	7-9-*-D0	M	7-9-*-W0	N	7-9-*-C0	U1
25	1/2	2	1	1	7-12-*-G0	A	7-12-*-D0	M	7-12-*-W0	N	7-12-*-C0	U1
30	1	3	1	1	7-16-*-G0	A	7-16-*-D0	M	7-16-*-W0	N	7-16-*-C0	U1
30	2	3	1	1	7-23-*-G0	A	7-23-*-D0	M	7-23-*-W0	N	7-23-*-C0	U1
55	2	5	1	1	7-30-*-G0	A	7-30-*-D0	M	7-30-*-W0	N	7-30-*-C0	U1

Single Phase, Reversing CBUP7 (Parallel Winding - Four Lead Capacitor or Split Phase Motor)

Continuous Amp Rating - UL/CSA -	Maximum Horsepower Single Ø		Auxiliary Contacts per Contactor ②		Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
Enclosed	115V	230V	NO	NC ④	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CBUP		CBUP		CBUP		CBUP	
25	1/2	1 1/2	1	1	7-9-*-G0	A	7-9-*-D0	M	7-9-*-W0	N	7-9-*-C0	U1
25	1/2	2	1	1	7-12-*-G0	A	7-12-*-D0	M	7-12-*-W0	N	7-12-*-C0	U1
30	1	3	1	1	7-16-*-G0	A	7-16-*-D0	M	7-16-*-W0	N	7-16-*-C0	U1
30	2	3	1	1	7-23-*-G0	A	7-23-*-D0	M	7-23-*-W0	N	7-23-*-C0	U1
55	2	5	1	1	7-30-*-G0	A	7-30-*-D0	M	7-30-*-W0	N	7-30-*-C0	U1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	Refer to page C8:3
Factory Modifications available	Refer to pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CBUx7-23-*-D0 becomes CBUx7-23-*-R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ④ One N.C. auxiliary contact is used for electrical interlocking. On CBU reversing contactors, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat # CM7-02).

Electrically Held with AC Coil

Continuous Ampere Rating ③	Number of Poles	Standard Auxiliary Contacts ⑤		Type 1 General Purpose Catalog Number	D I M ④	Type 12 [Type 3R ⑥] Industrial Dusttight Catalog Number	D I M ④
		NO	NC				
See page A2:18	4	0	0	CAL7-20-M40-*G0	A	CAL7-20-M40-*D0	L
	4	0	0	CAL7-30-M40-*G0	A	CAL7-30-M40-*D0	L
	4	0	0	CAL7-60-M40-*G0	B	CAL7-60-M40-*D0	M

Description

The CAL7 electrically held contactors and CAVL7 mechanical held contactors are cUL rated and labeled for tungsten and ballast lighting duty applications at 20, 30, and 60 amperes respectively.

Mechanically Held with AC Coil ①


Continuous Ampere Rating ③	Number of Poles	Standard Auxiliary Contacts ⑤		Type 1 General Purpose Catalog Number	D I M ④	Type 12 [Type 3R ⑥] Industrial Dusttight Catalog Number	D I M ④
		NO	NC				
See page A2:18	4	0	0	CAVL7-20-M40-*G0	R/F	CAVL7-20-M40-*D0	R/F
	4	0	0	CAVL7-30-M40-*G0	R/F	CAVL7-30-M40-*D0	R/F
	4	0	0	CAVL7-60-M40-*G0	R/F	CAVL7-60-M40-*D0	R/F

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Operation of Mechanically Held Contactor with "ON-OFF" Pushbutton

Catalog number "CAVL7" consists of a CAL7 contactor with CV7-11 mechanical latch. Depressing the "ON" button energizes the "L" coil and the contactor closes. The mechanical latch locks the contactor in the closed position. The "L" coil is then de-energized by the coil, clearing contact "UL" (Terminals 65-66) to remove voltage. Depressing the "OFF" button energizes the "UL" coil, and the mechanical latch releases the contactor. The "UL" coil is immediately de-energized by the coil clearing contact "L" (Terminals 13-14) to remove voltage. The contactor is now open.

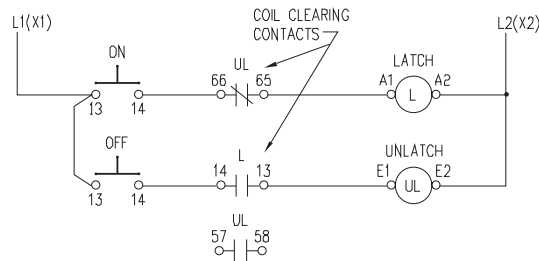

Ordering Instructions

Specify Catalog Number	Refer to page C8:3
Replace (*) with Coil Code	Refer to pages C8:6-C8:10
Factory Modifications available	

- ① The N.O. auxiliary is used to mechanically latch the control circuit and is not available for use by customer for other uses.
- ② Engineering practice permits 2.5 x Ie to be applied to a contactor when 3 poles are connected in parallel for single phase discharge lamp (ballast lighting) applications. Example: A CAL7-20-M40-* Lighting Contactor plus a CA7-P-B23 Paralleling Link can be used on a 50A ballast load. Applying parallel conductors to incandescent lamp loads does NOT result in a greater permissible load. Paralleling Links can be found in the Accessories section.
- ③ Dimensional information starts on page C8:23.
- ④ Contactors are equipped with number and type of auxiliaries indicated. See C8:7 to order additional or different auxiliary contacts.
- ⑤ For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example: CAL7-20-M40-*D0 becomes CAL7-20-M40-*R0. Price remains the same.

Open and Enclosed Non-Combination Motor Starters

Built to your
specifications and ready
to install

Sprecher + Schuh magnetic motor starters are intended to eliminate the purchase and assembly of a separate contactor, overload relay and associated wiring. When purchased with an enclosure, the starters are mounted and ready to install on receipt.

Starting with the best

At the heart of all magnetic starters is the Sprecher + Schuh CAT7 and CAT9 line of motor starters. These starters are compact and offer intermediate sizes to better match specific motor requirements. This equates to generous wiring space and less wasted horsepower capacity.

Top line protection...

Magnetic starters are equipped with Sprecher + Schuh's premium CEP7 solid state overload relay standard. Unlike traditional overload relays that indirectly sense motor current through heater elements, CEP7 solid state overload relays measure motor current directly through integrated current transformers and on board electronics. The electronics provide numerous advantages over electromechanical relays. Alternatively, the CT7N Thermal Overload Relay may also be selected.



Type 1

Type 3R



Type 4

Type 4X

The right enclosure... whatever the application

Sprecher + Schuh's broad line of IEC style starters can be purchased pre-installed in a variety of standard enclosures. Cataloged enclosures include:

Type 1	General Purpose
Type 12	Industrial Dusttight
Type 3R	Raintight (outdoor)
Type 4	Watertight
Type 4X	Watertight, Corrosion Resistant



Even though these are the most popular enclosure types for most industrial applications, we can house any starter in a custom enclosure of your choosing.

Quality enclosures ensure the highest confidence

Sprecher + Schuh only sources enclosures from name brand manufacturers, ensuring the highest quality. We primarily use enclosures that meet UL Standards, i.e., Type 1, Type 3R, etc., however, we can also source IEC-type enclosures at your request. Enclosures are sized first to accommodate the depth of the contactor and offer sufficient electrical clearances to satisfy UL.

Add a variety of modifications

If you need a larger enclosure than what is specified in our catalog, your sales representative and our Engineering department will work with you to customize any of our enclosed products to suit your exact specifications. Any combination of enclosure types, sizes, pilot devices, meters and other modifications can be combined to provide exactly the panel you need.

C3

Non-Combination Starters

Three Phase, Non-Reversing CAT7 & CAT9

Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ③		Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M
200V	230V	460V	575V	NO	NC	Catalog No.	Catalog No.	①	Catalog No.	①
2	2	5	7 1/2	1	0	CAT7-9-*-*◆	CAT7-9-*-*◆-G0	A	CAT7-9-*-*◆-D0	L
3	3	7 1/2	10	1	0	CAT7-12-*-*◆	CAT7-12-*-*◆-G0	A	CAT7-12-*-*◆-D0	L
5	5	10	15	1	0	CAT7-16-*-*◆	CAT7-16-*-*◆-G0	A	CAT7-16-*-*◆-D0	L
5	7 1/2	15	15	1	0	CAT7-23-*-*◆	CAT7-23-*-*◆-G0	A	CAT7-23-*-*◆-D0	L
7 1/2	10	20	25	1	0	CAT7-30-*-*◆	CAT7-30-*-*◆-G0	A	CAT7-30-*-*◆-D0	L
10	10	25	30	1	0	CAT7-37-*-*◆	CAT7-37-*-*◆-G0	A	CAT7-37-*-*◆-D0	L
10	15	30	30	1	0	CAT7-43-*-*◆	CAT7-43-*-*◆-G0	A	CAT7-43-*-*◆-D0	M
15	20	40	40	1	0	CAT7-55-*-*◆	CAT7-55-*-*◆-G0	A	CAT7-55-*-*◆-D0	M
15	20	40	50	1	0	CAT7-60-*-*◆	CAT7-60-*-*◆-G0	B	CAT7-60-*-*◆-D0	O
20	25	50	60	1	0	CAT7-72-*-*◆	CAT7-72-*-*◆-G0	B	CAT7-72-*-*◆-D0	O
25	30	60	60	1	0	CAT7-85-*-*◆	CAT7-85-*-*◆-G0	B	CAT7-85-*-*◆-D0	O
30	30	75	75	1	0	CAT7-97-*-*◆	CAT7-97-*-*◆-G0	O	CAT7-97-*-*◆-D0	O
30	40	75	100	1	1	CAT9-116-*-*◆④	CAT9-116-*-*◆-G0④	E2	CAT9-116-*-*◆-D0④	R2
40	50	100	125	1	1	CAT9-146-*-*◆④	CAT9-146-*-*◆-G0④	G	CAT9-146-*-*◆-D0④	T
50	60	125	150	1	1	CAT9-190-*-*◆④	CAT9-190-*-*◆-G0④	G	CAT9-190-*-*◆-D0④	T
60	75	150	200	1	1	CAT9-205-*-*◆④	CAT9-205-*-*◆-G0④	G	CAT9-205-*-*◆-D0④	T
75	100	200	250	1	1	CAT9-265-*-*◆④	CAT9-265-*-*◆-G0④	I	CAT9-265-*-*◆-D0④	I
100	125	250	300	1	1	CAT9-305-*-*◆④	CAT9-305-*-*◆-G0④	I	CAT9-305-*-*◆-D0④	I
125	150	300	350	1	1	CAT9-370-*-*◆④	CAT9-370-*-*◆-G0④	I	CAT9-370-*-*◆-D0④	I
125	150	350	400	1	1	CAT9-400-EI-*-*◆	CAT9-400-EI-*-*◆-G0	R/F	CAT9-400-EI-*-*◆-D0	R/F
150	200	400	500	1	1	CAT9-460-EI-*-*◆	CAT9-460-EI-*-*◆-G0	R/F	CAT9-460-EI-*-*◆-D0	R/F
200	250	500	600	1	1	CAT9-580-EI-*-*◆	CAT9-580-EI-*-*◆-G0	R/F	CAT9-580-EI-*-*◆-D0	R/F
250	300	600	700	1	1	CAT9-750-EI-*-*◆	CAT9-750-EI-*-*◆-G0	R/F	CAT9-750-EI-*-*◆-D0	R/F
~	400	800	1000	1	1	CAT9-860-EI-*-*◆	CAT9-860-EI-*-*◆-G0	R/F	CAT9-860-EI-*-*◆-D0	R/F
~	450	900	1150	1	1	CAT9-1060-EI-*-*◆	CAT9-1060-EI-*-*◆-G0	R/F	CAT9-1060-EI-*-*◆-D0	R/F

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAT7-23-*-*◆-D0 becomes CAT7-23-*-*◆-R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ④ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAT9-116-*-*◆ becomes CAT9-116-EI-*-*◆. Price adder applies.

Three Phase, Non-Reversing CAT7 & CAT9

Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ②		Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V	NO	NC	Catalog No.	①	Catalog No.	①
2	2	5	7 1/2	1	0	CAT7-9-*-*♦-W0	N	CAT7-9-*-*♦-C0	S1
3	3	7 1/2	10	1	0	CAT7-12-*-*♦-W0	N	CAT7-12-*-*♦-C0	S1
5	5	10	15	1	0	CAT7-16-*-*♦-W0	N	CAT7-16-*-*♦-C0	S1
5	7 1/2	15	15	1	0	CAT7-23-*-*♦-W0	N	CAT7-23-*-*♦-C0	S1
7 1/2	10	20	25	1	0	CAT7-30-*-*♦-W0	O	CAT7-30-*-*♦-C0	U1
10	10	25	30	1	0	CAT7-37-*-*♦-W0	O	CAT7-37-*-*♦-C0	U1
10	15	30	30	1	0	CAT7-43-*-*♦-W0	O	CAT7-43-*-*♦-C0	U1
15	20	40	40	1	0	CAT7-55-*-*♦-W0	O	CAT7-55-*-*♦-C0	U1
15	20	40	50	1	0	CAT7-60-*-*♦-W0	O	CAT7-60-*-*♦-C0	U1
20	25	50	60	1	0	CAT7-72-*-*♦-W0	O	CAT7-72-*-*♦-C0	U1
25	30	60	60	1	0	CAT7-85-*-*♦-W0	O	CAT7-85-*-*♦-C0	U1
30	30	75	75	1	0	CAT7-97-*-*♦-W0	O	CAT7-97-*-*♦-C0	V1
30	40	75	100	1	1	CAT9-116-*-*♦-W0 ③	R2	CAT9-116-*-*♦-C0 ③	W2
40	50	100	125	1	1	CAT9-146-*-*♦-W0 ③	T	CAT9-146-*-*♦-C0 ③	X1
50	60	125	150	1	1	CAT9-190-*-*♦-W0 ③	T	CAT9-190-*-*♦-C0 ③	X1
60	75	150	200	1	1	CAT9-205-*-*♦-W0 ③	T	CAT9-205-*-*♦-C0 ③	X1
75	100	200	250	1	1	CAT9-265-*-*♦-W0 ③	J	CAT9-265-*-*♦-C0 ③	X1
100	125	250	300	1	1	CAT9-305-*-*♦-W0 ③	J	CAT9-305-*-*♦-C0 ③	Y1
125	150	300	350	1	1	CAT9-370-*-*♦-W0 ③	J	CAT9-370-*-*♦-C0 ③	Y1
125	150	350	400	1	1	CAT9-400-EI-*-*♦-W0	R/F	CAT9-400-EI-*-*♦-C0	R/F
150	200	400	500	1	1	CAT9-460-EI-*-*♦-W0	R/F	CAT9-460-EI-*-*♦-C0	R/F
200	250	500	600	1	1	CAT9-580-EI-*-*♦-W0	R/F	CAT9-580-EI-*-*♦-C0	R/F
250	300	600	700	1	1	CAT9-750-EI-*-*♦-W0	R/F	CAT9-750-EI-*-*♦-C0	R/F
~	400	800	1000	1	1	CAT9-860-EI-*-*♦-W0	R/F	CAT9-860-EI-*-*♦-C0	R/F
~	450	900	1150	1	1	CAT9-1060-EI-*-*♦-W0	R/F	CAT9-1060-EI-*-*♦-C0	R/F

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (♦) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ③ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAT9-116-*-*♦-W0 becomes CAT9-116-EI-*-*♦-W0. Price adder applies.

Three Phase, Reversing CAUT7 & CAUT9

Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ③		Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M
200V	230V	460V	575V	NO	NC ④	Catalog No.	Catalog No.	①	Catalog No.	①
2	2	5	7 1/2	1	1	CAUT7-9-*-*◆	CAUT7-9-*-*◆-G0	A	CAUT7-9-*-*◆-D0	M
3	3	7 1/2	10	1	1	CAUT7-12-*-*◆	CAUT7-12-*-*◆-G0	A	CAUT7-12-*-*◆-D0	M
5	5	10	15	1	1	CAUT7-16-*-*◆	CAUT7-16-*-*◆-G0	A	CAUT7-16-*-*◆-D0	M
5	7 1/2	15	15	1	1	CAUT7-23-*-*◆	CAUT7-23-*-*◆-G0	A	CAUT7-23-*-*◆-D0	M
7 1/2	10	20	25	1	1	CAUT7-30-*-*◆	CAUT7-30-*-*◆-G0	A	CAUT7-30-*-*◆-D0	M
10	10	25	30	1	1	CAUT7-37-*-*◆	CAUT7-37-*-*◆-G0	A	CAUT7-37-*-*◆-D0	M
10	15	30	30	1	1	CAUT7-43-*-*◆	CAUT7-43-*-*◆-G0	B	CAUT7-43-*-*◆-D0	M
15	20	40	40	1	1	CAUT7-55-*-*◆	CAUT7-55-*-*◆-G0	B	CAUT7-55-*-*◆-D0	M
15	20	40	50	1	1	CAUT7-60-*-*◆	CAUT7-60-*-*◆-G0	C	CAUT7-60-*-*◆-D0	O
20	25	50	60	1	1	CAUT7-72-*-*◆	CAUT7-72-*-*◆-G0	C	CAUT7-72-*-*◆-D0	O
25	30	60	60	1	1	CAUT7-85-*-*◆	CAUT7-85-*-*◆-G0	C	CAUT7-85-*-*◆-D0	O
30	30	75	75	1	1	CAUT7-97-*-*◆	CAUT7-97-*-*◆-G0	C	CAUT7-97-*-*◆-D0	O
30	40	75	100	1	1	CAUT9-116-*-*◆⑤	CAUT9-116-*-*◆-G0⑤	E2	CAUT9-116-*-*◆-D0⑤	R2
40	50	100	125	1	1	CAUT9-146-*-*◆⑤	CAUT9-146-*-*◆-G0⑤	G	CAUT9-146-*-*◆-D0⑤	T
50	60	125	150	1	1	CAUT9-190-*-*◆⑤	CAUT9-190-*-*◆-G0⑤	G	CAUT9-190-*-*◆-D0⑤	T
60	75	150	200	1	1	CAUT9-205-*-*◆⑤	CAUT9-205-*-*◆-G0⑤	G	CAUT9-205-*-*◆-D0⑤	T
75	100	200	250	1	1	CAUT9-265-*-*◆⑤	CAUT9-265-*-*◆-G0⑤	I	CAUT9-265-*-*◆-D0⑤	I
100	125	250	300	1	1	CAUT9-305-*-*◆⑤	CAUT9-305-*-*◆-G0⑤	I	CAUT9-305-*-*◆-D0⑤	I
125	150	300	350	1	1	CAUT9-370-*-*◆⑤	CAUT9-370-*-*◆-G0⑤	I	CAUT9-370-*-*◆-D0⑤	I
125	150	350	400	1	1	CAUT9-400-EI-*-*◆	CAUT9-400-EI-*-*◆-G0	R/F	CAUT9-400-EI-*-*◆-D0	R/F
150	200	400	500	1	1	CAUT9-460-EI-*-*◆	CAUT9-460-EI-*-*◆-G0	R/F	CAUT9-460-EI-*-*◆-D0	R/F
200	250	500	600	1	1	CAUT9-580-EI-*-*◆	CAUT9-580-EI-*-*◆-G0	R/F	CAUT9-580-EI-*-*◆-D0	R/F
250	300	600	700	1	1	CAUT9-750-EI-*-*◆	CAUT9-750-EI-*-*◆-G0	R/F	CAUT9-750-EI-*-*◆-D0	R/F
~	400	800	1000	1	1	CAUT9-860-EI-*-*◆	CAUT9-860-EI-*-*◆-G0	R/F	CAUT9-860-EI-*-*◆-D0	R/F
~	450	900	1150	1	1	CAUT9-1060-EI-*-*◆	CAUT9-1060-EI-*-*◆-G0	R/F	CAUT9-1060-EI-*-*◆-D0	R/F

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAUT7-23-*-*◆-D0 becomes CAUT7-23-*-*◆-R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ④ One N.C. auxiliary contact is used for electrical interlocking. On CAUT7 reversing starters, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat # CM7-02).
- ⑤ CAUT9-116...CAUT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAUT9-116-*-*◆ becomes CAUT9-116-EI-*-*◆. Price adder applies.

Three Phase, Reversing CAUT7 & CAUT9

Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ②		Type 4 Watertight Catalog No.	D I M	Type 4X Watertight Corrosion Resistant Non-metallic Catalog No.	D I M
200V	230V	460V	575V	NO	NC ③		①		①
2	2	5	7 1/2	1	1	CAUT7-9-*-*♦-W0	N	CAUT7-9-*-*♦-C0	U1
3	3	7 1/2	10	1	1	CAUT7-12-*-*♦-W0	N	CAUT7-12-*-*♦-C0	U1
5	5	10	15	1	1	CAUT7-16-*-*♦-W0	N	CAUT7-16-*-*♦-C0	U1
5	7 1/2	15	15	1	1	CAUT7-23-*-*♦-W0	N	CAUT7-23-*-*♦-C0	U1
7 1/2	10	20	25	1	1	CAUT7-30-*-*♦-W0	O	CAUT7-30-*-*♦-C0	U1
10	10	25	30	1	1	CAUT7-37-*-*♦-W0	O	CAUT7-37-*-*♦-C0	U1
10	15	30	30	1	1	CAUT7-43-*-*♦-W0	O	CAUT7-43-*-*♦-C0	U1
15	20	40	40	1	1	CAUT7-55-*-*♦-W0	O	CAUT7-55-*-*♦-C0	U1
15	20	40	50	1	1	CAUT7-60-*-*♦-W0	O	CAUT7-60-*-*♦-C0	V1
20	25	50	60	1	1	CAUT7-72-*-*♦-W0	O	CAUT7-72-*-*♦-C0	V1
25	30	60	60	1	1	CAUT7-85-*-*♦-W0	O	CAUT7-85-*-*♦-C0	V1
30	30	75	75	1	1	CAUT7-97-*-*♦-W0	O	CAUT7-97-*-*♦-C0	V1
30	40	75	100	1	1	CAUT9-116-*-*♦-W0 ④	R2	CAUT9-116-*-*♦-C0 ④	W2
40	50	100	125	1	1	CAUT9-146-*-*♦-W0 ④	T	CAUT9-146-*-*♦-C0 ④	X1
50	60	125	150	1	1	CAUT9-190-*-*♦-W0 ④	T	CAUT9-190-*-*♦-C0 ④	X1
60	75	150	200	1	1	CAUT9-205-*-*♦-W0 ④	T	CAUT9-205-*-*♦-C0 ④	X1
75	100	200	250	1	1	CAUT9-265-*-*♦-W0 ④	J	CAUT9-265-*-*♦-C0 ④	Y1
100	125	250	300	1	1	CAUT9-305-*-*♦-W0 ④	J	CAUT9-305-*-*♦-C0 ④	Y1
125	150	300	350	1	1	CAUT9-370-*-*♦-W0 ④	J	CAUT9-370-*-*♦-C0 ④	Y1
125	150	350	400	1	1	CAUT9-400-EI-*-*♦-W0	R/F	CAUT9-400-EI-*-*♦-C0	R/F
150	200	400	500	1	1	CAUT9-460-EI-*-*♦-W0	R/F	CAUT9-460-EI-*-*♦-C0	R/F
200	250	500	600	1	1	CAUT9-580-EI-*-*♦-W0	R/F	CAUT9-580-EI-*-*♦-C0	R/F
250	300	600	700	1	1	CAUT9-750-EI-*-*♦-W0	R/F	CAUT9-750-EI-*-*♦-C0	R/F
~	400	800	1000	1	1	CAUT9-860-EI-*-*♦-W0	R/F	CAUT9-860-EI-*-*♦-C0	R/F
~	450	900	1150	1	1	CAUT9-1060-EI-*-*♦-W0	R/F	CAUT9-1060-EI-*-*♦-C0	R/F

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (♦) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ③ One N.C. auxiliary contact is used for electrical interlocking. On CAUT7 reversing starters, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat # CM7-02).
- ④ CAUT9-116...CAUT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAUT9-116-*-*♦-W0 becomes CAUT9-116-EI-*-*♦-W0. Price adder applies.

Single Phase, Non-Reversing CBT7

Maximum Horsepower Single Ø		Auxiliary Contacts per Contactor ③		Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant	D I M
115V	230V	NO	NC	Catalog No.	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
				CBT7-	CBT7-		CBT7-		CBT7-		CBT7-	
1/2	1 1/2	1	0	9-*-*	9-*-*G0	A	9-*-*D0	L	9-*-*W0	N	9-*-*C0	S1
1/2	2	1	0	12-*-*	12-*-*G0	A	12-*-*D0	L	12-*-*W0	N	12-*-*C0	S1
1	3	1	0	16-*-*	16-*-*G0	A	16-*-*D0	L	16-*-*W0	N	16-*-*C0	S1
2	3	1	0	23-*-*	23-*-*G0	A	23-*-*D0	L	23-*-*W0	N	23-*-*C0	S1
2	5	1	0	30-*-*	30-*-*G0	A	30-*-*D0	L	30-*-*W0	O	30-*-*C0	U1
3	5	1	0	37-*-*	37-*-*G0	A	37-*-*D0	L	37-*-*W0	O	37-*-*C0	U1
3	7 1/2	1	0	43-*-*	43-*-*G0	A	43-*-*D0	M	43-*-*W0	O	43-*-*C0	U1
5	10	1	0	60-*-*	60-*-*G0	B	60-*-*D0	O	60-*-*W0	O	60-*-*C0	U1
5	15	1	0	72-*-*	72-*-*G0	B	72-*-*D0	O	72-*-*W0	O	72-*-*C0	U1
7 1/2	15	1	0	85-*-*	85-*-*G0	B	85-*-*D0	O	85-*-*W0	O	85-*-*C0	U1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CBT7-23-*-*D0 becomes CBT7-23-*-*R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.

Single Phase, Reversing CBUTR7 (Reconnectable Winding – Three Lead Motor)

Maximum Horsepower Single Ø		Auxiliary Contacts per Contactor ④		Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
115V	230V	NO	NC ④	Catalog No.	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
				CBUTR7-	CBUTR7-		CBUTR7-		CBUTR7-		CBUTR7-	
1/2	11/2	1	1	9-*◆	9-*◆-G0	A	9-*◆-D0	M	9-*◆-W0	N	9-*◆-C0	U1
1/2	2	1	1	12-*◆	12-*◆-G0	A	12-*◆-D0	M	12-*◆-W0	N	12-*◆-C0	U1
1	3	1	1	16-*◆	16-*◆-G0	A	16-*◆-D0	M	16-*◆-W0	N	16-*◆-C0	U1
2	3	1	1	23-*◆	23-*◆-G0	A	23-*◆-D0	M	23-*◆-W0	N	23-*◆-C0	U1
2	5	1	1	30-*◆	30-*◆-G0	A	30-*◆-D0	M	30-*◆-W0	O	30-*◆-C0	U1

Single Phase, Reversing CBUTS7 (Series Winding – Four Lead Repulsion Induction Motor)

Maximum Horsepower Single Ø		Auxiliary Contacts per Contactor ④		Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
115V	230V	NO	NC ④	Catalog No.	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
				CBUTS7-	CBUTS7-		CBUTS7-		CBUTS7-		CBUTS7-	
1/2	11/2	1	1	9-*◆	9-*◆-G0	A	9-*◆-D0	M	9-*◆-W0	N	9-*◆-C0	U1
1/2	2	1	1	12-*◆	12-*◆-G0	A	12-*◆-D0	M	12-*◆-W0	N	12-*◆-C0	U1
1	3	1	1	16-*◆	16-*◆-G0	A	16-*◆-D0	M	16-*◆-W0	N	16-*◆-C0	U1
2	3	1	1	23-*◆	23-*◆-G0	A	23-*◆-D0	M	23-*◆-W0	N	23-*◆-C0	U1
2	5	1	1	30-*◆	30-*◆-G0	A	30-*◆-D0	M	30-*◆-W0	O	30-*◆-C0	U1

Single Phase, Reversing CBUTP7 (Parallel Winding – Four Lead Capacitor or Split Phase Motor)

Maximum Horsepower Single Ø		Auxiliary Contacts per Contactor ④		Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
115V	230V	NO	NC ④	Catalog No.	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
				CBUTP7-	CBUTP7-		CBUTP7-		CBUTP7-		CBUTP7-	
1/2	11/2	1	1	9-*◆	9-*◆-G0	A	9-*◆-D0	M	9-*◆-W0	N	9-*◆-C0	U1
1/2	2	1	1	12-*◆	12-*◆-G0	A	12-*◆-D0	M	12-*◆-W0	N	12-*◆-C0	U1
1	3	1	1	16-*◆	16-*◆-G0	A	16-*◆-D0	M	16-*◆-W0	N	16-*◆-C0	U1
2	3	1	1	23-*◆	23-*◆-G0	A	23-*◆-D0	M	23-*◆-W0	N	23-*◆-C0	U1
2	5	1	1	30-*◆	30-*◆-G0	A	30-*◆-D0	M	30-*◆-W0	O	30-*◆-C0	U1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CBUTx7-23-*◆-D0 becomes CBUTx7-23-*◆-R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ④ One N.C. auxiliary contact is used for electrical interlocking. On CAUT7 reversing starters, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat # CM7-02).

Notes

Combination Starters - Through the Door Operated

Smart and cost effective... for any application



Sprecher + Schuh's through-the-door operated combination starters represent an economical alternative to the classic flange-operated combo solution. It is designed to meet rigid UL/NEC withstand specifications. Sprecher + Schuh has been building custom control panels with this design for years. Experience the durability of this product!

Starting with the best

At the heart of all combination starters is the Sprecher + Schuh CAT7 and CAT9 line of motor starters. These starters are compact and offer intermediate sizes to better match specific motor requirements. This equates to generous wiring space and less wasted horsepower capacity.

Top line protection...

Combination starters are equipped with Sprecher + Schuh's premium CEP7 solid state overload relay standard. Unlike traditional overload relays that indirectly sense motor current through heater elements, CEP7 solid state overload relays measure motor current directly through integrated current transformers and on board electronics. The electronics provide numerous advantages over electromechanical relays. Alternatively, the CT7N Thermal Overload Relay may also be selected.

Choice of Enclosures

Available enclosures include;

- Type 1 General Purpose
- Type 3R Raintight
- Type 12 Dusttight
- Type 4 Watertight
- Type 4X Corrosion Resistant

Choice of Disconnect

- Choices for disconnect include:
- Thermal Magnetic Molded Case Circuit Breaker (MCCB)
- L11 fusible or non-fusible Disconnect switch
- Motor Circuit Controller (Section F)



Thermal Magnetic Molded Case Circuit Breaker (MCCB)

The through-the-door operated combo MCCB is available to meet UL short circuit withstand specifications. An MCCB prevents single phasing by simultaneously opening all three phases when a fault occurs in any one phase. An MCCB can often be reset after the fault has been cleared.

Disconnect Switches

The through-the-door operated combo is available with the L11 disconnect switch. A mechanical door interlock system prevents the door from being opened when the disconnect is closed, and conversely, prevents the disconnect from being closed when the door is open. Both functions can be defeated for test and maintenance purposes. Other safety features include padlock provisions and a high visibility operating handle.

The L11 disconnect switch has a quick make/quick break, non-teasing action. The L11 fusible switch is suitable for interrupting up to 100,000 amperes when class "J" fuses are used. All L11 disconnect switches conform to UL 98 standards.



C4

Combination Starters

Series CAT7 with Thermal-Magnetic Circuit Breaker ①


Maximum Horsepower Three Phase				MCCB Amps	Open Type Catalog No. ③
200V	230V	460V	575V		
2	2	5	~	15	CAT7-9-*◆-TB15-BP
2	2	5	5	15	CAT7-9-*◆-TBH15-BP
~	~	~	7.5	20	CAT7-9-*◆-TBH20-BP
3	3	7.5	~	20	CAT7-12-*◆-TB20-BP
3	3	7.5	10	20	CAT7-12-*◆-TBH20-BP
~	5	10	~	30	CAT7-16-*◆-TB30-BP
5	~	~	~	35	CAT7-23-*◆-TB35-BP
5	~	~	15	35	CAT7-23-*◆-TBH35-BP
~	7.5	15	~	40	CAT7-23-*◆-TB40-BP
~	~	~	20	40	CAT7-30-*◆-TBH40-BP
7.5	10	20	25 ②	50	CAT7-30-*◆-TB50-BP
7.5	10	20	25	50	CAT7-30-*◆-TBH50-BP
10	10	25	30 ②	50	CAT7-37-*◆-TB50-BP
10	10	~	30	50	CAT7-37-*◆-TBH50-BP
~	~	30	~	70	CAT7-43-*◆-TB70-BP
~	15	~	~	80	CAT7-43-*◆-TB80-BP
15	20	40	40 ②	80	CAT7-55-*◆-TB80-BP
15	20	40	40	80	CAT7-55-*◆-TBH80-BP
~	~	~	40 ②	80	CAT7-60-*◆-TB80-BP
~	~	~	40	80	CAT7-60-*◆-TBH80-BP
15	20	40	50 ②	100	CAT7-60-*◆-TB100-BP
15	20	40	50	100	CAT7-60-*◆-TBH100-BP
20	25	50	60 ②	125	CAT7-72-*◆-TB125-BP
~	25	~	60	125	CAT7-72-*◆-TBH125-BP
25	30	60	~	125	CAT7-85-*◆-TB125-BP
~	30	~	75 ②	125	CAT7-97-*◆-TB125-BP
~	30	~	75	125	CAT7-97-*◆-TBH125-BP

Larger sizes available. Contact your Sprecher + Schuh representative.



Open Combination Starters include the following:

- CA7 Contactor with 1 Normally Open Auxiliary contact
- CEP7 Overload Relay
- Thermal Magnetic Circuit Breaker
- 19 x 5.25" 12 gauge steel back pan with black polyester powder paint finish

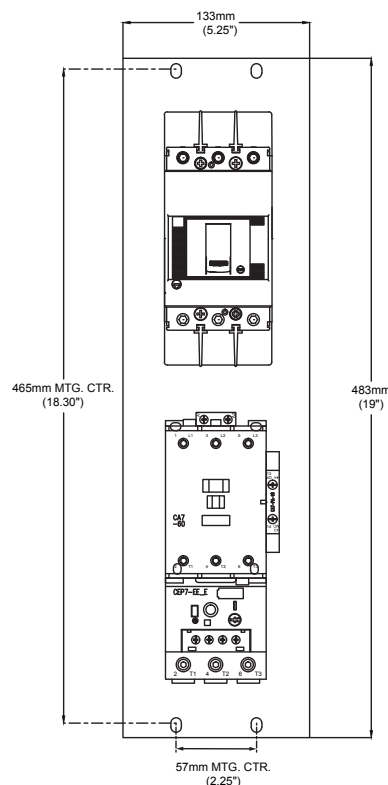

Modifications (Factory Assembled) ①

Description	Add Suffix to Catalog Number *
CA7 Auxiliaries & Trip Contacts - Side Mount	
1 NO Auxiliary	-L10
1 NC Auxiliary	-L01
1 NO + 1 NC Auxiliary	-L11
2 NO Auxiliaries	-L20
2 NC Auxiliaries	-L02

* See price list for adder

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying Catalog Numbers.

- ① Open type combination starters are limited to standard coils, overload selections, and modifications listed on this page. Contact factory for additional modifications.
- ② Applicable to 600Y/347V only. Refer to page C4:4 for 600V Delta enclosed solution. Contact your Sprecher + Schuh representative for an open type delta solution.
- ③ Selections above the orange line should consider an E-Combo starter. See Section F3.

Series CAT7 & CAT9 with Thermal-Magnetic Circuit Breaker

Maximum Horsepower Three Phase				MCCB Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V		Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CAT		CAT		CAT		CAT	
2	2	5	~	15	7-9-*◆-TB15G0	C2	7-9-*◆-TB15D0	C3	7-9-*◆-TB15W0	C2	7-9-*◆-TB15C0	V2
3	3	7.5	~	20	7-12-*◆-TB20G0	C2	7-12-*◆-TB20D0	C3	7-12-*◆-TB20W0	C2	7-12-*◆-TB20C0	V2
~	5	10	~	30	7-16-*◆-TB30G0	C2	7-16-*◆-TB30D0	C3	7-16-*◆-TB30W0	C2	7-16-*◆-TB30C0	V2
5	~	~	~	35	7-23-*◆-TB35G0	C2	7-23-*◆-TB35D0	C3	7-23-*◆-TB35W0	C2	7-23-*◆-TB35C0	V2
~	7.5	15	~	40	7-23-*◆-TB40G0	C2	7-23-*◆-TB40D0	C3	7-23-*◆-TB40W0	C2	7-23-*◆-TB40C0	V2
~	~	~	20 ③	40	7-30-*◆-TB40G0	C2	7-30-*◆-TB40D0	C3	7-30-*◆-TB40W0	C2	7-30-*◆-TB40C0	V2
7.5	10	20	25 ③	50	7-30-*◆-TB50G0	C2	7-30-*◆-TB50D0	C3	7-30-*◆-TB50W0	C2	7-30-*◆-TB50C0	V2
10	~	25	30 ③	60	7-37-*◆-TB60G0	C2	7-37-*◆-TB60D0	C3	7-37-*◆-TB60W0	C2	7-37-*◆-TB60C0	V2
~	~	30	~	70	7-43-*◆-TB70G0	C2	7-43-*◆-TB70D0	C3	7-43-*◆-TB70W0	C2	7-43-*◆-TB70C0	V2
~	15	~	~	80	7-43-*◆-TB80G0	C2	7-43-*◆-TB80D0	C3	7-43-*◆-TB80W0	C2	7-43-*◆-TB80C0	V2
15	20	40	40 ③	80	7-55-*◆-TB80G0	C2	7-55-*◆-TB80D0	C3	7-55-*◆-TB80W0	C2	7-55-*◆-TB80C0	V2
~	~	~	40 ③	80	7-60-*◆-TB80G0	D3	7-60-*◆-TB80D0	Q	7-60-*◆-TB80W0	Q	7-60-*◆-TB80C0	W2
15	20	40	50 ③	100	7-60-*◆-TB100G0	D3	7-60-*◆-TB100D0	Q	7-60-*◆-TB100W0	Q	7-60-*◆-TB100C0	W2
20	25	50	60 ③	125	7-72-*◆-TB125G0	D3	7-72-*◆-TB125D0	Q	7-72-*◆-TB125W0	Q	7-72-*◆-TB125C0	W2
25	30	60	~	125	7-85-*◆-TB125G0	D3	7-85-*◆-TB125D0	Q	7-85-*◆-TB125W0	Q	7-85-*◆-TB125C0	W2
~	~	~	75 ③④	150	7-97-*◆-TB150G0	D3	7-97-*◆-TB150D0	Q	7-97-*◆-TB150W0	Q	7-97-*◆-TB150C0	W2
30 ④	~	75 ④	~	175	7-97-*◆-TB175G0	D3	7-97-*◆-TB175D0	Q	7-97-*◆-TB175W0	Q	7-97-*◆-TB175C0	W2
30	~	75	~	175	9-116-*◆-TB175G0 ⑤	E2	9-116-*◆-TB175D0 ⑤	R2	9-116-*◆-TB175W0 ⑤	R2	9-116-*◆-TB175C0 ⑤	X1
~	40	~	100 ⑤	200	9-116-*◆-TB200G0 ⑤	E2	9-116-*◆-TB200D0 ⑤	R2	9-116-*◆-TB200W0 ⑤	R2	9-116-*◆-TB200C0 ⑤	X1
40	~	100	125 ⑤	225	9-146-*◆-TB225G0 ⑤	G	9-146-*◆-TB225D0 ⑤	R2	9-146-*◆-TB225W0 ⑤	R2	9-146-*◆-TB225C0 ⑤	X1
~	50	~	~	250	9-146-*◆-TB250G0 ⑤	G	9-146-*◆-TB250D0 ⑤	T	9-146-*◆-TB250W0 ⑤	T	9-146-*◆-TB250C0 ⑤	X1
50	60	125	150	300	9-190-*◆-TB300G0 ⑤	H	9-190-*◆-TB300D0 ⑤	T	9-190-*◆-TB300W0 ⑤	T	9-190-*◆-TB300C0 ⑤	X1
60	75	150	200	350	9-205-*◆-TB350G0 ⑤	H	9-205-*◆-TB350D0 ⑤	H	9-205-*◆-TB350W0 ⑤	H	9-205-*◆-TB350C0 ⑤	A2
75	~	175	~	400	9-265-*◆-TB400G0 ⑤	H	9-265-*◆-TB400D0 ⑤	H	9-265-*◆-TB400W0 ⑤	H	9-265-*◆-TB400C0 ⑤	A2
~	100	200	250	450	9-265-*◆-TB450G0 ⑤	H	9-265-*◆-TB450D0 ⑤	H	9-265-*◆-TB450W0 ⑤	H	9-265-*◆-TB450C0 ⑤	Y1
100	~	~	~	500	9-305-*◆-TB500G0 ⑤	I	9-305-*◆-TB500D0 ⑤	W	9-305-*◆-TB500W0 ⑤	J	9-305-*◆-TB500C0 ⑤	Y1
~	125	250	300	600	9-305-*◆-TB600G0 ⑤	I	9-305-*◆-TB600D0 ⑤	W	9-305-*◆-TB600W0 ⑤	J	9-305-*◆-TB600C0 ⑤	Y1
~	~	~	350	600	9-370-*◆-TB600G0 ⑤	I	9-370-*◆-TB600D0 ⑤	W	9-370-*◆-TB600W0 ⑤	J	9-370-*◆-TB600C0 ⑤	Y1
125	150	300	~	700	9-370-*◆-TB700G0 ⑤	I	9-370-*◆-TB700D0 ⑤	W	9-370-*◆-TB700W0 ⑤	J	9-370-*◆-TB700C0 ⑤	Y1
125	150	~	400	700	9-400-EI-*◆-TB700G0	J	9-400-EI-*◆-TB700D0	J	9-400-EI-*◆-TB700W0	J	9-400-EI-*◆-TB700C0	Y1
~	~	350	~	800	9-400-EI-*◆-TB800G0	J	9-400-EI-*◆-TB800D0	J	9-400-EI-*◆-TB800W0	J	9-400-EI-*◆-TB800C0	Y1
150	~	~	~	800	9-460-EI-*◆-TB800G0	J	9-460-EI-*◆-TB800D0	J	9-460-EI-*◆-TB800W0	J	9-460-EI-*◆-TB800C0	Y1
~	200	400	500	1000	9-460-EI-*◆-TB1000G0	J	9-460-EI-*◆-TB1000D0	J	9-460-EI-*◆-TB1000W0	J	9-460-EI-*◆-TB1000C0	Y1
200	~	~	600	1000	9-580-EI-*◆-TB1000G0	R/F	9-580-EI-*◆-TB1000D0	R/F	9-580-EI-*◆-TB1000W0	R/F	9-580-EI-*◆-TB1000C0	R/F
~	250	500	~	1200	9-580-EI-*◆-TB1200G0	R/F	9-580-EI-*◆-TB1200D0	R/F	9-580-EI-*◆-TB1200W0	R/F	9-580-EI-*◆-TB1200C0	R/F

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAT7-30-*◆-TB50D0 becomes CAT7-30-*◆-TB50R0. Price remains the same.
- ③ Applicable to 600Y/347V only. Refer to page C4:4 for 600V Delta solution.
- ④ The short circuit and kAIC is relegated to the contactor's 10kA. Contact your Sprecher + Schuh representative for a higher kAIC.
- ⑤ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAT9-116-*◆-TB175G0 becomes CAT9-116-EI-*◆-TB175G0. Price adder applies.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

C4

Combination Starters

Series CAT7 & CAT9 with Thermal-Magnetic Circuit Breaker - 600V Delta

Maximum Horsepower Three Phase				MCCB Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R Ⓢ] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V		Catalog No.	Ⓢ	Catalog No.	Ⓢ	Catalog No.	Ⓢ	Catalog No.	Ⓢ
					CAT		CAT		CAT		CAT	
2	2	5	5	15	7-9-✱-◆-TBH15G0	C2	7-9-✱-◆-TBH15D0	C3	7-9-✱-◆-TBH15W0	C2	7-9-✱-◆-TBH15C0	V2
~	~	~	7.5	20	7-9-✱-◆-TBH20G0	C2	7-9-✱-◆-TBH20D0	C3	7-9-✱-◆-TBH20W0	C2	7-9-✱-◆-TBH20C0	V2
3	3	7.5	10	20	7-12-✱-◆-TBH20G0	C2	7-12-✱-◆-TBH20D0	C3	7-12-✱-◆-TBH20W0	C2	7-12-✱-◆-TBH20C0	V2
5	~	~	15	35	7-23-✱-◆-TBH35G0	C2	7-23-✱-◆-TBH35D0	C3	7-23-✱-◆-TBH35W0	C2	7-23-✱-◆-TBH35C0	V2
~	~	~	20	40	7-30-✱-◆-TBH40G0	C2	7-30-✱-◆-TBH40D0	C3	7-30-✱-◆-TBH40W0	C2	7-30-✱-◆-TBH40C0	V2
7.5	10	20	25	50	7-30-✱-◆-TBH50G0	C2	7-30-✱-◆-TBH50D0	C3	7-30-✱-◆-TBH50W0	C2	7-30-✱-◆-TBH50C0	V2
10	~	25	30	60	7-37-✱-◆-TBH60G0	C2	7-37-✱-◆-TBH60D0	C3	7-37-✱-◆-TBH60W0	C2	7-37-✱-◆-TBH60C0	V2
15	20	40	40	80	7-55-✱-◆-TBH80G0	C2	7-55-✱-◆-TBH80D0	C3	7-55-✱-◆-TBH80W0	C2	7-55-✱-◆-TBH80C0	V2
~	~	~	40	80	7-60-✱-◆-TBH80G0	D3	7-60-✱-◆-TBH80D0	Q	7-60-✱-◆-TBH80W0	Q	7-60-✱-◆-TBH80C0	W2
15	20	40	50	100	7-60-✱-◆-TBH100G0	D3	7-60-✱-◆-TBH100D0	Q	7-60-✱-◆-TBH100W0	Q	7-60-✱-◆-TBH100C0	W2
~	25	~	60	125	7-72-✱-◆-TBH125G0	D3	7-72-✱-◆-TBH125D0	Q	7-72-✱-◆-TBH125W0	Q	7-72-✱-◆-TBH125C0	W2
~	~	~	75 Ⓢ	150	7-97-✱-◆-TBH150G0	D3	7-97-✱-◆-TBH150D0	Q	7-97-✱-◆-TBH150W0	Q	7-97-✱-◆-TBH150C0	W2
30	~	75	~	175	9-116-✱-◆-TBH175G0 Ⓢ	E2	9-116-✱-◆-TBH175D0 Ⓢ	R2	9-116-✱-◆-TBH175W0 Ⓢ	R2	9-116-✱-◆-TBH175C0 Ⓢ	X1
~	40	~	100 Ⓢ	200	9-116-✱-◆-TBH200G0 Ⓢ	E2	9-116-✱-◆-TBH200D0 Ⓢ	R2	9-116-✱-◆-TBH200W0 Ⓢ	R2	9-116-✱-◆-TBH200C0 Ⓢ	X1
40	~	100	125 Ⓢ	225	9-146-✱-◆-TBH225G0 Ⓢ	G	9-146-✱-◆-TBH225D0 Ⓢ	T	9-146-✱-◆-TBH225W0 Ⓢ	T	9-146-✱-◆-TBH225C0 Ⓢ	X1

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAT7-30-✱-◆-TBH50D0 becomes CAT7-30-✱-◆-TBH50R0. Price remains the same.
- ③ The short circuit and kAIC is relegated to the contactor's 10kA. Contact your Sprecher + Schuh representative for a higher kAIC.
- ④ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAT9-116-✱-◆-TBH175G0 becomes CAT9-116-EI-✱-◆-TBH175G0. Price adder applies.

Series CAUT7 & CAUT9 with Thermal-Magnetic Circuit Breaker

Maximum Horsepower Three Phase				MCCB Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R Ⓢ] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V		Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CAUT		CAUT		CAUT		CAUT	
2	2	5	~	15	7-9-*◆-TB15G0	D3	7-9-*◆-TB15D0	Q	7-9-*◆-TB15W0	Q	7-9-*◆-TB15C0	V2
3	3	7.5	~	20	7-12-*◆-TB20G0	D3	7-12-*◆-TB20D0	Q	7-12-*◆-TB20W0	Q	7-12-*◆-TB20C0	V2
~	5	10	~	30	7-16-*◆-TB30G0	D3	7-16-*◆-TB30D0	Q	7-16-*◆-TB30W0	Q	7-16-*◆-TB30C0	V2
5	~	~	~	35	7-23-*◆-TB35G0	D3	7-23-*◆-TB35D0	Q	7-23-*◆-TB35W0	Q	7-23-*◆-TB35C0	V2
~	7.5	15	~	40	7-23-*◆-TB40G0	D3	7-23-*◆-TB40D0	Q	7-23-*◆-TB40W0	Q	7-23-*◆-TB40C0	V2
~	~	~	20 Ⓢ	40	7-30-*◆-TB40G0	D3	7-30-*◆-TB40D0	Q	7-30-*◆-TB40W0	Q	7-30-*◆-TB40C0	V2
7.5	10	20	25 Ⓢ	50	7-30-*◆-TB50G0	D3	7-30-*◆-TB50D0	Q	7-30-*◆-TB50W0	Q	7-30-*◆-TB50C0	V2
10	~	25	30 Ⓢ	60	7-37-*◆-TB60G0	D3	7-37-*◆-TB60D0	Q	7-37-*◆-TB60W0	Q	7-37-*◆-TB60C0	V2
~	~	30	~	70	7-43-*◆-TB70G0	D3	7-43-*◆-TB70D0	Q	7-43-*◆-TB70W0	Q	7-43-*◆-TB70C0	V2
~	15	~	~	80	7-43-*◆-TB80G0	D3	7-43-*◆-TB80D0	Q	7-43-*◆-TB80W0	Q	7-43-*◆-TB80C0	V2
15	20	40	40 Ⓢ	80	7-55-*◆-TB80G0	D3	7-55-*◆-TB80D0	Q	7-55-*◆-TB80W0	Q	7-55-*◆-TB80C0	V2
~	~	~	40 Ⓢ	80	7-60-*◆-TB80G0	D3	7-60-*◆-TB80D0	Q	7-60-*◆-TB80W0	Q	7-60-*◆-TB80C0	W2
20	25	50	60 Ⓢ	125	7-72-*◆-TB125G0	D3	7-72-*◆-TB125D0	Q	7-72-*◆-TB125W0	Q	7-72-*◆-TB125C0	W2
25	30	60	~	125	7-85-*◆-TB125G0	D3	7-85-*◆-TB125D0	Q	7-85-*◆-TB125W0	Q	7-85-*◆-TB125C0	W2
~	~	~	75 Ⓢ④	150	7-97-*◆-TB150G0	D3	7-97-*◆-TB150D0	Q	7-97-*◆-TB150W0	Q	7-97-*◆-TB150C0	W2
30 ④	~	75 ④	~	125	7-97-*◆-TB175G0	D3	7-97-*◆-TB175D0	Q	7-97-*◆-TB175W0	Q	7-97-*◆-TB175C0	W2
30	~	75	~	175	9-116-*◆-TB175G0 Ⓢ	E2	9-116-*◆-TB175D0 Ⓢ	R2	9-116-*◆-TB175W0 Ⓢ	R2	9-116-*◆-TB175C0 Ⓢ	X1
~	40	~	100 Ⓢ	200	9-116-*◆-TB200G0 Ⓢ	E2	9-116-*◆-TB200D0 Ⓢ	R2	9-116-*◆-TB200W0 Ⓢ	R2	9-116-*◆-TB200C0 Ⓢ	X1
40	~	100	125 Ⓢ	225	9-146-*◆-TB225G0 Ⓢ	G	9-146-*◆-TB225D0 Ⓢ	T	9-146-*◆-TB225W0 Ⓢ	T	9-146-*◆-TB225C0 Ⓢ	X1
~	50	~	~	250	9-146-*◆-TB250G0 Ⓢ	G	9-146-*◆-TB250D0 Ⓢ	T	9-146-*◆-TB250W0 Ⓢ	T	9-146-*◆-TB250C0 Ⓢ	X1
50	60	125	150	300	9-190-*◆-TB300G0 Ⓢ	H	9-190-*◆-TB300D0 Ⓢ	H	9-190-*◆-TB300W0 Ⓢ	H	9-190-*◆-TB300C0 Ⓢ	A2
60	75	150	200	350	9-205-*◆-TB350G0 Ⓢ	H	9-205-*◆-TB350D0 Ⓢ	H	9-205-*◆-TB350W0 Ⓢ	H	9-205-*◆-TB350C0 Ⓢ	Y1
75	~	175	~	400	9-265-*◆-TB400G0 Ⓢ	I	9-265-*◆-TB400D0 Ⓢ	W	9-265-*◆-TB400W0 Ⓢ	J	9-265-*◆-TB400C0 Ⓢ	Y1
~	100	200	250	450	9-265-*◆-TB450G0 Ⓢ	I	9-265-*◆-TB450D0 Ⓢ	W	9-265-*◆-TB450W0 Ⓢ	J	9-265-*◆-TB450C0 Ⓢ	Y1
100	~	~	~	500	9-305-*◆-TB500G0 Ⓢ	I	9-305-*◆-TB500D0 Ⓢ	W	9-305-*◆-TB500W0 Ⓢ	J	9-305-*◆-TB500C0 Ⓢ	Y1
~	125	250	300	600	9-305-*◆-TB600G0 Ⓢ	I	9-305-*◆-TB600D0 Ⓢ	W	9-305-*◆-TB600W0 Ⓢ	J	9-305-*◆-TB600C0 Ⓢ	Y1
~	~	~	350	600	9-370-*◆-TB600G0 Ⓢ	J	9-370-*◆-TB600D0 Ⓢ	W	9-370-*◆-TB600W0 Ⓢ	J	9-370-*◆-TB600C0 Ⓢ	Y1
125	150	300	~	700	9-370-*◆-TB700G0 Ⓢ	J	9-370-*◆-TB700D0 Ⓢ	W	9-370-*◆-TB700W0 Ⓢ	J	9-370-*◆-TB700C0 Ⓢ	Y1
125	150	~	400	700	9-400-EI-*◆-TB700G0	J	9-400-EI-*◆-TB700D0	J	9-400-EI-*◆-TB700W0	J	9-400-EI-*◆-TB700C0	Y1
~	~	350	~	800	9-400-EI-*◆-TB800G0	J	9-400-EI-*◆-TB800D0	J	9-400-EI-*◆-TB800W0	J	9-400-EI-*◆-TB800C0	Y1
150	~	~	~	800	9-460-EI-*◆-TB800G0	J	9-460-EI-*◆-TB800D0	J	9-460-EI-*◆-TB800W0	J	9-460-EI-*◆-TB800C0	Y1
~	200	400	500	1000	9-460-EI-*◆-TB1000G0	J	9-460-EI-*◆-TB1000D0	J	9-460-EI-*◆-TB1000W0	J	9-460-EI-*◆-TB1000C0	Y1
200	~	~	600	1000	9-580-EI-*◆-TB1000G0	R/F	9-580-EI-*◆-TB1000D0	R/F	9-580-EI-*◆-TB1000W0	R/F	9-580-EI-*◆-TB1000C0	R/F
~	250	500	~	1200	9-580-EI-*◆-TB1200G0	R/F	9-580-EI-*◆-TB1200D0	R/F	9-580-EI-*◆-TB1200W0	R/F	9-580-EI-*◆-TB1200C0	R/F

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAUT7-30-*◆-TB50D0 becomes CAUT7-30-*◆-TB50R0. Price remains the same.
- ③ Applicable to 600Y/347V only. Refer to page C4:6 for 600V Delta solution.
- ④ The short circuit and kAIC is relegated to the contactor's 10kA. Contact your Sprecher + Schuh representative for a higher kAIC.
- ⑤ CAUT9-116...CAUT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAUT9-116-*◆-TB175G0 becomes CAUT9-116-EI-*◆-TB175G0. Price adder applies.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

Series CAUT7 & CAUT9 with Thermal-Magnetic Circuit Breaker - 600V Delta

Maximum Horsepower Three Phase				MCCB Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R ☉] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V		Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CAUT		CAUT		CAUT		CAUT	
2	2	5	5	15	7-9-*◆-TBH15G0	D3	7-9-*◆-TBH15D0	Q	7-9-*◆-TBH15W0	Q	7-9-*◆-TBH15C0	V2
~	~	~	7.5	20	7-9-*◆-TBH20G0	D3	7-9-*◆-TBH20D0	Q	7-9-*◆-TBH20W0	Q	7-9-*◆-TBH20C0	V2
3	3	7.5	10	20	7-12-*◆-TBH20G0	D3	7-12-*◆-TBH20D0	Q	7-12-*◆-TBH20W0	Q	7-12-*◆-TBH20C0	V2
5	~	~	15	35	7-23-*◆-TBH35G0	D3	7-23-*◆-TBH35D0	Q	7-23-*◆-TBH35W0	Q	7-23-*◆-TBH35C0	V2
~	~	~	20	40	7-30-*◆-TBH40G0	D3	7-30-*◆-TBH40D0	Q	7-30-*◆-TBH40W0	Q	7-30-*◆-TBH40C0	V2
7.5	10	20	25	50	7-30-*◆-TBH50G0	D3	7-30-*◆-TBH50D0	Q	7-30-*◆-TBH50W0	Q	7-30-*◆-TBH50C0	V2
10	~	25	30	60	7-37-*◆-TBH60G0	D3	7-37-*◆-TBH60D0	Q	7-37-*◆-TBH60W0	Q	7-37-*◆-TBH60C0	V2
15	20	40	40	80	7-55-*◆-TBH80G0	D3	7-55-*◆-TBH80D0	Q	7-55-*◆-TBH80W0	Q	7-55-*◆-TBH80C0	V2
~	~	~	40	80	7-60-*◆-TBH80G0	D3	7-60-*◆-TBH80D0	Q	7-60-*◆-TBH80W0	Q	7-60-*◆-TBH80C0	W2
15	20	40	50	100	7-60-*◆-TBH100G0	D3	7-60-*◆-TBH100D0	Q	7-60-*◆-TBH100W0	Q	7-60-*◆-TBH100C0	W2
~	25	~	60	125	7-72-*◆-TBH125G0	D3	7-72-*◆-TBH125D0	Q	7-72-*◆-TBH125W0	Q	7-72-*◆-TBH125C0	W2
~	~	~	75 ☉	150	7-97-*◆-TBH150G0	D3	7-97-*◆-TBH150D0	Q	7-97-*◆-TBH150W0	Q	7-97-*◆-TBH150C0	W2
30	~	75	~	175	9-116-*◆-TBH175G0 ④	E2	9-116-*◆-TBH175D0 ④	R2	9-116-*◆-TBH175W0 ④	R2	9-116-*◆-TBH175C0 ④	X1
~	40	~	100 ☉	200	9-116-*◆-TBH200G0 ④	E2	9-116-*◆-TBH200D0 ④	R2	9-116-*◆-TBH200W0 ④	R2	9-116-*◆-TBH200C0 ④	X1
40	~	100	125 ☉	225	9-146-*◆-TBH225G0 ④	G	9-146-*◆-TBH225D0 ④	T	9-146-*◆-TBH225W0 ④	T	9-146-*◆-TBH225C0 ④	X1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAUT7-30-*◆-TBH50D0 becomes CAUT7-30-*◆-TBH50R0. Price remains the same.
- ③ The short circuit and kAIC is relegated to the contactor's 10kA. Contact your Sprecher + Schuh representative for a higher kAIC.
- ④ CAUT9-116...CAUT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAUT9-116-*◆-TBH175G0 becomes CAUT9-116-EI-*◆-TBH175G0. Price adder applies.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

Series CAT7 & CAT9 with Fusible Disconnect (J-Type) ①②

Maximum Horsepower Three Phase				Fuse Clip Amps	Type 1 General Purpose	DIM	Type 12 [Type 3R ②] Industrial Dusttight	DIM	Type 4 Watertight	DIM	Type 4X Watertight Corrosion Resistant Non-metallic	DIM
200V	230V	460V	575V		Catalog No.		Catalog No.		Catalog No.		Catalog No.	
					CAT		CAT		CAT		CAT	
2	2	5	7.5	30	7-9-✱-◆-JF61G0	C	7-9-✱-◆-JF61D0	C2	7-9-✱-◆-JF61W0	Q	7-9-✱-◆-JF61C0	V1
3	3	7.5	10	30	7-12-✱-◆-JF61G0	C	7-12-✱-◆-JF61D0	C2	7-12-✱-◆-JF61W0	Q	7-12-✱-◆-JF61C0	V1
5	5	10	15	30	7-16-✱-◆-JF61G0	C	7-16-✱-◆-JF61D0	C2	7-16-✱-◆-JF61W0	Q	7-16-✱-◆-JF61C0	V1
5	~	~	15	30	7-23-✱-◆-JF61G0	C	7-23-✱-◆-JF61D0	C2	7-23-✱-◆-JF61W0	Q	7-23-✱-◆-JF61C0	V1
~	7.5	15	~	60	7-23-✱-◆-JF62G0	C	7-23-✱-◆-JF62D0	C2	7-23-✱-◆-JF62W0	Q	7-23-✱-◆-JF62C0	V1
7.5	10	20	25	60	7-30-✱-◆-JF62G0	C	7-30-✱-◆-JF62D0	C2	7-30-✱-◆-JF62W0	Q	7-30-✱-◆-JF62C0	V1
10	10	25	30	60	7-37-✱-◆-JF62G0	C	7-37-✱-◆-JF62D0	C2	7-37-✱-◆-JF62W0	Q	7-37-✱-◆-JF62C0	V1
10	~	30	30	60	7-43-✱-◆-JF62G0	C	7-43-✱-◆-JF62D0	C2	7-43-✱-◆-JF62W0	Q	7-43-✱-◆-JF62C0	V1
~	15	~	~	100	7-43-✱-◆-JF63G0	D3	7-43-✱-◆-JF63D0	Q	7-43-✱-◆-JF63W0	Q	7-43-✱-◆-JF63C0	W1
~	~	~	40	60	7-55-✱-◆-JF62G0	C	7-55-✱-◆-JF62D0	C2	7-55-✱-◆-JF62W0	Q	7-55-✱-◆-JF62C0	V1
15	20	40	~	100	7-55-✱-◆-JF63G0	D3	7-55-✱-◆-JF63D0	Q	7-55-✱-◆-JF63W0	Q	7-55-✱-◆-JF63C0	W1
~	~	~	40	60	7-60-✱-◆-JF62G0	D3	7-60-✱-◆-JF62D0	Q	7-60-✱-◆-JF62W0	Q	7-60-✱-◆-JF62C0	W2
15	20	40	50	100	7-60-✱-◆-JF63G0	D3	7-60-✱-◆-JF63D0	Q	7-60-✱-◆-JF63W0	Q	7-60-✱-◆-JF63C0	W2
20	25	50	60	100	7-72-✱-◆-JF63G0	D3	7-72-✱-◆-JF63D0	Q	7-72-✱-◆-JF63W0	Q	7-72-✱-◆-JF63C0	W2
~	~	~	60	100	7-85-✱-◆-JF63G0	D3	7-85-✱-◆-JF63D0	Q	7-85-✱-◆-JF63W0	Q	7-85-✱-◆-JF63C0	W2
25	30	60	~	200	7-85-✱-◆-JF64G0	G	7-85-✱-◆-JF64D0	T	7-85-✱-◆-JF64W0	T	7-85-✱-◆-JF64C0	X1
30	30	75	75	200	7-97-✱-◆-JF64G0	G	7-97-✱-◆-JF64D0	T	7-97-✱-◆-JF64W0	T	7-97-✱-◆-JF64C0	X1
30	40	75	100	200	9-116-✱-◆-JF64G0 ⑤	G	9-116-✱-◆-JF64D0 ⑤	T	9-116-✱-◆-JF64W0 ⑤	T	9-116-✱-◆-JF64C0 ⑤	A2
40	50	100	125	200	9-146-✱-◆-JF64G0 ⑤	G	9-146-✱-◆-JF64D0 ⑤	T	9-146-✱-◆-JF64W0 ⑤	T	9-146-✱-◆-JF64C0 ⑤	A2
50	60	125	150	400	9-190-✱-◆-JF65G0 ⑤	H	9-190-✱-◆-JF65D0 ⑤	H	9-190-✱-◆-JF65W0 ⑤	H	9-190-✱-◆-JF65C0 ⑤	Y1
60	75	150	200	400	9-205-✱-◆-JF65G0 ⑤	H	9-205-✱-◆-JF65D0 ⑤	H	9-205-✱-◆-JF65W0 ⑤	H	9-205-✱-◆-JF65C0 ⑤	Y1
75	100	200	250	400	9-265-✱-◆-JF65G0 ⑤	J	9-265-✱-◆-JF65D0 ⑤	J	9-265-✱-◆-JF65W0 ⑤	J	9-265-✱-◆-JF65C0 ⑤	Y1
100	125	250	300	600	9-305-✱-◆-JF66G0 ⑤	R/F	9-305-✱-◆-JF66D0 ⑤	R/F	9-305-✱-◆-JF66W0 ⑤	R/F	9-305-✱-◆-JF66C0 ⑤	R/F
125	150	300	350	600	9-370-✱-◆-JF66G0 ⑤	R/F	9-370-✱-◆-JF66D0 ⑤	R/F	9-370-✱-◆-JF66W0 ⑤	R/F	9-370-✱-◆-JF66C0 ⑤	R/F
125	150	~	400	600	9-400-EI-✱-◆-JF66G0	R/F	9-400-EI-✱-◆-JF66D0	R/F	9-400-EI-✱-◆-JF66W0	R/F	9-400-EI-✱-◆-JF66C0	R/F
~	~	350	~	800	9-400-EI-✱-◆-JF67G0	R/F	9-400-EI-✱-◆-JF67D0	R/F	9-400-EI-✱-◆-JF67W0	R/F	9-400-EI-✱-◆-JF67C0	R/F
150	200	400	500	800	9-460-EI-✱-◆-JF67G0	R/F	9-460-EI-✱-◆-JF67D0	R/F	9-460-EI-✱-◆-JF67W0	R/F	9-460-EI-✱-◆-JF67C0	R/F

Larger sizes available. Contact your Sprecher + Schuh representative.

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAT7-23-✱-◆-JF62D0 becomes CAT7-23-✱-◆-JF62R0. Price remains the same.
- ③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.
- ④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.
- ⑤ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAT9-116-✱-◆-JF64G0 becomes CAT9-116-EI-✱-◆-JF64G0. Price adder applies.

Series CAUT7 & CAUT9 with Fusible Disconnect (J-Type) ④④

Maximum Horsepower Three Phase				Fuse Clips Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V		Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CAUT		CAUT		CAUT		CAUT	
2	2	5	7.5	30	7-9-*◆-JF61G0	D3	7-9-*◆-JF61D0	Q	7-9-*◆-JF61W0	Q	7-9-*◆-JF61C0	V1
3	3	7.5	10	30	7-12-*◆-JF61G0	D3	7-12-*◆-JF61D0	Q	7-12-*◆-JF61W0	Q	7-12-*◆-JF61C0	V1
5	5	10	15	30	7-16-*◆-JF61G0	D3	7-16-*◆-JF61D0	Q	7-16-*◆-JF61W0	Q	7-16-*◆-JF61C0	V1
5	~	~	15	30	7-23-*◆-JF61G0	D3	7-23-*◆-JF61D0	Q	7-23-*◆-JF61W0	Q	7-23-*◆-JF61C0	V1
	7.5	15	~	60	7-23-*◆-JF62G0	D3	7-23-*◆-JF62D0	Q	7-23-*◆-JF62W0	Q	7-23-*◆-JF62C0	V1
7.5	10	20	25	60	7-30-*◆-JF62G0	D3	7-30-*◆-JF62D0	Q	7-30-*◆-JF62W0	Q	7-30-*◆-JF62C0	V1
10	10	25	30	60	7-37-*◆-JF62G0	D3	7-37-*◆-JF62D0	Q	7-37-*◆-JF62W0	Q	7-37-*◆-JF62C0	V1
10	~	30	30	60	7-43-*◆-JF62G0	D3	7-43-*◆-JF62D0	Q	7-43-*◆-JF62W0	Q	7-43-*◆-JF62C0	V1
~	15	~	~	100	7-43-*◆-JF63G0	E	7-43-*◆-JF63D0	R	7-43-*◆-JF63W0	R	7-43-*◆-JF63C0	W1
~	~	~	40	60	7-55-*◆-JF62G0	D3	7-55-*◆-JF62D0	Q	7-55-*◆-JF62W0	Q	7-55-*◆-JF62C0	V1
15	20	40	~	100	7-55-*◆-JF63G0	E	7-55-*◆-JF63D0	R	7-55-*◆-JF63W0	R	7-55-*◆-JF63C0	W1
~	~	~	40	60	7-60-*◆-JF62G0	E	7-60-*◆-JF62D0	R	7-60-*◆-JF62W0	R	7-60-*◆-JF62C0	W2
15	20	40	50	100	7-60-*◆-JF63G0	E	7-60-*◆-JF63D0	R	7-60-*◆-JF63W0	R	7-60-*◆-JF63C0	W2
20	25	50	60	100	7-72-*◆-JF63G0	E	7-72-*◆-JF63D0	R	7-72-*◆-JF63W0	R	7-72-*◆-JF63C0	W2
~	~	~	60	100	7-85-*◆-JF63G0	E	7-85-*◆-JF63D0	R	7-85-*◆-JF63W0	R	7-85-*◆-JF63C0	W2
25	30	60	~	200	7-85-*◆-JF64G0	F	7-85-*◆-JF64D0	T	7-85-*◆-JF64W0	T	7-85-*◆-JF64C0	A2
30	30	75	75	200	7-97-*◆-JF64G0	F	7-97-*◆-JF64D0	T	7-97-*◆-JF64W0	T	7-97-*◆-JF64C0	A2
30	40	75	100	200	9-116-*◆-JF64G0 ⑤	H	9-116-*◆-JF64D0 ⑤	H	9-116-*◆-JF64W0 ⑤	H	9-116-*◆-JF64C0 ⑤	Y1
40	50	100	125	200	9-146-*◆-JF64G0 ⑤	H	9-146-*◆-JF64D0 ⑤	H	9-146-*◆-JF64W0 ⑤	H	9-146-*◆-JF64C0 ⑤	Y1
50	60	125	150	400	9-190-*◆-JF65G0 ⑤	J	9-190-*◆-JF65D0 ⑤	J	9-190-*◆-JF65W0 ⑤	J	9-190-*◆-JF65C0 ⑤	Z1
60	75	150	200	400	9-205-*◆-JF65G0 ⑤	J	9-205-*◆-JF65D0 ⑤	J	9-205-*◆-JF65W0 ⑤	J	9-205-*◆-JF65C0 ⑤	Z1
75	100	200	250	400	9-265-*◆-JF65G0 ⑤	J	9-265-*◆-JF65D0 ⑤	J	9-265-*◆-JF65W0 ⑤	J	9-265-*◆-JF65C0 ⑤	Z1
100	125	250	300	600	9-305-*◆-JF66G0 ⑤	R/F	9-305-*◆-JF66D0 ⑤	R/F	9-305-*◆-JF66W0 ⑤	R/F	9-305-*◆-JF66C0 ⑤	R/F
125	150	300	350	600	9-370-*◆-JF66G0 ⑤	R/F	9-370-*◆-JF66D0 ⑤	R/F	9-370-*◆-JF66W0 ⑤	R/F	9-370-*◆-JF66C0 ⑤	R/F
125	150	~	400	600	9-400-EI-*◆-JF66G0	R/F	9-400-EI-*◆-JF66D0	R/F	9-400-EI-*◆-JF66W0	R/F	9-400-EI-*◆-JF66C0	R/F
~	~	350	~	800	9-400-EI-*◆-JF67G0	R/F	9-400-EI-*◆-JF67D0	R/F	9-400-EI-*◆-JF67W0	R/F	9-400-EI-*◆-JF67C0	R/F
150	200	400	500	800	9-460-EI-*◆-JF67G0	R/F	9-460-EI-*◆-JF67D0	R/F	9-460-EI-*◆-JF67W0	R/F	9-460-EI-*◆-JF67C0	R/F

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

- ① Dimensional information starts on page C8:23
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAUT7-23-*◆-JF62D0 becomes CAUT7-23-*◆-JF62R0. Price remains the same.
- ③ Fusible combo starter used the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.
- ④ A Red and Yellow Handle may be selected instead of the standard y and Black handle. Change "JF" to "LF" in catalog number.
- ⑤ CAUT9-116...CAUT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAUT9-116-*◆-JF64G0 becomes CAUT9-116-EI-*◆-JF64G0. Price adder applies.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

Series CAT7 & CAT9 with Non-Fusible Disconnect ☼

Maximum Horsepower Three Phase				Disc Size/ Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R ☼] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V		Catalog No.		Catalog No.		Catalog No.		Catalog No.	
					CAT		CAT		CAT		CAT	
2	2	5	7.5	30	7-9-✱-◆-JU61G0	C	7-9-✱-◆-JU61D0	C2	7-9-✱-◆-JU61W0	Q	7-9-✱-◆-JU61C0	V1
3	3	7.5	10	30	7-12-✱-◆-JU61G0	C	7-12-✱-◆-JU61D0	C2	7-12-✱-◆-JU61W0	Q	7-12-✱-◆-JU61C0	V1
5	5	10	15	30	7-16-✱-◆-JU61G0	C	7-16-✱-◆-JU61D0	C2	7-16-✱-◆-JU61W0	Q	7-16-✱-◆-JU61C0	V1
5	7.5	15	15	30	7-23-✱-◆-JU61G0	C	7-23-✱-◆-JU61D0	C2	7-23-✱-◆-JU61W0	Q	7-23-✱-◆-JU61C0	V1
7.5	~	~	20	30	7-30-✱-◆-JU61G0	C	7-30-✱-◆-JU61D0	C2	7-30-✱-◆-JU61W0	Q	7-30-✱-◆-JU61C0	V1
~	10	20	25	60	7-30-✱-◆-JU62G0	C	7-30-✱-◆-JU62D0	C2	7-30-✱-◆-JU62W0	Q	7-30-✱-◆-JU62C0	V1
10	10	25	30	60	7-37-✱-◆-JU62G0	C	7-37-✱-◆-JU62D0	C2	7-37-✱-◆-JU62W0	Q	7-37-✱-◆-JU62C0	V1
10	15	30	30	60	7-43-✱-◆-JU62G0	C	7-43-✱-◆-JU62D0	C2	7-43-✱-◆-JU62W0	Q	7-43-✱-◆-JU62C0	V1
15	~	~	40	60	7-55-✱-◆-JU62G0	C	7-55-✱-◆-JU62D0	C2	7-55-✱-◆-JU62W0	Q	7-55-✱-◆-JU62C0	V1
~	20	40	~	100	7-55-✱-◆-JU63G0	D3	7-55-✱-◆-JU63D0	Q	7-55-✱-◆-JU63W0	Q	7-55-✱-◆-JU63C0	W2
15	~	~	~	60	7-60-✱-◆-JU62G0	D3	7-60-✱-◆-JU62D0	Q	7-60-✱-◆-JU62W0	Q	7-60-✱-◆-JU62C0	W2
~	20	40	50	100	7-60-✱-◆-JU63G0	D3	7-60-✱-◆-JU63D0	Q	7-60-✱-◆-JU63W0	Q	7-60-✱-◆-JU63C0	W2
20	25	50	60	100	7-72-✱-◆-JU63G0	D3	7-72-✱-◆-JU63D0	Q	7-72-✱-◆-JU63W0	Q	7-72-✱-◆-JU63C0	W2
25	30	60	60	100	7-85-✱-◆-JU63G0	D3	7-85-✱-◆-JU63D0	Q	7-85-✱-◆-JU63W0	Q	7-85-✱-◆-JU63C0	W2
~	30	~	75	100	7-97-✱-◆-JU63G0	D3	7-97-✱-◆-JU63D0	Q	7-97-✱-◆-JU63W0	Q	7-97-✱-◆-JU63C0	W2
30	~	75	~	200	7-97-✱-◆-JU64G0	G	7-97-✱-◆-JU64D0	T	7-97-✱-◆-JU64W0	T	7-97-✱-◆-JU64C0	X1
30	40	75	100	200	9-116-✱-◆-JU64G0 ☼	G	9-116-✱-◆-JU64D0 ☼	T	9-116-✱-◆-JU64W0 ☼	T	9-116-✱-◆-JU64C0 ☼	A2
40	50	100	125	200	9-146-✱-◆-JU64G0 ☼	G	9-146-✱-◆-JU64D0 ☼	T	9-146-✱-◆-JU64W0 ☼	T	9-146-✱-◆-JU64C0 ☼	A2
50	60	125	150	200	9-190-✱-◆-JU64G0 ☼	G	9-190-✱-◆-JU64D0 ☼	T	9-190-✱-◆-JU64W0 ☼	T	9-190-✱-◆-JU64C0 ☼	A2
60	75	150	200	400	9-205-✱-◆-JU65G0 ☼	H	9-205-✱-◆-JU65D0 ☼	H	9-205-✱-◆-JU65W0 ☼	H	9-205-✱-◆-JU65C0 ☼	Y1
75	100	200	250	400	9-265-✱-◆-JU65G0 ☼	J	9-265-✱-◆-JU65D0 ☼	J	9-265-✱-◆-JU65W0 ☼	J	9-265-✱-◆-JU65C0 ☼	Y1
100	125	250	300	400	9-305-✱-◆-JU65G0 ☼	J	9-305-✱-◆-JU65D0 ☼	J	9-305-✱-◆-JU65W0 ☼	J	9-305-✱-◆-JU65C0 ☼	Y1

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAT7-23-✱-◆-JU61D0 becomes CAT7-23-✱-◆-JU61R0. Price remains the same.
- ③ Non-fusible combo-starter uses the L11 Non-Fusible Disconnect.
- ④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JU" to "LU" in catalog number.
- ⑤ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAT9-116-✱-◆-JU64G0 becomes CAT9-116-EI-✱-◆-JU64G0. Price adder applies.

Series CAUT7 & CAUT9 with Non-Fusible Disconnect ☞

Maximum Horsepower Three Phase				Disc Size/ Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R ☞] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V		Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
					CAUT		CAUT		CAUT		CAUT	
2	2	5	7.5	30	7-9-*-◆-JU61G0	D3	7-9-*-◆-JU61D0	Q	7-9-*-◆-JU61W0	Q	7-9-*-◆-JU61C0	W1
3	3	7.5	10	30	7-12-*-◆-JU61G0	D3	7-12-*-◆-JU61D0	Q	7-12-*-◆-JU61W0	Q	7-12-*-◆-JU61C0	W1
5	5	10	15	30	7-16-*-◆-JU61G0	D3	7-16-*-◆-JU61D0	Q	7-16-*-◆-JU61W0	Q	7-16-*-◆-JU61C0	W1
5	7.5	15	15	30	7-23-*-◆-JU61G0	D3	7-23-*-◆-JU61D0	Q	7-23-*-◆-JU61W0	Q	7-23-*-◆-JU61C0	W1
7.5	~	~	20	30	7-30-*-◆-JU61G0	D3	7-30-*-◆-JU61D0	Q	7-30-*-◆-JU61W0	Q	7-30-*-◆-JU61C0	W1
~	10	20	25	60	7-30-*-◆-JU62G0	D3	7-30-*-◆-JU62D0	Q	7-30-*-◆-JU62W0	Q	7-30-*-◆-JU62C0	W1
10	10	25	30	60	7-37-*-◆-JU62G0	D3	7-37-*-◆-JU62D0	Q	7-37-*-◆-JU62W0	Q	7-37-*-◆-JU62C0	W1
10	15	30	30	60	7-43-*-◆-JU62G0	D3	7-43-*-◆-JU62D0	Q	7-43-*-◆-JU62W0	Q	7-43-*-◆-JU62C0	W1
15	~	~	40	60	7-55-*-◆-JU62G0	D3	7-55-*-◆-JU62D0	Q	7-55-*-◆-JU62W0	Q	7-55-*-◆-JU62C0	W1
~	20	40	~	100	7-55-*-◆-JU63G0	E	7-55-*-◆-JU63D0	R	7-55-*-◆-JU63W0	R	7-55-*-◆-JU63C0	W2
15	~	~	~	60	7-60-*-◆-JU62G0	E	7-60-*-◆-JU62D0	Q	7-60-*-◆-JU62W0	Q	7-60-*-◆-JU62C0	W2
~	20	40	50	100	7-60-*-◆-JU63G0	E	7-60-*-◆-JU63D0	R	7-60-*-◆-JU63W0	R	7-60-*-◆-JU63C0	W2
20	25	50	60	100	7-72-*-◆-JU63G0	E	7-72-*-◆-JU63D0	R	7-72-*-◆-JU63W0	R	7-72-*-◆-JU63C0	W2
25	30	60	60	100	7-85-*-◆-JU63G0	E	7-85-*-◆-JU63D0	R	7-85-*-◆-JU63W0	R	7-85-*-◆-JU63C0	W2
~	30	~	75	100	7-97-*-◆-JU63G0	E	7-97-*-◆-JU63D0	R	7-97-*-◆-JU63W0	R	7-97-*-◆-JU63C0	W2
30	~	75	~	200	7-97-*-◆-JU64G0	F	7-97-*-◆-JU64D0	T	7-97-*-◆-JU64W0	T	7-97-*-◆-JU64C0	A2
30	40	75	100	200	9-116-*-◆-JU64G0 ☞	H	9-116-*-◆-JU64D0 ☞	H	9-116-*-◆-JU64W0 ☞	H	9-116-*-◆-JU64C0 ☞	Y1
40	50	100	125	200	9-146-*-◆-JU64G0 ☞	H	9-146-*-◆-JU64D0 ☞	H	9-146-*-◆-JU64W0 ☞	H	9-146-*-◆-JU64C0 ☞	Y1
50	60	125	150	200	9-190-*-◆-JU64G0 ☞	J	9-190-*-◆-JU64D0 ☞	J	9-190-*-◆-JU64W0 ☞	J	9-190-*-◆-JU64C0 ☞	Z1
60	75	150	200	400	9-205-*-◆-JU65G0 ☞	J	9-205-*-◆-JU65D0 ☞	J	9-205-*-◆-JU65W0 ☞	J	9-205-*-◆-JU65C0 ☞	Z1
75	100	200	250	400	9-265-*-◆-JU65G0 ☞	J	9-265-*-◆-JU65D0 ☞	J	9-265-*-◆-JU65W0 ☞	J	9-265-*-◆-JU65C0 ☞	Z1
100	125	250	300	400	9-305-*-◆-JU65G0 ☞	J	9-305-*-◆-JU65D0 ☞	J	9-305-*-◆-JU65W0 ☞	J	9-305-*-◆-JU65C0 ☞	Z1

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAUT7-23-✱-◆-JU61D0 becomes CAUT7-23-✱-◆-JU61R0. Price remains the same.
- ③ Non-fusible combo-starter uses the L11 Non-Fusible Disconnect.
- ④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JU" to "LU" in catalog number.
- ⑤ CAUT9-116...CAUT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAUT9-116-✱-◆-JU64G0 becomes CAUT9-116-EI-✱-◆-JU64G0. Price adder applies.

Explosion-proof Starters

Safe and reliable starting in hazardous applications

ISO9001, UL508 & UL1203 (NNNY) Certified Panel Shop
Including ATEX Solutions



Explosion Proof motor control panel mounted directly to motor and pump frame.

Sprecher + Schuh offers explosion-proof starters for environments covered by the following classifications:

NEMA: Type 4/4X, 7BCD, 9EFG

NEC: Class I, Div. 1 Groups B, C, D
Class II, Div. 1 Groups E, F, G
Class III

UL: Standard 1203
Hazardous (Classified)
Locations

CSA: Standard 22.2 No. 25 & 30

Explosion-proof combination starters also comply with NEMA Type 3, 3R, 4 & 4X. Optional ATEX certification is available in Class I, Zone 1, AExd IIB, Exd IIB+H2, IEXEx.


NEMA Type 4, 4X, 7, & 9 protection

NEMA Type 7 enclosures are designed to provide protection against an internal explosion when operated in a hazardous gas environment. NEMA Type 9 enclosures protect from internal explosion in a hazardous dust environment.

Both types must also prevent enclosed heat generating mechanisms from causing external surfaces to reach temperatures capable of igniting explosive gas-air mixtures in the surrounding atmosphere. Sprecher + Schuh explosion-proof starters meet all requirements of both classifications. Inclusive with the selection of these explosion proof starters is a gasket inserted into the flange of the enclosure. This included gasket also gives the enclosures a NEMA Type 4 watertight and NEMA Type 4X corrosion resistance approval.

Starting with the best

At the heart of all explosion-proof starters is Sprecher + Schuh's CAT7 and CAT9 line of motor starters. These starters are compact and offer intermediate sizes to better match specific motor requirements. This equates to generous

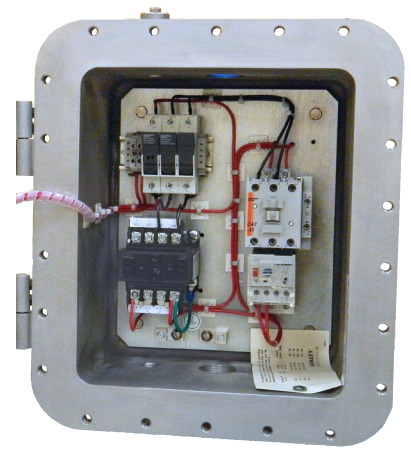

wiring space and less wasted horsepower capacity.

Top line protection...

Explosion Proof starters are equipped with Sprecher + Schuh's CEP7 solid state overload relay standard. Unlike traditional overload relays that indirectly sense motor current through heater elements, CEP7 solid state overload relays measure motor current directly through integrated current transformers and on board electronics. The electronics provide numerous advantages over electromechanical relays.

Combination starters for protection and convenience

Explosion-proof combination starters can include either a UL489 approved Thermal Magnetic Circuit Breaker (MCCB) or non-fusible disconnect. The MCCB utilizes the instantaneous trip ability of a magnetic breaker for short circuit currents combined with the overload tolerance of thermal circuit breakers for normal starting demands. An MCCB can also be quickly reset after the fault has been cleared.

A molded case switch (MCS) is used in applications requiring only a non-fused disconnect.

C5

Explosion-Proof Starters

Series CAT7 & CAT9

Maximum Horsepower Three Phase				Without Short Circuit Protection	D I M	MCCB Amps	With Thermal Magnetic Circuit Breaker (MCCB)	D I M	With Non Fusible Disconnect		D I M
200V	230V	460V	575V	Catalog No.	①		Catalog No.	①	Catalog No.	Price	①
2	2	5	5	CAT7-30-*◆-E0	A7	15	CAT7-30-*◆-TB15E0	E7	To order, select equivalent Thermal-Magnetic Circuit Breaker catalog number from this chart. Specify on order, "With molded case switch."		
2	2	5	5	CAT7-30-*◆-E0	A7	15	CAT7-30-*◆-TBH15E0	E7			
3	3	7.5	10	CAT7-30-*◆-E0	A7	20	CAT7-30-*◆-TB20E0	E7			
3	3	7.5	10	CAT7-30-*◆-E0	A7	20	CAT7-30-*◆-TBH20E0	E7			
~	5	10	~	CAT7-30-*◆-E0	A7	30	CAT7-30-*◆-TB30E0	E7			
5	~	~	15	CAT7-30-*◆-E0	A7	35	CAT7-30-*◆-TB35E0	E7			
5	~	~	15	CAT7-30-*◆-E0	A7	35	CAT7-30-*◆-TBH35E0	E7			
~	7.5	15	20	CAT7-30-*◆-E0	A7	40	CAT7-30-*◆-TB40E0	E7			
~	7.5	15	20	CAT7-30-*◆-E0	A7	40	CAT7-30-*◆-TBH40E0	E7			
7.5	10	20	25	CAT7-30-*◆-E0	A7	50	CAT7-30-*◆-TB50E0	E7			
7.5	~	20	25	CAT7-30-*◆-E0	A7	50	CAT7-30-*◆-TBH50E0	E7			
10	10	25	30	CAT7-37-*◆-E0	A7	50	CAT7-37-*◆-TB50E0	E7			
10	10	~	30	CAT7-37-*◆-E0	A7	50	CAT7-37-*◆-TBH50E0	E7			
~	~	30	~	CAT7-43-*◆-E0	A7	70	CAT7-43-*◆-TB70E0	E7			
~	15	~	~	CAT7-43-*◆-E0	A7	80	CAT7-43-*◆-TB80E0	E7			
15	20	40	40	CAT7-55-*◆-E0	A7	80	CAT7-55-*◆-TB80E0	E7			
15	20	40	40	CAT7-55-*◆-E0	A7	80	CAT7-55-*◆-TBH80E0	E7			
~	~	~	40	CAT7-60-*◆-E0	A7	80	CAT7-60-*◆-TB80E0	F7			
~	~	~	40	CAT7-60-*◆-E0	A7	80	CAT7-60-*◆-TBH80E0	F7			
15	20	40	50	CAT7-60-*◆-E0	A7	100	CAT7-60-*◆-TB100E0	F7			
15	20	40	50	CAT7-60-*◆-E0	A7	100	CAT7-60-*◆-TBH100E0	F7			
20	25	50	60	CAT7-72-*◆-E0	A7	125	CAT7-72-*◆-TB125E0	F7			
20	25	50	60	CAT7-72-*◆-E0	A7	125	CAT7-72-*◆-TBH125E0	F7			
25	30	60	~	CAT7-85-*◆-E0	A7	125	CAT7-85-*◆-TB125E0	F7			
~	~	~	75	CAT7-97-*◆-E0	A7	150	CAT7-97-*◆-TB150E0	F7			
~	~	~	75	CAT7-97-*◆-E0	A7	150	CAT7-97-*◆-TBH150E0	F7			
30	~	75	~	CAT7-97-*◆-E0	A7	175	CAT7-97-*◆-TB175E0	F7			
30	~	75	~	CAT9-116-*◆-E0	B7	175	CAT9-116-*◆-TB175E0	G7			
~	40	~	100	CAT9-116-*◆-E0	B7	200	CAT9-116-*◆-TB200E0	G7			
40	~	100	125	CAT9-146-*◆-E0	B7	225	CAT9-146-*◆-TB225E0	G7			
~	50	~	~	CAT9-146-*◆-E0	B7	250	CAT9-146-*◆-TB250E0	G7			
50	60	125	150	CAT9-190-*◆-E0	C7	300	CAT9-190-*◆-TB300E0	H7			
60	75	150	200	CAT9-205-*◆-E0	C7	350	CAT9-205-*◆-TB350E0	H7			
75	~	175	~	CAT9-265-*◆-E0	D7	400	CAT9-265-*◆-TB400E0	H7			
~	100	200	250	CAT9-265-*◆-E0	D7	450	CAT9-265-*◆-TB450E0	H7			
100	~	~	~	CAT9-305-*◆-E0	D7	500	CAT9-305-*◆-TB500E0	H7			
~	125	250	300	CAT9-305-*◆-E0	D7	600	CAT9-305-*◆-TB600E0	H7			
~	~	~	350	CAT9-370-*◆-E0	D7	600	CAT9-370-*◆-TB600E0	H7			
125	150	300	~	CAT9-370-*◆-E0	D7	700	CAT9-370-*◆-TB700E0	H7			
125	150	~	400	CAT9-400-EI-*◆-E0	D7	700	CAT9-400-EI-*◆-TB700E0	H7			
~	~	350	~	CAT9-400-EI-*◆-E0	D7	800	CAT9-400-EI-*◆-TB800E0	H7			
150	~	~	~	CAT9-460-EI-*◆-E0	D7	800	CAT9-460-EI-*◆-TB800E0	H7			
~	200	400	500	CAT9-460-EI-*◆-E0	D7	1000	CAT9-460-EI-*◆-TB1000E0	H7			
200	~	~	600	CAT9-580-EI-*◆-E0	R/F	1000	CAT9-580-EI-*◆-TB1000E0	R/F			
~	250	500	~	CAT9-580-EI-*◆-E0	R/F	1200	CAT9-580-EI-*◆-TB1200E0	R/F			


Larger sizes and reversing starters available. Contact your Sprecher + Schuh representative.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② Enclosures have gaskets for outdoor use (Type 4).
- ③ Applicable to 600Y/347V only.
- ④ The short circuit and kAIC is relegated to the contactor's 10kA. Contact your Sprecher + Schuh representative for a higher kAIC.
- ⑤ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAT9-116-*◆-TB175E0 becomes CAT9-116-EI-*◆-TB175E0. See page C8:3 for price adder.

Pilot Device Kits – NEMA Type 4/4X/7/9 Applications (For use with Explosion Proof Enclosures)

Kits	Description	Contact Blocks included		Catalog Number
		NO	NC	
	START Pushbutton Green, Non-illuminated, momentary, with legend ❶❷	1	0	XHPB-BT4-XNP
	STOP Pushbutton Red, Non-illuminated, momentary, with legend ❶❷	0	1	XHPB-BT5-XNP
	DUAL Pushbutton Non-illuminated, momentary	1	1	XHDPB-BT1A
	OFF-ON Selector Switch Non-illuminated, maintained, with legend	1	0	XHSS-1-BT4-XNP/OFF-ON
	HAND-AUTO Selector Switch Non-illuminated, maintained, with legend	1	1	XHSS-1-BT1A-XNP/HAND-AUTO
	HAND-OFF-AUTO Selector Switch Non-illuminated, maintained, with legend	2	0	XHSS-3-BT2-XNP/HAND-OFF-AUTO
	FWD-OFF-REV Selector Switch Non-illuminated, maintained, with legend	2	0	XHSS-3-BT2-XNP/FWD-OFF-REV
	RED EMERGENCY STOP Pushbutton Non-illuminated, maintained push-pull, with legend	1	1	XHPPM-BT1A-XNP/ESTOP
	Mechanical RESET Pushbutton	0	0	XRB
	GUARDED Pilot Light ❸ 120V incandescent, screw terminations	Amber Blue Clear Green Red White		XLAT-GH XLBT-GH XLCT-GH XLGT-GH XLRT-GH XLWT-GH
	PUSHBUTTON LOCKOUT - Accessory Padlock device to activate pushbutton	~		XHPL
	OPERATOR PROTECTIVE BOOT Rubber push button cap	Green Red		XBG XBR
	OPERATOR PROTECTIVE BOOT Rubber selector switch cap	Black		XBSB
	COMBINATION BREATHER/DRAIN ❹ Install on top of enclosure for Breather Install in bottom of enclosure for Drain	Stainless steel		XDBH2

❶ Legend Plates are anodized aluminum with engraved letters on black background (XNP).

❷ STOP has red background. START has green background.

❸ One of the NPSM hole locations on the A7 dimensional enclosure could create the need for a short pilot light. Refer to factory for details.

❹ Requires purchase of 2 pcs for application of both Breather and Drain.

Multispeed Starters

Versatile starters for any multispeed motor or application

C5

Multi-Speed Starters



Sprecher + Schuh multispeed starters can produce multiple constant speeds by specially arranging the windings of multispeed motors. Motors with two separate windings or one reconnectable winding can be used.

All Sprecher + Schuh multispeed starters feature our CAT7 and CAT9 motor starters. These compact starters offer intermediate sizes to better match specific motor requirements. This equates to generous wiring space and less wasted horsepower capacity. Advanced CEP7 solid state overload relays are used with starters. See Section B in this catalog for a full description of these excellent motor protection relays.

Choose the right starter for your application

Multispeed motors fall into three types, all with differing torque characteristics. Selecting the proper type depends on the connected load.

Constant Torque motors deliver the same torque at each speed, and horsepower varies directly with the speed. Typical applications include reciprocating pumps, conveyors, mills and mixers.

Constant Horsepower motors deliver the same horsepower at each speed and the torque varies inversely with the speed. Typical applications include machine tools such as drills, lathes, mills, punch presses and saws.

Variable Torque (variable horsepower) motors deliver a torque that varies directly with the speed and the horsepower varies directly with the square of the speed. Typical applications include centrifugal pumps, fans and blowers.

Control options

The four common forms of control for multispeed starters are known as selective, compelling, progressive and decelerating. Standard multispeed starters



are wired for selective control. The other control options are available as factory modifications.


Selective Control permits starting the motor on any desired speed. To increase the speed of a running motor, press the desired speed button. To change to a lower speed, the STOP button must be pressed before selecting a new speed.

Compelling Control requires that the motor always be started at the lowest speed. To reach higher speeds, the push buttons must be operated in the speed sequence. To change to a lower speed, the STOP button must be pressed before selecting a new speed.

Progressive Control provides automatic, timed acceleration of the motor to the selected speed by energizing the windings progressively from the lowest to the desired speed. To change to a lower speed, the STOP button must be pressed before selecting a new speed.

Decelerating Control provides automatic time delay to a lower speed. This type of control allows the motor to decelerate from a high speed before automatically restarting the motor in a lower speed. Decelerating Control prevents damage to the motor or machine when high inertia loads are switched to a lower speed.

Contact your Sprecher + Schuh representative for more information.

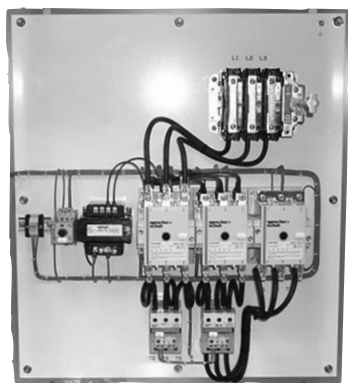

Custom 2-speed, 1-winding combination starter with control transformer and deceleration relay, mounted in a Type-1 enclosure

Two Separate Windings CAZTT7/CAZTT9 & CAZHT7/CAZHT9 ③

Maximum Horsepower Three Phase				Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corr Resist Non-metallic	D I M
200V	230V	460V	575V	Catalog No.	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
Constant or Variable Torque - CAZTT ③												
				CAZTT	CAZTT		CAZTT		CAZTT		CAZTT	
2	2	5	7 1/2	7-9-♦-◆	7-9-♦-◆-G0	M	7-9-♦-◆-D0	M	7-9-♦-◆-W0	N	7-9-♦-◆-C0	U1
3	3	7 1/2	10	7-12-♦-◆	7-12-♦-◆-G0	M	7-12-♦-◆-D0	M	7-12-♦-◆-W0	N	7-12-♦-◆-C0	U1
5	5	10	15	7-16-♦-◆	7-16-♦-◆-G0	M	7-16-♦-◆-D0	M	7-16-♦-◆-W0	N	7-16-♦-◆-C0	U1
5	7 1/2	15	15	7-23-♦-◆	7-23-♦-◆-G0	M	7-23-♦-◆-D0	M	7-23-♦-◆-W0	N	7-23-♦-◆-C0	U1
7 1/2	10	20	25	7-30-♦-◆	7-30-♦-◆-G0	M	7-30-♦-◆-D0	M	7-30-♦-◆-W0	O	7-30-♦-◆-C0	U1
10	10	25	30	7-37-♦-◆	7-37-♦-◆-G0	M	7-37-♦-◆-D0	M	7-37-♦-◆-W0	O	7-37-♦-◆-C0	U1
10	15	30	30	7-43-♦-◆	7-43-♦-◆-G0	M	7-43-♦-◆-D0	M	7-43-♦-◆-W0	O	7-43-♦-◆-C0	U1
15	20	40	40	7-55-♦-◆	7-55-♦-◆-G0	M	7-55-♦-◆-D0	M	7-55-♦-◆-W0	O	7-55-♦-◆-C0	U1
15	20	40	50	7-60-♦-◆	7-60-♦-◆-G0	C	7-60-♦-◆-D0	O	7-60-♦-◆-W0	O	7-60-♦-◆-C0	V1
20	25	50	60	7-72-♦-◆	7-72-♦-◆-G0	C	7-72-♦-◆-D0	O	7-72-♦-◆-W0	O	7-72-♦-◆-C0	V1
25	30	60	60	7-85-♦-◆	7-85-♦-◆-G0	C	7-85-♦-◆-D0	O	7-85-♦-◆-W0	O	7-85-♦-◆-C0	V1
30	30	75	75	7-97-♦-◆	7-97-♦-◆-G0	C	7-97-♦-◆-D0	O	7-97-♦-◆-W0	O	7-97-♦-◆-C0	V1
30	40	75	100	9-116-♦-◆ ④	9-116-♦-◆-G0 ④	E2	9-116-♦-◆-D0 ④	R2	9-116-♦-◆-W0 ④	R2	9-116-♦-◆-C0 ④	W2
40	50	100	125	9-146-♦-◆ ④	9-146-♦-◆-G0 ④	G	9-146-♦-◆-D0 ④	T	9-146-♦-◆-W0 ④	T	9-146-♦-◆-C0 ④	X1
Constant Horsepower - CAZHT ③												
				CAZHT	CAZHT		CAZHT		CAZHT		CAZHT	
1 1/2	1 1/2	3	5	7-9-♦-◆	7-9-♦-◆-G0	M	7-9-♦-◆-D0	M	7-9-♦-◆-W0	N	7-9-♦-◆-C0	U1
2	2	5	7 1/2	7-12-♦-◆	7-12-♦-◆-G0	M	7-12-♦-◆-D0	M	7-12-♦-◆-W0	N	7-12-♦-◆-C0	U1
3	3	7 1/2	10	7-16-♦-◆	7-16-♦-◆-G0	M	7-16-♦-◆-D0	M	7-16-♦-◆-W0	N	7-16-♦-◆-C0	U1
3	5	10	10	7-23-♦-◆	7-23-♦-◆-G0	M	7-23-♦-◆-D0	M	7-23-♦-◆-W0	N	7-23-♦-◆-C0	U1
5	7 1/2	15	20	7-30-♦-◆	7-30-♦-◆-G0	M	7-30-♦-◆-D0	M	7-30-♦-◆-W0	O	7-30-♦-◆-C0	U1
7 1/2	7 1/2	20	25	7-37-♦-◆	7-37-♦-◆-G0	M	7-37-♦-◆-D0	M	7-37-♦-◆-W0	O	7-37-♦-◆-C0	U1
7 1/2	10	25	25	7-43-♦-◆	7-43-♦-◆-G0	M	7-43-♦-◆-D0	M	7-43-♦-◆-W0	O	7-43-♦-◆-C0	U1
10	15	30	30	7-55-♦-◆	7-55-♦-◆-G0	M	7-55-♦-◆-D0	M	7-55-♦-◆-W0	O	7-55-♦-◆-C0	U1
10	15	30	40	7-60-♦-◆	7-60-♦-◆-G0	C	7-60-♦-◆-D0	O	7-60-♦-◆-W0	O	7-60-♦-◆-C0	V1
15	20	40	50	7-72-♦-◆	7-72-♦-◆-G0	C	7-72-♦-◆-D0	O	7-72-♦-◆-W0	O	7-72-♦-◆-C0	V1
20	25	50	50	7-85-♦-◆	7-85-♦-◆-G0	C	7-85-♦-◆-D0	O	7-85-♦-◆-W0	O	7-85-♦-◆-C0	V1
25	25	60	60	7-97-♦-◆	7-97-♦-◆-G0	C	7-97-♦-◆-D0	O	7-97-♦-◆-W0	O	7-97-♦-◆-C0	V1
~	30	60	75	9-116-♦-◆ ④	9-116-♦-◆-G0 ④	E2	9-116-♦-◆-D0 ④	R2	9-116-♦-◆-W0 ④	R2	9-116-♦-◆-C0 ④	W2
30	40	75	100	9-146-♦-◆ ④	9-146-♦-◆-G0 ④	G	9-146-♦-◆-D0 ④	T	9-146-♦-◆-W0 ④	T	9-146-♦-◆-C0 ④	X1

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (♦) with Coil Code	See page C8:3
Replace (◆) with O/L Relay for each speed	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAZTT7-23-♦-◆-D0 becomes CAZTT7-23-♦-◆-R0. Price remains the same.
- ③ All standard multispeed starters are wired for selective control. For compelling, progressive or automatic acceleration control, see Factory Modifications.
- ④ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAZTT9-116-♦-◆-G0 becomes CAZTT9-116-EI-♦-◆-G0. See page C8:3 for price adder.

One Reconnectable Winding CAETT7/CAETT9 & CAEHT7/CAEHT9

Maximum Horsepower Three Phase				Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corr Resist Non-metallic	D I M
200V	230V	460V	575V	Catalog No.	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
Constant or Variable Torque - CAETT ③												
				CAETT	CAETT		CAETT		CAETT		CAETT	
2	2	5	7 1/2	7-9-*◆	7-9-*◆-G0	C	7-9-*◆-D0	O	7-9-*◆-W0	O	7-9-*◆-C0	V1
3	3	7 1/2	10	7-12-*◆	7-12-*◆-G0	C	7-12-*◆-D0	O	7-12-*◆-W0	O	7-12-*◆-C0	V1
5	5	10	15	7-16-*◆	7-16-*◆-G0	C	7-16-*◆-D0	O	7-16-*◆-W0	O	7-16-*◆-C0	V1
5	7 1/2	15	15	7-23-*◆	7-23-*◆-G0	C	7-23-*◆-D0	O	7-23-*◆-W0	O	7-23-*◆-C0	V1
7 1/2	10	20	25	7-30-*◆	7-30-*◆-G0	C	7-30-*◆-D0	O	7-30-*◆-W0	O	7-30-*◆-C0	V1
10	10	25	30	7-37-*◆	7-37-*◆-G0	C	7-37-*◆-D0	O	7-37-*◆-W0	O	7-37-*◆-C0	V1
10	15	30	30	7-43-*◆	7-43-*◆-G0	C	7-43-*◆-D0	O	7-43-*◆-W0	O	7-43-*◆-C0	V1
15	20	40	40	7-55-*◆	7-55-*◆-G0	C	7-55-*◆-D0	O	7-55-*◆-W0	O	7-55-*◆-C0	V1
15	20	40	50	7-60-*◆	7-60-*◆-G0	D	7-60-*◆-D0	O	7-60-*◆-W0	O	7-60-*◆-C0	W1
20	25	50	60	7-72-*◆	7-72-*◆-G0	D	7-72-*◆-D0	Q	7-72-*◆-W0	Q	7-72-*◆-C0	W1
25	30	60	60	7-85-*◆	7-85-*◆-G0	D	7-85-*◆-D0	Q	7-85-*◆-W0	Q	7-85-*◆-C0	W1
30	30	75	75	7-97-*◆	7-97-*◆-G0	D	7-97-*◆-D0	Q	7-97-*◆-W0	Q	7-97-*◆-C0	W1
30	40	75	100	9-116-*◆④	9-116-*◆-G0④	G	9-116-*◆-D0④	T	9-116-*◆-W0④	T	9-116-*◆-C0④	A2
40	50	100	125	9-146-*◆④	9-146-*◆-G0④	G	9-146-*◆-D0④	T	9-146-*◆-W0④	T	9-146-*◆-C0④	A2
Constant Horsepower - CAEHT ③												
				CAEHT	CAEHT		CAEHT		CAEHT		CAEHT	
1 1/2	1 1/2	3	5	7-9-*◆	7-9-*◆-G0	C	7-9-*◆-D0	O	7-9-*◆-W0	O	7-9-*◆-C0	V1
2	2	5	7 1/2	7-12-*◆	7-12-*◆-G0	C	7-12-*◆-D0	O	7-12-*◆-W0	O	7-12-*◆-C0	V1
3	3	7 1/2	10	7-16-*◆	7-16-*◆-G0	C	7-16-*◆-D0	O	7-16-*◆-W0	O	7-16-*◆-C0	V1
3	5	10	10	7-23-*◆	7-23-*◆-G0	C	7-23-*◆-D0	O	7-23-*◆-W0	O	7-23-*◆-C0	V1
5	7 1/2	15	20	7-30-*◆	7-30-*◆-G0	C	7-30-*◆-D0	O	7-30-*◆-W0	O	7-30-*◆-C0	V1
7 1/2	7 1/2	20	25	7-37-*◆	7-37-*◆-G0	C	7-37-*◆-D0	O	7-37-*◆-W0	O	7-37-*◆-C0	V1
7 1/2	10	25	25	7-43-*◆	7-43-*◆-G0	C	7-43-*◆-D0	O	7-43-*◆-W0	O	7-43-*◆-C0	V1
10	15	30	30	7-55-*◆	7-55-*◆-G0	C	7-55-*◆-D0	O	7-55-*◆-W0	O	7-55-*◆-C0	V1
10	15	30	40	7-60-*◆	7-60-*◆-G0	D	7-60-*◆-D0	O	7-60-*◆-W0	O	7-60-*◆-C0	W1
15	20	40	50	7-72-*◆	7-72-*◆-G0	D	7-72-*◆-D0	Q	7-72-*◆-W0	Q	7-72-*◆-C0	W1
20	25	50	50	7-85-*◆	7-85-*◆-G0	D	7-85-*◆-D0	Q	7-85-*◆-W0	Q	7-85-*◆-C0	W1
25	25	60	60	7-97-*◆	7-97-*◆-G0	D	7-97-*◆-D0	Q	7-97-*◆-W0	Q	7-97-*◆-C0	W1
~	30	60	75	9-116-*◆④	9-116-*◆-G0④	G	9-116-*◆-D0④	T	9-116-*◆-W0④	T	9-116-*◆-C0④	A2
30	40	75	100	9-146-*◆④	9-146-*◆-G0④	G	9-146-*◆-D0④	T	9-146-*◆-W0④	T	9-146-*◆-C0④	A2

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

① Dimensional information starts on page C8:23.

② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAETT7-23-*◆-D0 becomes CAETT7-23-*◆-R0. Price remains the same.

③ All standard multispeed starters are wired for selective control. For compelling, progressive or automatic acceleration control, see Factory Modifications.

④ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAEHT9-116-*◆-G0 becomes CAEHT9-116-EI-*◆-G0. See page C8:3 for price adder.

Combination Multi-Speed Starter Options Availability ❶

Circuit Breaker or Disconnect Switch	Enclosure Type	Price (Add to base multi-speed starter list price)				
		7-9 7-12 7-16	7-23 7-30	7-37 7-43 7-55	7-60 7-72 7-85 7-97	9-116 (-EI) 9-146 (-EI)
Thermal Magnetic Circuit Breaker	Type 1	✓	✓	✓	✓	✓
	Type 4/4X	✓	✓	✓	✓	✓
	Type 12	✓	✓	✓	✓	✓
Non Fusible Disconnect	Type 1	✓	✓	✓	✓	✓
	Type 4/4X	✓	✓	✓	✓	✓
	Type 12	✓	✓	✓	✓	✓
Fusible Disconnect - 30 Amp	Type 1	✓	✓	~	~	~
	Type 4/4X	✓	✓	~	~	~
	Type 12	✓	✓	~	~	~
Fusible Disconnect - 60 Amp	Type 1	~	~	✓	~	~
	Type 4/4X	~	~	✓	~	~
	Type 12	~	~	✓	~	~
Fusible Disconnect - 100 Amp	Type 1	~	~	~	✓	~
	Type 4/4X	~	~	~	✓	~
	Type 12	~	~	~	✓	~
Fusible Disconnect - 200 Amp	Type 1	~	~	~	✓	✓
	Type 4/4X	~	~	~	✓	✓
	Type 12	~	~	~	✓	✓

C5
Multi-Speed Starters

❶ Refer to pages C4-C5 for information on modifying standard multispeed catalog number to combination type. Price adders may apply. Contact Sprecher + Schuh Technical Support.

Reduced Voltage Starters

Controlled starting for low in-rush and smooth operation

C5
Reduced Voltage Starters



Sprecher + Schuh reduced voltage starters are designed for starting squirrel cage induction motors where the starting current of a motor is likely to exceed local power company restrictions, interfere with plant operations or where the load may be damaged by high starting torques.

Starting with the best

All Sprecher + Schuh reduced voltage starters feature our CAT7 and CAT9 line of motor starters. These compact starters offer intermediate sizes to better match specific motor requirements. This equates to generous wiring space and less wasted horsepower capacity. Our advanced CEP7 solid state overload relays are used with starters. See Section B in this catalog for a full description of these excellent motor protection relays.

Choosing the right reduced voltage method

Autotransformer Starter – At starting, three autotransformers (one for each phase) are automatically connected in series with the motor. The voltage at the motor is reduced to either 50%, 65% or 80% depending on which voltage tap was selected. After a timed interval, a

contactor connects the motor across-the-line and shorts out the autotransformers. Factory standard autotransformers are rated for “medium duty” as defined by NEMA.

Part Winding Starter – This type of starting requires that the motor winding be in two equal parts, and that at least six terminal leads be provided on the motor. At starting, the controller is arranged to connect one section of the winding to the supply lines. After a timed interval, a second contactor connects the other section of the motor winding to the supply lines, in parallel with the first.

Wye-Delta Starter – This type of starting requires a special wye-delta motor. Both ends of the motor’s three windings are brought out so they are accessible for reconnecting from wye to delta. At starting, the controller connects the motor in the wye configuration. After a timed interval, a second contactor connects the motor in a delta configuration.

The reference chart below compares all three reduced voltage starting methods and contrasts them with across-the-line starting.

Reduced Voltage Comparison Table

Type of Starter	Starting Characteristics			Advantages	Disadvantages
	Voltage @ Motor	Line Current	Starting Torque		
Across-The-Line	100%	100%	100%	- Least expensive. - Simple to maintain. - Highest starting torque. - Readily available. - Lowest installation cost.	- High starting inrush may exceed limits of local utility or electrical system. - Starting torque may be too high for the application. - Limited to smaller horsepower motors.
Autotransformer	80% 65% 50%	64% 42% 25%	64% 42% 25%	- Provides highest torque per ampere of line current. - Three different taps on transformer permit adjustment of starting voltage. - Suitable for long starting periods. - Closed transition starting. - Uses standard motor..	- In lower horsepower, is the most expensive design. - Low power factor. - Large physical size. - High installation cost.
Part Winding	100%	65%	42%	- Least expensive of all reduced voltage starters. - Closed transition starting. - Small physical size. - Most dual voltage motors can be used. - Simple design. - Low installation cost.	- Poor torque efficiency - Unsuited for high inertia, long starting loads. - Motor may not accelerate during start period. - Requires special motor design for voltages higher than 230 volts.
Wye-Delta	100%	33%	33%	- Suitable for high inertia, long acceleration loads. - High torque efficiency. - Ideal for especially stringent inrush restrictions. - Ideal for frequent starts.	- Requires special motor design. - Low starting torque. - Open transition (closed available). - Complex design.

Autotransformer 10 HP to 125 HP (Closed Transition - Type 1 General Purpose Enclosure) ④

Maximum H.P.	3 Ø Volts	Without Short Circuit Protection Catalog No.	D I M ①	MCCB Amps	With Thermal Magnetic Circuit Breaker (MCCB) Catalog No.	D I M ①	Fuse Clip Amps ③	With Fusible Disconnect ②⑤ Catalog No.	D I M ①
		CAAT			CAAT			CAAT	
10	200	BA7-37-*♦-G0	F	50	BA7-37-*♦-TB50G0	S	60	BA7-37-*♦-JF62G0	S
	230	BB7-37-*♦-G0	F	50	BB7-37-*♦-TB50G0	S	60	BB7-37-*♦-JF62G0	S
15	200	CA7-60-*♦-G0	F	100	CA7-60-*♦-TB100G0	S	100	CA7-60-*♦-JF63G0	S
	230	CB7-43-*♦-G0	F	80	CB7-43-*♦-TB80G0	S	100	CB7-43-*♦-JF63G0	S
20	200	DA7-72-*♦-G0	F	125	DA7-72-*♦-TB125G0	S	100	DA7-72-*♦-JF63G0	S
	230	DB7-60-*♦-G0	F	100	DB7-60-*♦-TB100G0	S	100	DB7-60-*♦-JF63G0	S
25	200	EA7-85-*♦-G0	F	125	EA7-85-*♦-TB125G0	S	200	EA7-85-*♦-JF64G0	S
	230	EB7-72-*♦-G0	F	125	EB7-72-*♦-TB125G0	S	100	EB7-72-*♦-JF63G0	S
	460	EC7-37-*♦-G0	F	50	EC7-37-*♦-TB50G0	S	60	EC7-37-*♦-JF62G0	S
30	200	FA7-97-*♦-G0	F	175	FA7-97-*♦-TB175G0 ⑥	S	200	FA7-97-*♦-JF64G0	I
	230	FB7-85-*♦-G0	F	125	FB7-85-*♦-TB125G0	S	200	FB7-85-*♦-JF64G0	S
	460	FC7-43-*♦-G0	F	70	FC7-43-*♦-TB70G0	S	60	FC7-43-*♦-JF62G0	S
	575	FD7-37-*♦-G0	F	50	FD7-37-*♦-TBH50G0	S	60	FD7-37-*♦-JF62G0	S
40	200	GA9-146-*♦-G0 ⑦	H	225	GA9-146-*♦-TB225G0 ⑦	J	200	GA9-146-*♦-JF64G0 ⑦	J
	230	GB9-116-*♦-G0 ⑦	H	200	GB9-116-*♦-TB200G0 ⑦	J	200	GB9-116-*♦-JF64G0 ⑦	J
	460	GC7-60-*♦-G0	F	100	GC7-60-*♦-TB100G0	S	100	GC7-60-*♦-JF63G0	S
	575	GD7-60-*♦-G0	F	80	GD7-60-*♦-TBH80G0	S	60	GD7-60-*♦-JF62G0	S
50	200	HA9-190-*♦-G0 ⑦	I	300	HA9-190-*♦-TB300G0 ⑦	J	400	HA9-190-*♦-JF65G0 ⑦	K3
	230	HB9-146-*♦-G0 ⑦	I	250	HB9-146-*♦-TB250G0 ⑦	J	200	HB9-146-*♦-JF64G0 ⑦	J
	460	HC7-72-*♦-G0	F	125	HC7-72-*♦-TB125G0	S	100	HC7-72-*♦-JF63G0	S
	575	HD7-60-*♦-G0	F	100	HD7-60-*♦-TBH100G0	S	100	HD7-60-*♦-JF63G0	S
60	200	JA9-205-*♦-G0 ⑦	J	350	JA9-205-*♦-TB350G0 ⑦	J	400	JA9-205-*♦-JF65G0 ⑦	K3
	230	JB9-190-*♦-G0 ⑦	I	300	JB9-190-*♦-TB300G0 ⑦	J	400	JB9-190-*♦-JF65G0 ⑦	K3
	460	JC7-85-*♦-G0	F	125	JC7-85-*♦-TB125G0	S	200	JC7-85-*♦-JF64G0	S
	575	JD7-72-*♦-G0	F	125	JD7-72-*♦-TBH125G0	S	100	JD7-72-*♦-JF63G0	S
75	200	KA9-265-*♦-G0 ⑦	J	400	KA9-265-*♦-TB400G0 ⑦	K2	400	KA9-265-*♦-JF65G0 ⑦	K2
	230	KB9-205-*♦-G0 ⑦	J	350	KB9-205-*♦-TB350G0 ⑦	K2	400	KB9-205-*♦-JF65G0 ⑦	K2
	460	KC7-97-*♦-G0	F	175	KC7-97-*♦-TB175G0 ⑥	S	200	KC7-97-*♦-JF64G0	I
	575	KD7-97-*♦-G0	F	150	KD7-97-*♦-TBH150G0 ⑥	S	200	KD7-97-*♦-JF64G0	I
100	200	LA9-305-*♦-G0 ⑦	J2	500	LA9-305-*♦-TB500G0 ⑦	K2	600	LA9-305-*♦-JF66G0 ⑦	K2
	230	LB9-265-*♦-G0 ⑦	J	450	LB9-265-*♦-TB450G0 ⑦	K2	400	LB9-265-*♦-JF65G0 ⑦	K2
	460	LC9-146-*♦-G0 ⑦	I	225	LC9-146-*♦-TBH225G0 ⑦	J	200	LC9-146-*♦-JF64G0 ⑦	J
	575	LD9-116-*♦-G0 ⑦	H	200	LD9-116-*♦-TBH200G0 ⑦	J	200	LD9-116-*♦-JF64G0 ⑦	J
125	200	MA9-370-*♦-G0 ⑦	J2	700	MA9-370-*♦-TB700G0 ⑦	K2	600	MA9-370-*♦-JF66G0 ⑦	K2
	230	MB9-305-*♦-G0 ⑦	J2	600	MB9-305-*♦-TB600G0 ⑦	K2	600	MB9-305-*♦-JF66G0 ⑦	K2
	460	MC9-190-*♦-G0 ⑦	I	300	MC9-190-*♦-TB300G0 ⑦	J	400	MC9-190-*♦-JF65G0 ⑦	K3
	575	MD9-146-*♦-G0 ⑦	I	225	MD9-146-*♦-TBH225G0 ⑦	J	200	MD9-146-*♦-JF64G0 ⑦	J

Larger Horsepower Continued On Next Page ➡

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Replace (♦) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

① Dimensional information starts on page C8:23.

② For Non-fusible Disconnect applications, replace the "JF" characters with "JU". Example: CAATHC7-72-*♦-JF63G0 becomes CAATHC7-72-*♦-JU63G0.

③ Fuse clips sized for use with "J"-type fuses.

④ Other enclosures available. Contact your Sprecher + Schuh Representative.

⑤ A Red and Yellow Handle may be selected instead of the standard Gray and Black handle. Change "JF" to "LF" in catalog number.

⑥ The short circuit and kAIC is relegated to the contactor's 10kA. Contact your Sprecher + Schuh representative for a higher kAIC.

⑦ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". For example: CAATGB9-116-*♦-G0 becomes CAATGB9-116-EI-*♦-G0. See page C8:3 for price adder.

Autotransformer 150 HP to 1000 HP (Closed Transition - Type 1 General Purpose Enclosure) ④

Maximum H.P.	3 Ø Volts	Without Short Circuit Protection Catalog No.	D I M ①	MCCB Amps	With Thermal Magnetic Circuit Breaker (MCCB) Catalog No.	D I M ①	Fuse Clip Amps ③	With Fusible Disconnect ②⑤ Catalog No.	D I M ①
		CAAT			CAAT			CAAT	
150	200	NA9-460-EI-✱-◆-G0	J2	800	NA9-460-EI-✱-◆-TB800G0	R/F	800	NA9-460-EI-✱-◆-JF67G0	~
	230	NB9-370-✱-◆-G0 ⑥	J2	700	NB9-370-✱-◆-TB700G0 ⑥	K2	600	NB9-370-✱-◆-JF66G0 ⑥	K2
	460	NC9-205-✱-◆-G0 ⑥	I	350	NC9-205-✱-◆-TB350G0 ⑥	J	400	NC9-205-✱-◆-JF65G0 ⑥	K3
	575	ND9-190-✱-◆-G0 ⑥	I	300	ND9-190-✱-◆-TB300G0 ⑥	J	400	ND9-190-✱-◆-JF65G0 ⑥	K3
200	230	OB9-460-EI-✱-◆-G0	~	1000	OB9-460-EI-✱-◆-TB1000G0	~	800	OB9-460-EI-✱-◆-JF67G0	~
	460	OC9-265-✱-◆-G0 ⑥	J	450	OC9-265-✱-◆-TB450G0 ⑥	K2	400	OC9-265-✱-◆-JF65G0 ⑥	K2
	575	OD9-205-✱-◆-G0 ⑥	J	350	OD9-205-✱-◆-TB450G0 ⑥	K2	400	OD9-205-✱-◆-JF65G0 ⑥	K3
250	230	PB9-580-EI-✱-◆-G0	~		Refer to Factory	~		Refer to Factory	~
	460	PC9-305-✱-◆-G0 ⑥	J2	600	PC9-305-✱-◆-TB600G0 ⑥	K2	600	PC9-305-✱-◆-JF66G0 ⑥	K2
	575	PD9-265-✱-◆-G0 ⑥	J	450	PD9-265-✱-◆-TB450G0 ⑥	K2	400	PD9-265-✱-◆-JF65G0 ⑥	K2
300	230	QB9-750-EI-✱-◆-G0	~		Refer to Factory	~		Refer to Factory	~
	460	QC9-370-✱-◆-G0 ⑥	J2	700	QC9-370-✱-◆-TB700G0 ⑥	K2	600	QC9-370-✱-◆-JF66G0 ⑥	K2
	575	QD9-305-✱-◆-G0 ⑥	J2	600	QD9-305-✱-◆-TB600G0 ⑥	K2	600	QD9-305-✱-◆-JF66G0 ⑥	K2
350	230	Refer to Factory	~		Refer to Factory	~		Refer to Factory	~
	460	RC9-400-EI-✱-◆-G0	J2	800	RC9-400-EI-✱-◆-TB800G0	RF	800	RC9-400-EI-✱-◆-JF67G0	~
	575	RD9-370-✱-◆-G0 ⑥	J2	600	RD9-370-✱-◆-TB600G0 ⑥	K2	600	RD9-370-✱-◆-JF66G0 ⑥	K2
400	230	Refer to Factory	~		Refer to Factory	~		Refer to Factory	~
	460	SC9-460-EI-✱-◆-G0	~	1000	SC9-460-EI-✱-◆-TB1000G0	~	800	SC9-460-EI-✱-◆-JF67G0	~
	575	SD9-400-EI-✱-◆-G0	J2	700	SD9-400-EI-✱-◆-TB700G0	K2	600	SD9-400-EI-✱-◆-JF66G0	~
450	230	Refer to Factory	~		Refer to Factory	~		Refer to Factory	
	460	TC9-580-EI-✱-◆-G0	~		Refer to Factory	~			
	575	TD9-460-EI-✱-◆-G0	~	800	TD9-460-EI-✱-◆-TB800G0	~			
500	460	UC9-580-EI-✱-◆-G0	~		Refer to Factory	~			
	575	UD9-460-EI-✱-◆-G0	~	900	Refer to Factory	~			
600	460	UC9-750-EI-✱-◆-G0	~		Refer to Factory	~			
	575	UD9-580-EI-✱-◆-G0	~						

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Non-fusible Disconnect applications, replace the "JF" characters with "JU".
Example: CAATNC9-205-EI-✱-◆-JF65G0 becomes CAATNC9-205-EI-✱-◆-JU65G0.
- ③ Fuse clips sized for use with "J"-type fuses up to 600A. Power fuses not supplied.
- ④ Other enclosures available. Contact your Sprecher + Schuh Representative.
- ⑤ A Red and Yellow Handle may be selected instead of the standard Gray and Black handle. Change "JF" to "LF" in catalog number.
- ⑥ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". For example: CAATND9-190-✱-◆-G0 becomes CAATND9-190-EI-✱-◆-G0. See page C8:3 for price adder.

Part Winding (Two Step)

Maximum Horsepower Three Phase				Type 1 General Purpose	D I M	Type 12 [Type 3R Ⓢ] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resist Non-metallic	D I M
200V	230V	460V	575V	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
				CAPWT		CAPWT		CAPWT		CAPWT	
10	15	30	30	7-30-♦-G0	M	7-30-♦-D0	M	7-30-♦-W0	M	7-30-♦-C0	U1
15	~	40	40	7-37-♦-G0	M	7-37-♦-D0	M	7-37-♦-W0	M	7-37-♦-C0	U1
20	20	50	50	7-43-♦-G0	M	7-43-♦-D0	M	7-43-♦-W0	M	7-43-♦-C0	U1
25	25	60	60	7-55-♦-G0	M	7-55-♦-D0	M	7-55-♦-W0	M	7-55-♦-C0	U1
25	30	60	75	7-60-♦-G0	C	7-60-♦-D0	O	7-60-♦-W0	O	7-60-♦-C0	V1
30	40	75	100	7-72-♦-G0	C	7-72-♦-D0	O	7-72-♦-W0	O	7-72-♦-C0	V1
40	50	100	125	7-85-♦-G0	C	7-85-♦-D0	O	7-85-♦-W0	O	7-85-♦-C0	V1
50	50	100	150	7-97-♦-G0	C	7-97-♦-D0	O	7-97-♦-W0	O	7-97-♦-C0	V1
60	60	100	150	9-116-♦-G0 Ⓢ	E2	9-116-♦-D0 Ⓢ	R2	9-116-♦-W0 Ⓢ	R2	9-116-♦-C0 Ⓢ	W2
60	75	150	200	9-146-♦-G0 Ⓢ	G	9-146-♦-D0 Ⓢ	T	9-146-♦-W0 Ⓢ	T	9-146-♦-C0 Ⓢ	A2
75	75	200	200	9-190-♦-G0 Ⓢ	H	9-190-♦-D0 Ⓢ	H	9-190-♦-W0 Ⓢ	H	9-190-♦-C0 Ⓢ	Y1
75	100	200	300	9-205-♦-G0 Ⓢ	H	9-205-♦-D0 Ⓢ	H	9-205-♦-W0 Ⓢ	H	9-205-♦-C0 Ⓢ	Y1
100	150	300	350	9-265-♦-G0 Ⓢ	J	9-265-♦-D0 Ⓢ	J	9-265-♦-W0 Ⓢ	J	9-265-♦-C0 Ⓢ	Z1
150	200	350	450	9-305-♦-G0 Ⓢ	J	9-305-♦-D0 Ⓢ	J	9-305-♦-W0 Ⓢ	J	9-305-♦-C0 Ⓢ	Z1

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying catalog numbers.

Combination Part Winding Starter Options Availability Ⓢ

Circuit Breaker or Disconnect Switch	Enclosure Type	Price (Add to base Part Winding starter list price)					
		7-30	7-37 7-43 7-55	7-60 7-72 7-85 7-97	9-116 (-EI) 9-146 (-EI)	9-190(-EI) 9-205(-EI) 9-265(-EI)	9-305(-EI)
Thermal Magnetic Circuit Breaker	Type 1	✓	✓	✓	✓	✓	Refer to Factory
	Type 12/3R/4/4X	✓	✓	✓	✓	✓	
Non Fusible Disconnect	Type 1	✓	✓	✓	✓	✓	
	Type 12/3R/4/4X	✓	✓	✓	✓	✓	
Fusible Disconnect - 30 Amp	Type 1	✓	~	~	~	~	
	Type 12/3R/4/4X	✓	~	~	~	~	
Fusible Disconnect - 60 Amp	Type 1	✓	✓	~	~	~	
	Type 12/3R/4/4X	✓	✓	~	~	~	
Fusible Disconnect - 100 Amp	Type 1	~	✓	✓	~	~	
	Type 12/3R/4/4X	~	✓	✓	~	~	
Fusible Disconnect - 200 Amp	Type 1	~	~	✓	✓	~	
	Type 12/3R/4/4X	~	~	✓	✓	~	
Fusible Disconnect - 400 Amp	Type 1	~	~	~	✓	✓	
	Type 12/3R/4/4X	~	~	~	✓	✓	
Fusible Disconnect - 600 Amp	Type 1	~	~	~	~	✓	
	Type 12/3R/4/4X	~	~	~	~	✓	

Ordering Instructions

Specify Catalog Number	
Replace (♦) with Coil Code	See page C8:3
Multiply Motor FLA by 50%, Replace (Ⓢ) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Price remains the same, dimensions may change. Example: CAPWT7-30-♦-D0 becomes CAPWT7-30-♦-R0.
- ③ Refer to page C0:4 for information on modifying standard Part Winding catalog number to combination type or contact Sprecher + Schuh Technical Support.
- ④ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". For example: CAATND9-190-♦-G0 becomes CAATND9-190-EI-♦-G0. See page C8:3 for price adder.

Wye Delta (Open Transition, 3-Contactor ⓐ)

Maximum Horsepower Three Phase				Type 1 General Purpose	D I M	Type 12 [Type 3R ⓐ] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V	Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
				CAYT		CAYT		CAYT		CAYT	
10	15	30	30	7-30-*-◆-G0	C	7-30-*-◆-D0	O	7-30-*-◆-W0	O	7-30-*-◆-C0	V1
15	20	40	40	7-37-*-◆-G0	C	7-37-*-◆-D0	O	7-37-*-◆-W0	O	7-37-*-◆-C0	V1
20	25	50	50	7-43-*-◆-G0	C	7-43-*-◆-D0	O	7-43-*-◆-W0	O	7-43-*-◆-C0	V1
25	30	60	60	7-55-*-◆-G0	C	7-55-*-◆-D0	O	7-55-*-◆-W0	O	7-55-*-◆-C0	V1
30	40	75	75	7-60-*-◆-G0	D	7-60-*-◆-D0	Q	7-60-*-◆-W0	Q	7-60-*-◆-C0	W1
40	50	100	100	7-72-*-◆-G0	F	7-72-*-◆-D0	T	7-72-*-◆-W0	T	7-72-*-◆-C0	X1
50	60	125	125	7-85-*-◆-G0	F	7-85-*-◆-D0	T	7-85-*-◆-W0	T	7-85-*-◆-C0	X1
60	60	150	150	9-116-*-◆-G0	G	9-116-*-◆-D0	T	9-116-*-◆-W0	T	9-116-*-◆-C0	A2
75	75	150	200	9-146-*-◆-G0	G	9-146-*-◆-D0	T	9-146-*-◆-W0	T	9-146-*-◆-C0	A2
75	100	200	250	9-190-*-◆-G0	H	9-190-*-◆-D0	H	9-190-*-◆-W0	H	9-190-*-◆-C0	Y1
100	125	250	300	9-205-*-◆-G0	I	9-205-*-◆-D0	I	9-205-*-◆-W0	J	9-205-*-◆-C0	Z1
150	150	350	450	9-265-*-◆-G0	J	9-265-*-◆-D0	J	9-265-*-◆-W0	J	9-265-*-◆-C0	Z1
150	200	450	500	9-305-*-◆-G0	J	9-305-*-◆-D0	J	9-305-*-◆-W0	J	9-305-*-◆-C0	Z1
200	250	500	600	9-370-*-◆-G0	J	9-370-*-◆-D0	J	9-370-*-◆-W0	J	9-370-*-◆-C0	Z1
250	250	600	700	9-400-EI-◆-G0	~	9-400-EI-◆-D0	~	9-400-EI-◆-W0	~	9-400-EI-◆-C0	~
300	350	700	800	9-460-EI-◆-G0	~	9-460-EI-◆-D0	~	9-460-EI-◆-W0	~	9-460-EI-◆-C0	~
350	450	800	1000	9-580-EI-◆-G0	~	9-580-EI-◆-D0	~	9-580-EI-◆-W0	~	9-580-EI-◆-C0	~
450	500	1000	1250	9-750-EI-◆-G0	~	9-750-EI-◆-D0	~	9-750-EI-◆-W0	~	9-750-EI-◆-C0	~
600	700	1250	1750	9-860-EI-◆-G0	~	9-860-EI-◆-D0	~	9-860-EI-◆-W0	~	9-860-EI-◆-C0	~
600	700	1500	1750	9-1060-EI-◆-G0	~	9-1060-EI-◆-D0	~	9-1060-EI-◆-W0	~	9-1060-EI-◆-C0	~

Larger sizes available. Contact your Sprecher + Schuh representative.

Combination Wye Delta Starter Options Availability ⓐ

Circuit Breaker or Disconnect Switch	Enclosure Type	Price (Add to base Part Winding starter list price)						
		7-30	7-37 7-43 7-55	7-60 7-72 7-85	9-116 (-EI) 9-146 (-EI)	9-190(-EI) 9-205(-EI) 9-265(-EI)	9-305(-EI) 9-370(-EI) 9-400-EI 9-460-EI	9-580-EI 9-750-EI 9-860-EI 9-1060-EI
Thermal Magnetic Circuit Breaker	Type 1	✓	✓	✓	✓	✓	✓	Refer to Factory
	Type 12/3R/4/4X	✓	✓	✓	✓	✓	✓	
Non Fusible Disconnect	Type 1	✓	✓	✓	✓	✓	✓	
	Type 12/3R/4/4X	✓	✓	✓	✓	✓	✓	
Fusible Disconnect - 30 Amp	Type 1	✓	~	~	~	~	~	
	Type 12/3R/4/4X	✓	~	~	~	~	~	
Fusible Disconnect - 60 Amp	Type 1	✓	✓	~	~	~	~	
	Type 12/3R/4/4X	✓	✓	~	~	~	~	
Fusible Disconnect - 100 Amp	Type 1	~	✓	✓	~	~	~	
	Type 12/3R/4/4X	~	✓	✓	~	~	~	
Fusible Disconnect - 200 Amp	Type 1	~	~	✓	✓	~	~	
	Type 12/3R/4/4X	~	~	✓	✓	~	~	
Fusible Disconnect - 400 Amp	Type 1	~	~	~	✓	✓	~	
	Type 12/3R/4/4X	~	~	~	✓	✓	~	
Fusible Disconnect - 600 Amp	Type 1	~	~	~	~	✓	✓	
	Type 12/3R/4/4X	~	~	~	~	✓	✓	

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C8:3
Multiply Motor FLA by 58%, Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAYT7-30-◆-D0 becomes CAYT7-30-◆-R0. Price remains the same.
- ③ Refer to page C0:4 for information on modifying standard Wye Delta catalog number to combination type or contact Sprecher + Schuh Technical Support. Price changes may apply. Contact Technical Support.
- ④ For closed transition Wye Delta applications, please contact factory.

Pump Controllers

Pump control panels for outdoor irrigation and oil well applications



Sprecher + Schuh pump control panels are specifically designed to meet Combination starter requirements in demanding outdoor environmental conditions. Typical applications include irrigation and waste water treatment as well as oil well and agricultural applications.

Pump Controllers from Sprecher + Schuh offer through-the-door operators and rugged Type 3R rain-proof metal or Type 4X non-metallic enclosures. These enclosures in some cases are somewhat smaller than previous models but still with adequate room to mount a mechanical timer and other customer supplied controls.

Three models of Pump Controllers

- **Thermal-magnetic circuit breakers (MCCB)** instead of a motor circuit protector (MCP) to comply with short-circuit requirements from UL and NEC.
- **Heavy duty fusible or non-fusible L11 disconnect switches** provide improved short-circuit protection when used with J fuses.
- **Self-protected Combination Controllers (Type E)** KTA9 models which offer superior fuseless short-circuit protection in a smaller more economical package (See Section F).

Pump panels feature our CA7 and CA9 line of contactors which are UL Listed and sized to match all the available HP sizes of motors. Alternately, we can provide NEMA Sized (CAN7) contactors, which comply with all requirements by UL and are labeled with the applicable NEMA (00, 0, 1, 2, or 3) size in our pump panels. Our MCCB models and the L11 models utilize the CEP7 solid state overload relay providing state-of-the-art overload and single-phase protection. See Section B in this catalog for a full description of these excellent motor protection relays.



Our KTA7 model utilizes the high speed current limiting capabilities providing short-circuit protection, branch-circuit disconnect, and overload protection in one compact device. See Section F in this catalog for application details for these Type E Combos.

Standard or Customized Features

Standard pump controllers are equipped with START pushbutton and H-O-A selector switch. The entire assembly is mounted in an outdoor enclosure with provision for mounting on a pole or a wall and top conduit provisions. Oversized enclosures can be provided for each of the pump controllers to accommodate extra equipment. Our factory modification section lists many of the options that are commonly requested. A customized pump controller quotation including door-in-door (dead-front) models, reduced voltage models and models with customized control diagrams can be provided on demand by contacting your Sprecher + Schuh representative.



Series CAPT7 and CAPT9 with Thermal-Magnetic Circuit Breaker

Maximum Horsepower Three Phase			MCCB Amps	Type 3R Rainproof Metal	D I M	Type 4X Watertight Corrosion Resistant Non-Metallic	D I M
230V	460V	575V		Catalog No.		Catalog No.	
2	5	~	15	CAPT7-9-♦-TB15R0	R2	CAPT7-9-♦-TB15C0	R/F
2	5	5	15	CAPT7-9-♦-TBH15R0	R2	CAPT7-9-♦-TBH15C0	R/F
~	~	7.5	20	CAPT7-9-♦-TBH20R0	R2	CAPT7-9-♦-TBH20C0	R/F
3	7.5	~	20	CAPT7-12-♦-TB20R0	R2	CAPT7-12-♦-TB20C0	R/F
3	7.5	10	20	CAPT7-12-♦-TBH20R0	R2	CAPT7-12-♦-TBH20C0	R/F
5	10	~	30	CAPT7-16-♦-TB30R0	R2	CAPT7-16-♦-TB30C0	R/F
~	~	15	35	CAPT7-23-♦-TBH35R0	R2	CAPT7-23-♦-TBH35C0	R/F
7.5	15	~	40	CAPT7-23-♦-TB40R0	R2	CAPT7-23-♦-TB40C0	R/F
10	20	25 ②	50	CAPT7-30-♦-TB50R0	R2	CAPT7-30-♦-TB50C0	R/F
10	20	25	50	CAPT7-30-♦-TBH50R0	R2	CAPT7-30-♦-TBH50C0	R/F
~	25	30 ②	60	CAPT7-37-♦-TB60R0	R2	CAPT7-37-♦-TB60C0	R/F
~	25	30	60	CAPT7-37-♦-TBH60R0	R2	CAPT7-37-♦-TBH60C0	R/F
~	30	~	70	CAPT7-43-♦-TB70R0	R2	CAPT7-43-♦-TB70C0	R/F
15	~	~	80	CAPT7-43-♦-TB80R0	R2	CAPT7-43-♦-TB80C0	R/F
20	40	40 ②	80	CAPT7-55-♦-TB80R0	R2	CAPT7-55-♦-TB80C0	R/F
20	40	40	80	CAPT7-55-♦-TBH80R0	R2	CAPT7-55-♦-TBH80C0	R/F
~	~	40 ②	80	CAPT7-60-♦-TB80R0	R2	CAPT7-60-♦-TB80C0	R/F
~	~	40	80	CAPT7-60-♦-TBH80R0	R2	CAPT7-60-♦-TBH80C0	R/F
20	40	50 ②	100	CAPT7-60-♦-TB100R0	R2	CAPT7-60-♦-TB100C0	R/F
20	40	50	100	CAPT7-60-♦-TBH100R0	R2	CAPT7-60-♦-TBH100C0	R/F
25	50	60 ②	125	CAPT7-72-♦-TB125R0	R2	CAPT7-72-♦-TB125C0	R/F
25	50	60	125	CAPT7-72-♦-TBH125R0	R2	CAPT7-72-♦-TBH125C0	R/F
30	60	~	125	CAPT7-85-♦-TB125R0	R2	CAPT7-85-♦-TB125C0	R/F
~	~	75 ②③	150	CAPT7-97-♦-TB150R0	R2	CAPT7-97-♦-TB150C0	R/F
~	~	75 ③	150	CAPT7-97-♦-TBH150R0	R2	CAPT7-97-♦-TB150C0	R/F
~	75 ③	~	175	CAPT7-97-♦-TB175R0	R2	CAPT7-97-♦-TB175C0	R/F
~	75	~	175	CAPT9-116-♦-TB175R0 ④	T	CAPT9-116-♦-TB175C0 ④	R/F
40	~	100 ③	200	CAPT9-116-♦-TB200R0 ④	T	CAPT9-116-♦-TB200C0 ④	R/F
~	100	125 ③	225	CAPT9-146-♦-TB225R0 ④	T	CAPT9-146-♦-TB225C0 ④	R/F
50	~	~	250	CAPT9-146-♦-TB250R0 ④	T	CAPT9-146-♦-TB250C0 ④	R/F
60	125	150	300	CAPT9-190-♦-TB300R0 ④	T	CAPT9-190-♦-TB300C0 ④	R/F
75	150	200	350	CAPT9-205-♦-TB350R0 ④	I	CAPT9-205-♦-TB350C0 ④	R/F
~	175	~	400	CAPT9-265-♦-TB400R0 ④	I	CAPT9-265-♦-TB400C0 ④	R/F
100	200	250	450	CAPT9-265-♦-TB450R0 ④	I	CAPT9-265-♦-TB450C0 ④	R/F
~	~	~	500	CAPT9-305-♦-TB500R0 ④	I	CAPT9-305-♦-TB500C0 ④	R/F
125	250	300	600	CAPT9-305-♦-TB600R0 ④	I	CAPT9-305-♦-TB600C0 ④	R/F
~	~	350	600	CAPT9-370-♦-TB600R0 ④	I	CAPT9-370-♦-TB600C0 ④	R/F
150	300	~	700	CAPT9-370-♦-TB700R0 ④	I	CAPT9-370-♦-TB700C0 ④	R/F
150	~	400	700	CAPT9-400-EI-♦-TB700R0	J	CAPT9-400-EI-♦-TB700C0	R/F
~	350	~	800	CAPT9-400-EI-♦-TB800R0	J	CAPT9-400-EI-♦-TB800C0	R/F
~	~	~	800	CAPT9-460-EI-♦-TB800R0	J	CAPT9-460-EI-♦-TB800C0	R/F
200	400	500	1000	CAPT9-460-EI-♦-TB1000R0	J	CAPT9-460-EI-♦-TB1000C0	R/F
~	~	600	1000	CAPT9-580-EI-♦-TB1000R0	R/F	CAPT9-580-EI-♦-TB1000C0	R/F
250	500	~	1200	CAPT9-580-EI-♦-TB1200R0	R/F	CAPT9-580-EI-♦-TB1200C0	R/F

Larger sizes available. Contact your Sprecher + Schuh representative.

Pump Panel with Circuit Breaker includes:

- Contactor (with AC coil)
- Overload relay protection
- Thermal magnetic circuit breaker
- "START" momentary pushbutton
- "H-O-A" selector switch
- At minimum, 6"x10" extra back pan space
- UL type rated enclosure



CAPT7-23...

R/F - Experience has shown that applications using non-metallic enclosures often require customized pump panels (i.e. Door-in-Door or unique control circuits). Contact your Sprecher + Schuh representative for a customized price.

NOTE: Catalog Numbers, list Prices and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying Catalog Numbers.

Ordering Instructions

Specify Catalog Number	
Replace (♦) with Coil Code	See page C8:3
Replace (♦) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② Applicable to 600Y/347V only.
- ③ The short circuit and kAIC is relegated to the contactor's 10kA. Contact your Sprecher + Schuh representative for a higher kAIC.
- ④ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAPT9-116-♦-TB175R0 becomes CAPT9-116-EI-♦-TB175R0. See page C8:3 for price adder.

Series CAPT7 and CAPT9 with Fusible Disconnect (J-Type) ①②


Maximum Horsepower Three Phase			Fuse Clips	Type 3R Rainproof Metal	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
230V	460V	575V		Catalog No.		Catalog No.	
2	5	7.5	30	CAPT7-9-♦-JF61R0	R2	CAPT7-9-♦-JF61C0	R/F
3	7.5	10	30	CAPT7-12-♦-JF61R0	R2	CAPT7-12-♦-JF61C0	R/F
5	10	15	30	CAPT7-16-♦-JF61R0	R2	CAPT7-16-♦-JF61C0	R/F
~	~	~	30	CAPT7-23-♦-JF61R0	R2	CAPT7-23-♦-JF61C0	R/F
7.5	15	15	60	CAPT7-23-♦-JF62R0	R2	CAPT7-23-♦-JF62C0	R/F
10	20	25	60	CAPT7-30-♦-JF62R0	R2	CAPT7-30-♦-JF62C0	R/F
10	25	30	60	CAPT7-37-♦-JF62R0	R2	CAPT7-37-♦-JF62C0	R/F
~	30	30	60	CAPT7-43-♦-JF62R0	R2	CAPT7-43-♦-JF62C0	R/F
15	~	~	100	CAPT7-43-♦-JF63R0	R2	CAPT7-43-♦-JF63C0	R/F
~	~	40	60	CAPT7-55-♦-JF62R0	R2	CAPT7-55-♦-JF62C0	R/F
20	40	~	100	CAPT7-55-♦-JF63R0	R2	CAPT7-55-♦-JF63C0	R/F
~	~	40	60	CAPT7-60-♦-JF62R0	R2	CAPT7-60-♦-JF62C0	R/F
20	40	50	100	CAPT7-60-♦-JF63R0	R2	CAPT7-60-♦-JF63C0	R/F
25	50	60	100	CAPT7-72-♦-JF63R0	R2	CAPT7-72-♦-JF63C0	R/F
~	~	60	100	CAPT7-85-♦-JF63R0	R2	CAPT7-85-♦-JF63C0	R/F
30	60	~	200	CAPT7-85-♦-JF64R0	H	CAPT7-85-♦-JF64C0	R/F
30	75	75	200	CAPT7-97-♦-JF64R0	H	CAPT7-97-♦-JF64C0	R/F
40	75	100	200	CAPT9-116-♦-JF64R0 ④	H	CAPT9-116-♦-JF64C0 ④	R/F
50	100	125	200	CAPT9-146-♦-JF64R0 ④	H	CAPT9-146-♦-JF64C0 ④	R/F
60	125	150	400	CAPT9-190-♦-JF65R0 ④	J	CAPT9-190-♦-JF65C0 ④	R/F
75	150	200	400	CAPT9-205-♦-JF65R0 ④	J	CAPT9-205-♦-JF65C0 ④	R/F
100	200	250	400	CAPT9-265-♦-JF65R0 ④	J	CAPT9-265-♦-JF65C0 ④	R/F
125	250	300	600	CAPT9-305-♦-JF66R0 ④	R/F	CAPT9-305-♦-JF66C0 ④	R/F
150	300	350	600	CAPT9-370-♦-JF66R0 ④	R/F	CAPT9-370-♦-JF66C0 ④	R/F
150	~	400	600	CAPT9-400-EI-♦-JF66R0	R/F	CAPT9-400-EI-♦-JF66C0	R/F
~	350	~	800	CAPT9-400-EI-♦-JF67R0	R/F	CAPT9-400-EI-♦-JF67C0	R/F
200	400	500	800	CAPT9-460-EI-♦-JF67R0	R/F	CAPT9-460-EI-♦-JF67C0	R/F

Larger sizes available. Contact your Sprecher + Schuh representative.

NOTE: Catalog Numbers, list Prices and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying Catalog Numbers.

Pump Panel with Disconnect Switch includes:

- Contactor (with AC coil)
- Overload relay protection
- J-type fusible disconnect switch (excluding line fuses)
- "START" momentary pushbutton
- "H-O-A" selector switch
- At minimum, 6"x10" extra back pan space
- UL type rated enclosure

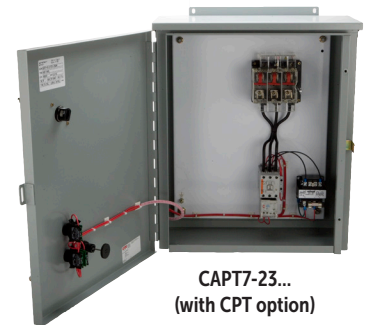

CAPT7-23...
(with CPT option)

R/F - Experience has shown that applications using non-metallic enclosures often require customized pump panels (i.e. Door-in-Door or unique control circuit). Contact your Sprecher + Schuh representative for a customized price.

Ordering Instructions

Specify Catalog Number	
Replace (♦) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Dimensional information starts on page C8:23.
- ② Fusible combo starters use the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.
- ③ A Red and Yellow Handle may be selected instead of the standard Gray and Black handle. Change "JF" to "LF" in catalog number.
- ④ CAPT9-116...CAPT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CAPT9-116-♦-JF64R0 becomes CAPT9-116-EI-♦-JF64R0. See page C8:3 for price adder.

Series CAPTN7 with Thermal-Magnetic Circuit Breaker

NEMA Size	Maximum Horsepower Three Phase			MCCB Amps	Type 3R Rainproof Metal Catalog No.	DIM	Type 4X Watertight Corrosion Resistant Non-Metallic Catalog No.	DIM
	230V	460V	575V					
00	1-1/2	2	2 ④	15	CAPTN7-12-*-* - TB15R0	R2	CAPTN7-12-*-* - TB15C0	R/F
	1-1/2	2	2	15	CAPTN7-12-*-* - TBH15R0	R2	CAPTN7-12-*-* - TBH15C0	R/F
0	2	5	5 ④	15	CAPTN7-16-*-* - TB15R0	R2	CAPTN7-16-*-* - TB15C0	R/F
	2	5	5	15	CAPTN7-16-*-* - TBH15R0	R2	CAPTN7-16-*-* - TBH15C0	R/F
	3	~	~	20	CAPTN7-16-*-* - TB20R0	R2	CAPTN7-16-*-* - TB20C0	R/F
	3	~	~	20	CAPTN7-16-*-* - TBH20R0	R2	CAPTN7-16-*-* - TBH20C0	R/F
1	7-1/2	~	~	40	CAPTN7-37-*-* - TB40R0	R2	CAPTN7-37-*-* - TB40C0	R/F
	~	10	~	30	CAPTN7-37-*-* - TB30R0	R2	CAPTN7-37-*-* - TB30C0	R/F
	~	~	10 ④	20	CAPTN7-37-*-* - TB20R0	R2	CAPTN7-37-*-* - TB20C0	R/F
	~	~	10	20	CAPTN7-37-*-* - TBH20R0	R2	CAPTN7-37-*-* - TBH20C0	R/F
2	~	~	25 ④	50	CAPTN7-43-*-* - TB50R0	R2	CAPTN7-43-*-* - TB50C0	R/F
	~	~	25	50	CAPTN7-43-*-* - TBH50R0	R2	CAPTN7-43-*-* - TBH50C0	R/F
	~	25	~	60	CAPTN7-43-*-* - TB60R0	R2	CAPTN7-43-*-* - TB60C0	R/F
	15	~	~	80	CAPTN7-43-*-* - TB80R0	R2	CAPTN7-43-*-* - TB80C0	R/F
3	20	40	50 ④	100	CAPTN7-85-*-* - TB100R0	R2	CAPTN7-85-*-* - TB100C0	R/F
	20	40	50	100	CAPTN7-85-*-* - TBH100R0	R2	CAPTN7-85-*-* - TBH100C0	R/F
	30	50	~	125	CAPTN7-85-*-* - TB125R0	R2	CAPTN7-85-*-* - TB125C0	R/F

Pump Panel with NEMA label includes:

- NEMA labeled contactor (with AC coil)
- Overload relay protection
- Appropriate disconnect means thermal magnetic circuit breaker) or J-type fusible disconnect switch (excluding line fuses)
- "START" momentary push-button
- "H-O-A" selector switch
- At minimum, 6"x10" extra back pan space
- UL type rated enclosure

R/F - Experience has shown that applications using non-metallic enclosures often require customized pump panels (i.e. Door-in-Door or unique control circuit). Contact your Sprecher + Schuh representative for a customized price.

Series CAPTN7 with Fusible Disconnect (J-Type) ②③

NEMA Size	Maximum Horsepower Three Phase			Fuse Clips	Type 3R Industrial Dusttight Catalog No.	DIM	Type 4X Watertight Corrosion Resistant Non-Metallic Catalog No.	DIM
	230V	460V	575V					
00	1-1/2	2	2	30	CAPTN7-12-*-* - -JF61R0	R2	CAPTN7-12-*-* - -JF61C0	R/F
0	3	5	5	30	CAPTN7-16-*-* - -JF61R0	R2	CAPTN7-16-*-* - -JF61C0	R/F
1	~	10	10	30	CAPTN7-37-*-* - -JF61R0	R2	CAPTN7-37-*-* - -JF61C0	R/F
	7-1/2	~	~	60	CAPTN7-37-*-* - -JF62R0	R2	CAPTN7-37-*-* - -JF62C0	R/F
2	~	25	25	60	CAPTN7-43-*-* - -JF62R0	R2	CAPTN7-43-*-* - -JF62C0	R/F
	15	~	~	100	CAPTN7-43-*-* - -JF63R0	R2	CAPTN7-43-*-* - -JF63C0	R/F
3	~	50	50	100	CAPTN7-85-*-* - -JF63R0	R2	CAPTN7-85-*-* - -JF63C0	R/F
	30	~	~	200	CAPTN7-85-*-* - -JF64R0	H	CAPTN7-85-*-* - -JF64C0	R/F

NOTE: Catalog Numbers, list Prices and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying Catalog Numbers.

① Dimensional information starts on page C8:23.

② Fusible combo starters use the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.

③ A Red and Yellow Handle may be selected instead of the standard Gray and Black handle. Change "JF" to "LF" in catalog number.

④ Applicable to 600Y/347V only.

Duplex Pump Controllers

Sprecher + Schuh duplex pump control panels are specifically designed to meet multi-starter combination requirements as defined in demanding outdoor environmental conditions.

Duplex pump controllers are typically designed for two specific requirements: duplexing and alternation.



Duplexing provides capacity for above normal demand or system peaking by allowing both motors to run simultaneously. It also provides standby capacity if one unit fails. Typically multiple pressure or float switches are required to provide electrical signals to the controller.

Alternation provides for equal wear on the two machines being controlled by reversing the lead and lag role of the specific motors. Alternation occurs at any time the two motors come to rest.

Duplex Pump Controllers from Sprecher + Schuh offer through-the-door operators and rugged Type 3R rain-proof metal or Type 4X non-metallic enclosures.

Three models of Duplex Controllers

- **Thermal-magnetic circuit breakers (MCCB)** instead of a motor circuit protector (MCP) to comply with new short-circuit requirements from UL and NEC.
- **Heavy duty fusible or non-fusible L11 disconnect switches** providing improved short-circuit protection when used with J fuses.
- **Self-protected Combination Controllers (Type E)** KTA9 models which offers superior fuseless short-circuit protection in a smaller more economical package (See page F111).

Duplex pump panels feature our CA7 and CA9 line of contactors, which are UL Listed and sized to match all the




available HP sizes of motors. Alternately, we can provide NEMA Sized (CAN7) contactors which comply with all requirements by UL and are labeled with the applicable NEMA (00, 0, 1, 2, or 3) size in our pump panels.

Our MCCB models and the L11 models utilize the CEP7 solid state overload relay providing state-of-the-art overload and single-phase protection. See Section B in this catalog for a full description of these excellent motor protection relays.

Our KTA9 model utilizes the high speed current limiting capabilities providing short-circuit protection, branch-circuit disconnect, and overload protection in one compact device. These Type E panels are smaller than classic models and therefore represent an economical solution to duplexing. See Section F in this catalog for application details for these Type E Combos.

Experience has shown us that duplex pump panels often require customization to accommodate unique components and unique control schematic diagrams. In the following pages you will find a catalog number structure showing standard models with standard options to help guide your selection. We have also provided a check list which can be utilized to request a similar model except customized to meet your application by contacting your Sprecher + Schuh representative.

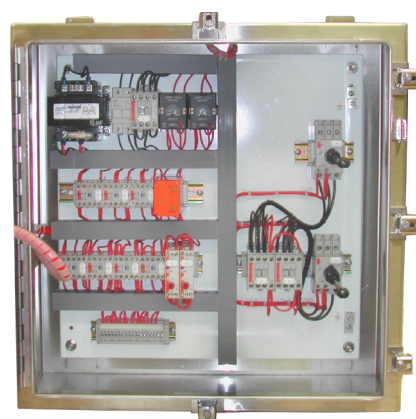

Custom Control Panels

Sprecher + Schuh custom control facility manufactures custom panels for almost any need, including this duplex control panel in a custom Type 4 stainless steel enclosure.

C6

Simplex & Duplex Pump Panels

Duplex Pump Panel Checklist

Customer Name: _____ Location: _____
 Project Name: _____
 Contact Person: _____ Phone No.: _____
 Email: _____ Date: _____

Standard catalog number selected from the following pages: _____

☐ with the exceptions noted below

Application Data: Motor _____
 HP: _____ Voltage: _____ Phase: _____ FLA _____
 Disconnect? ☐ Yes ☐ No
 If yes, type of disconnect: ☐ J-Type Fusible ☐ Non-Fusible ☐ Circuit breaker ☐ Type E combination controller

Starting Method: ☐ Across-the-line
☐ Softstarter

Control Transformer: ☐ Yes ☐ No
 If Yes, is there any extra VA capacity required other than what is provided as standard? _____ Extra VA required

Options: ☐ H-O-A
☐ Pilot Light; Color _____ Function _____
☐ Terminal Points; Qty _____
☐ Phase Monitor
☐ Hour Meter
☐ Lightning Arrestor
☐ Alternator
 Number of float switches ☐ 1 ☐ 2 ☐ 3
☐ Alarm Circuit ☐ Horn ☐ Light Type _____ ☐ Alarm Silence Button
☐ Other _____ ☐ Custom Schematic (Must be attached)

Enclosure: ☐ Type 1 ☐ Type 12 ☐ Type 13 ☐ Type 3R ☐ Type 4
☐ Type 4X If Type 4X, ☐ non-metallic ☐ 304 stainless steel ☐ 316 stainless steel
☐ Door-in-door (dead front)

Special Features:

Series CADPT7 and CADPT9

Maximum Horsepower Three Phase			Type 3R Rainproof (Metal)	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
230V	460V	575V	Catalog No.		Catalog No.	
2	5	7.5	CADPT9-9-♦-R0	R/F	CADPT7-9-♦-C0	R/F
3	7.5	10	CADPT7-12-♦-R0	R/F	CADPT7-12-♦-C0	R/F
5	10	15	CADPT7-16-♦-R0	R/F	CADPT7-16-♦-C0	R/F
7.5	15	15	CADPT7-23-♦-R0	R/F	CADPT7-23-♦-C0	R/F
10	20	25	CADPT7-30-♦-R0	R/F	CADPT7-30-♦-C0	R/F
10	25	30	CADPT7-37-♦-R0	R/F	CADPT7-37-♦-C0	R/F
15	30	30	CADPT7-43-♦-R0	R/F	CADPT7-43-♦-C0	R/F
20	40	40	CADPT7-55-♦-R0	R/F	CADPT7-55-♦-C0	R/F
20	40	50	CADPT7-60-♦-R0	R/F	CADPT7-60-♦-C0	R/F
25	50	60	CADPT7-72-♦-R0	R/F	CADPT7-72-♦-C0	R/F
30	60	60	CADPT7-85-♦-R0	R/F	CADPT7-85-♦-C0	R/F
30	75	75	CADPT7-97-♦-R0	R/F	CADPT7-97-♦-C0	R/F
40	75	100	CADPT9-116-♦-R0 ❶	R/F	CADPT9-116-♦-C0 ❶	R/F
50	100	125	CADPT9-146-♦-R0 ❶	R/F	CADPT9-146-♦-C0 ❶	R/F
60	125	150	CADPT9-190-♦-R0 ❶	R/F	CADPT9-190-♦-C0 ❶	R/F
75	150	200	CADPT9-205-♦-R0 ❶	R/F	CADPT9-205-♦-C0 ❶	R/F
100	200	250	CADPT9-265-♦-R0 ❶	R/F	CADPT9-265-♦-C0 ❶	R/F
125	250	300	CADPT9-305-♦-R0 ❶	R/F	CADPT9-305-♦-C0 ❶	R/F
150	300	350	CADPT9-370-♦-R0 ❶	R/F	CADPT9-370-♦-C0 ❶	R/F
150	350	400	CADPT9-400-EI-♦-R0	R/F	CADPT9-400-EI-♦-C0	R/F
200	400	500	CADPT9-460-EI-♦-R0	R/F	CADPT9-460-EI-♦-C0	R/F
250	500	600	CADPT9-580-EI-♦-R0	R/F	CADPT9-580-EI-♦-C0	R/F
300	600	700	CADPT9-750-EI-♦-R0	R/F	CADPT9-750-EI-♦-C0	R/F
400	800	1000	CADPT9-860-EI-♦-R0	R/F	CADPT9-860-EI-♦-C0	R/F
450	900	1150	CADPT9-1060-EI-♦-R0	R/F	CADPT9-1060-EI-♦-C0	R/F

Note: Catalog numbers, list prices and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying Catalog Numbers.

Duplex Pump Controller includes:

- (2) Contactors (AC coil)
- (2) Overload relay protection
- (1) Electronic alternating relay
- (1) UL type rated enclosure
- Designed per alternation control diagram shown at bottom of page C8:18

R/F - Experience has shown that applications using non-metallic enclosures often require customized pump panels (i.e. Door-in-Door or unique control circuit). Contact your Sprecher + Schuh representative for a customized price.

Ordering Instructions

Specify Catalog Number	
Replace (♦) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ❶ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CADPT9-116-♦-R0 becomes CADPT9-116-EI-♦-R0. See page C8:3 for price adder.

Series CADPT7 and CADPT9 with Thermal-Magnetic Circuit Breaker

Maximum Horsepower Three Phase			MCCB Amps	Type 3R Rainproof (Metal)	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
230V	460V	575V		Catalog Number		Catalog Number	
2	5	~	15	CADPT7-9-♦-TB15R0	R/F	CADPT7-9-♦-TB15C0	R/F
2	5	5	15	CADPT7-9-♦-TBH15R0	R/F	CADPT7-9-♦-TBH15C0	R/F
~	~	7.5	20	CADPT7-9-♦-TBH20R0	R/F	CADPT7-9-♦-TBH20C0	R/F
3	7.5	~	20	CADPT7-12-♦-TB20R0	R/F	CADPT7-12-♦-TB20C0	R/F
3	7.5	10	20	CADPT7-12-♦-TBH20R0	R/F	CADPT7-12-♦-TBH20C0	R/F
5	10	~	30	CADPT7-16-♦-TB30R0	R/F	CADPT7-16-♦-TB30C0	R/F
~	~	15	35	CADPT7-23-♦-TBH35R0	R/F	CADPT7-23-♦-TBH35C0	R/F
7.5	15	~	40	CADPT7-23-♦-TB40R0	R/F	CADPT7-23-♦-TB40C0	R/F
10	20	25 ❶	50	CADPT7-30-♦-TB50R0	R/F	CADPT7-30-♦-TB50C0	R/F
10	20	25	50	CADPT7-30-♦-TBH50R0	R/F	CADPT7-30-♦-TBH50C0	R/F
10	25	30 ❶	50	CADPT7-37-♦-TB50R0	R/F	CADPT7-37-♦-TB50C0	R/F
10	25	30	50	CADPT7-37-♦-TBH50R0	R/F	CADPT7-37-♦-TBH50C0	R/F
~	30	~	70	CADPT7-43-♦-TB70R0	R/F	CADPT7-43-♦-TB70C0	R/F
15	~	~	80	CADPT7-43-♦-TB80R0	R/F	CADPT7-43-♦-TB80C0	R/F
20	40	40 ❶	80	CADPT7-55-♦-TB80R0	R/F	CADPT7-55-♦-TB80C0	R/F
20	40	40	80	CADPT7-55-♦-TBH80R0	R/F	CADPT7-55-♦-TBH80C0	R/F
~	~	40 ❶	80	CADPT7-60-♦-TB80R0	R/F	CADPT7-60-♦-TB80C0	R/F
~	~	40	80	CADPT7-60-♦-TBH80R0	R/F	CADPT7-60-♦-TBH80C0	R/F
20	40	50 ❶	100	CADPT7-60-♦-TB100R0	R/F	CADPT7-60-♦-TB100C0	R/F
20	40	50	100	CADPT7-60-♦-TBH100R0	R/F	CADPT7-60-♦-TBH100C0	R/F
25	50	60 ❶	125	CADPT7-72-♦-TB125R0	R/F	CADPT7-72-♦-TB125C0	R/F
25	50	60	125	CADPT7-72-♦-TBH125R0	R/F	CADPT7-72-♦-TBH125C0	R/F
30	60	~	125	CADPT7-85-♦-TB125R0	R/F	CADPT7-85-♦-TB125C0	R/F
~	~	75 ❶❷	150	CADPT7-97-♦-TB150R0	R/F	CADPT7-97-♦-TB150C0	R/F
~	~	75 ❷	150	CADPT7-97-♦-TBH150R0	R/F	CADPT7-97-♦-TBH150C0	R/F
~	75 ❷	~	175	CADPT7-97-♦-TB175R0	R/F	CADPT7-97-♦-TB175C0	R/F
~	75	~	175	CADPT9-116-♦-TB175R0 ❸	R/F	CADPT9-116-♦-TB175C0 ❸	R/F
40	~	100 ❷	200	CADPT9-116-♦-TB200R0 ❸	R/F	CADPT9-116-♦-TB200C0 ❸	R/F
~	100	125 ❷	225	CADPT9-146-♦-TB225R0 ❸	R/F	CADPT9-146-♦-TB225C0 ❸	R/F
50	~	~	250	CADPT9-146-♦-TB250R0 ❸	R/F	CADPT9-146-♦-TB250C0 ❸	R/F
60	125	150	300	CADPT9-190-♦-TB300R0 ❸	R/F	CADPT9-190-♦-TB300C0 ❸	R/F
75	150	200	350	CADPT9-205-♦-TB350R0 ❸	R/F	CADPT9-205-♦-TB350C0 ❸	R/F
~	175	~	400	CADPT9-265-♦-TB400R0 ❸	R/F	CADPT9-265-♦-TB400C0 ❸	R/F
100	200	250	450	CADPT9-265-♦-TB450R0 ❸	R/F	CADPT9-265-♦-TB450C0 ❸	R/F
~	~	~	500	CADPT9-305-♦-TB500R0 ❸	R/F	CADPT9-305-♦-TB500C0 ❸	R/F
125	250	300	600	CADPT9-305-♦-TB600R0 ❸	R/F	CADPT9-305-♦-TB600C0 ❸	R/F
~	~	350	600	CADPT9-370-♦-TB600R0 ❸	R/F	CADPT9-370-♦-TB600C0 ❸	R/F
150	300	~	700	CADPT9-370-♦-TB700R0 ❸	R/F	CADPT9-370-♦-TB700C0 ❸	R/F
150	~	400	700	CADPT9-400-EI-♦-TB700R0	R/F	CADPT9-400-EI-♦-TB700C0	R/F
~	350	~	800	CADPT9-400-EI-♦-TB800R0	R/F	CADPT9-400-EI-♦-TB800C0	R/F
~	~	~	800	CADPT9-460-EI-♦-TB800R0	R/F	CADPT9-460-EI-♦-TB800C0	R/F
200	400	500	1000	CADPT9-460-EI-♦-TB1000R0	R/F	CADPT9-460-EI-♦-TB1000C0	R/F
~	~	600	1000	CADPT9-580-EI-♦-TB1000R0	R/F	CADPT9-580-EI-♦-TB1000C0	R/F
250	500	~	1200	CADPT9-580-EI-♦-TB1200R0	R/F	CADPT9-580-EI-♦-TB1200C0	R/F

Duplex Pump Controller with circuit breaker includes:

- (2) Contactors (AC coil)
- (2) Overload relay protection
- (2) Thermal magnetic circuit breakers
- (1) Electronic alternating relay
- (1) UL type rated enclosure
- Designed per alternation control diagram shown at bottom of page C8:18

R/F - Experience has shown that applications using non-metallic enclosures often require customized pump panels (i.e. Door-in-Door or unique control circuit). Contact your Sprecher + Schuh representative for a customized price.

Note: Catalog numbers, list prices and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C8:3 and follow the instructions for modifying Catalog Numbers.

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ❶ Applicable to 600Y/347V only.
- ❷ The short circuit and kAIC is relegated to the contactor's 10kA. Contact your Sprecher + Schuh representative for a higher kAIC.
- ❸ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CADPT9-116-♦-TB175R0 becomes CADPT9-116-EI-♦-TB175R0. See page C8:3 for price adder.

Series CADPT7 and CADPT9 with Fusible Disconnect (J-Type) ①②

Maximum Horsepower Three Phase				Fuse clip Amps	Type 3R Rainproof (Metal)	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
200V	230V	460V	575V		Catalog Number		Catalog Number	
2	2	5	7.5	30	CADPT7-9-♦-JF61R0	R/F	CADPT7-9-♦-JF61C0	R/F
3	3	7.5	10	30	CADPT7-12-♦-JF61R0	R/F	CADPT7-12-♦-JF61C0	R/F
5	5	10	15	30	CADPT7-16-♦-JF61R0	R/F	CADPT7-16-♦-JF61C0	R/F
5	~	~	~	30	CADPT7-23-♦-JF61R0	R/F	CADPT7-23-♦-JF61C0	R/F
~	7.5	15	15	60	CADPT7-23-♦-JF62R0	R/F	CADPT7-23-♦-JF62C0	R/F
7.5	10	20	25	60	CADPT7-30-♦-JF62R0	R/F	CADPT7-30-♦-JF62C0	R/F
10	10	25	30	60	CADPT7-37-♦-JF62R0	R/F	CADPT7-37-♦-JF62C0	R/F
10	~	30	30	60	CADPT7-43-♦-JF62R0	R/F	CADPT7-43-♦-JF62C0	R/F
~	15	~	~	100	CADPT7-43-♦-JF63R0	R/F	CADPT7-43-♦-JF63C0	R/F
~	~	~	40	60	CADPT7-55-♦-JF62R0	R/F	CADPT7-55-♦-JF62C0	R/F
15	20	40	~	100	CADPT7-55-♦-JF63R0	R/F	CADPT7-55-♦-JF63C0	R/F
~	~	~	40	60	CADPT7-60-♦-JF62R0	R/F	CADPT7-60-♦-JF62C0	R/F
15	20	40	50	100	CADPT7-60-♦-JF63R0	R/F	CADPT7-60-♦-JF63C0	R/F
20	25	50	60	100	CADPT7-72-♦-JF63R0	R/F	CADPT7-72-♦-JF63C0	R/F
~	~	~	60	100	CADPT7-85-♦-JF63R0	R/F	CADPT7-85-♦-JF63C0	R/F
25	30	60	~	200	CADPT7-85-♦-JF64R0	R/F	CADPT7-85-♦-JF64C0	R/F
30	30	75	75	200	CADPT7-97-♦-JF64R0	R/F	CADPT7-97-♦-JF64C0	R/F
30	40	75	100	200	CADPT9-116-♦-JF64R0 ③	R/F	CADPT9-116-♦-JF64C0 ③	R/F
40	50	100	125	200	CADPT9-146-♦-JF64R0 ③	R/F	CADPT9-146-♦-JF64C0 ③	R/F
50	60	125	150	400	CADPT9-190-♦-JF65R0 ③	R/F	CADPT9-190-♦-JF65C0 ③	R/F
60	75	150	200	400	CADPT9-205-♦-JF65R0 ③	R/F	CADPT9-205-♦-JF65C0 ③	R/F
75	100	200	250	400	CADPT9-265-♦-JF65R0 ③	R/F	CADPT9-265-♦-JF65C0 ③	R/F
100	125	250	300	600	CADPT9-305-♦-JF66R0 ③	R/F	CADPT9-305-♦-JF66C0 ③	R/F
125	150	300	350	600	CADPT9-370-♦-JF66R0 ③	R/F	CADPT9-370-♦-JF66C0 ③	R/F
125	150	~	400	600	CADPT9-400-EI-♦-JF66R0	R/F	CADPT9-400-EI-♦-JF66C0	R/F
~	~	350	~	800	CADPT9-400-EI-♦-JF67R0	R/F	CADPT9-400-EI-♦-JF67C0	R/F
150	200	400	500	800	CADPT9-460-EI-♦-JF67R0	R/F	CADPT9-460-EI-♦-JF67C0	R/F

Duplex Pump Controller with disconnect switch includes:

- Designed per alternation control diagram shown at bottom of page C8:18

C6

Simplex & Duplex Pump Panels

R/F - Experience has shown that applications requiring duplex pump panels often require customization. (i.e.: unique components and control circuits). Contact your Sprecher + Schuh representative for a customized price.

Ordering Instructions

Specify Catalog Number	
Replace (♦) with Coil Code	See page C8:3
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C8:6-C8:10

- ① Fusible combo starters use the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.
- ② A Red and Yellow Handle may be selected instead of the standard Gray and Black handle. Change "JF" to "LF" in catalog number.
- ③ CAT9-116...CAT9-370 starters are available with "EI" option for PLC interface. Change catalog number to include "-EI". Example: CADPT9-116-♦-JF64R0 becomes CADPT9-116-EI-♦-JF64R0. See page C8:3 for price adder.

Type E/F Combination Controllers

An alternative to the
Classic Combination
Starter



Classic Construction Type C
Thermal Magnetic MCCB
Combination Starter



Construction Type E/F
E-Combo Self-Protected
Motor Controller

The E-Combo Starter

Sprecher + Schuh's Ecombo and EcomboPlus starters are the compact alternative to larger and higher priced combination starters. E-Combos include:

- KTA9 "Type E/F" Self-protected Motor Controller with 1 N.O. front mount auxiliary contact
- CA7 or CAN7 Contactors (for remote operation)
- Terminal Adaptor for Type E Applications
- Power and Control Wiring
- Type 12/4 enclosure, dual rated - watertight, dusttight
- Gray/Black or Red/Yellow Type 4/4X/12; IP66 handle
- Factory installed pilot device options
- Higher SCCR ratings than MCCB combination versions
- All in a smaller NEMA Type 4/12 enclosure at a more economical price.


For details on these economical combination starter alternatives turn to Catalog Number Selection, page F4:19.

The Classic Combo

Classic combination starters in Construction Type A use fusible L11 Disconnect switches. Construction Type C combos use UL489 Molded Case Circuit Breakers. Both are popular choices but Sprecher + Schuh's E-Combo line offers an alternative.

Advanced Alternative

Technology has advanced in the last decades and UL, NEC, and CSA now recognize Self-Protected Combination Motor Controllers as providing a means of thru-the-door disconnect, short circuit protection, and overload protection in a single device (KTA9). Further, when KTA9 is combined with CA7 contactors for remote operation, the resulting assembly is a Construction Type E/F Combination Starter. Less components and a smaller enclosure means a functional equal to the Classic Combo at a reduced price.

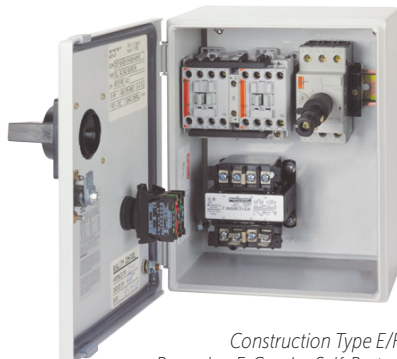

Construction Type E/F
Reversing E-Combo Self-Protected Motor
Controller

See page F4:19. for
Type E/F
Combination
Starter
Control Panels

NEMA Starters for HVAC/R

NEMA-Sized Starters For Heavy Duty Commercial & Industrial Applications

The Sprecher + Schuh HVAC/R Program is designed to simplify the selection of starters for HVAC/R market opportunities. Sprecher + Schuh through-the-door combination starters for HVAC/R applications provide an alternative to flange-operated combination starters that are economical without sacrificing quality or robustness. For years, Sprecher + Schuh has built standard custom control panels for these applications to meet rigid consultant specifications and to comply with UL and NEC requirements.



NEMA Sized for all HVAC/R applications

Sprecher + Schuh offers a complete line of combination and non-combination starters suitable for almost any HVAC/R application in the industry. Standard HVAC/R starters range from NEMA Size 00 up to NEMA size 3 (50HP @460V AC).

Standard starters include Non-combination, Fusible, Non-Fusible and Molded Case Circuit Breaker disconnects. All sizes are available in metallic Type 1 General Purpose or Type 3R Outdoor Rain tight enclosures. Three-phase and Single-Phase styles are available. An additional factory assembled option is the fireman damper interface, especially designed for meeting the needs of building and contractor specifications for shut down control.



Fractional Manual Starters



KWIKstarters



C7

NEMA Starters

HVAC/R Program Features

- Fractional Manual Starters for easy, simple starting to 1 HP
- KWIKstarters for a quick solution, built from stock and easily assembled
- Robust, quality core components and accessories
- Multiple disconnect options in a wide range of sizes
- Wide range of choices to fit a variety of building automation needs

Customized for You

Almost all HVAC/R focused products can be customized to fit the exact needs of your building automation project. From simple starting of roof-top compressors and ventilation fans, to complete pump panel solutions for industrial chillers, we've got you covered.



Non-combination Starter



Fusible Combination Starter



Fireman Damper Options

Fractional Manual Starters

Easy, simple starting of Motors up to 1 HP

Sprecher + Schuh Fractional Manual Starters (FMS) consist of a snap switch combined with a thermal overload device operating on the solder-ratchet principle. To reset the overload mechanism, the switch lever is moved to the OFF position. The motor can be restarted by simply pushing the switch lever to the ON position. The switch is designed to prevent being held closed under a sustained motor overload.



Easy to Order

FMS Starters are easy to order. Simply choose a 1-Pole or 2-Pole with or without the Neon pilot light and then order the required Heater Element. You're done!

Typical Applications

Starting and overload protection of small 1-phase 115...230V AC/DC or 277 VAC motors used on the following applications:

- Unit heaters
- Fans
- Stokers
- Pumps
- Refrigeration compressors

Fractional Manual Starter

	Ratings (HP)		Poles Ⓜ	Type 1 General Purpose Surface Mounting Catalog Number
	115...230V AC	277V AC		
	Toggle Switch Only			
	1 1	1 1	1-Pole 2-Pole	FMS-TAX4 FMS-TAX5
	Toggle Switch with Neon Pilot Light (115 or 230V)			
	1 1	1 1	1-Pole 2-Pole	FMS-TAX216 FMS-TAX109

Optional Locking Attachment

	Accessory	Catalog Number
	Locking Attachment For locking toggle switch in ON or OFF position.	FMS-N1

Selecting Heater Elements ③

The "Full Load Amps" listed in the table can be used for heater element selection. The rating of the relay in amperes at 40°C is 115% of the "Full Load Amps" (FLA) listed for the catalog number. Refer to the motor nameplate for the full load current, the service factor, and/or the motor classification by application and temperature rise. Use this motor nameplate information, the application rules and the FLA listed in the table to determine the Heater Element catalog number for motors rated for Continuous Duty.

1. *For the Same Temperature at the Controller and Motor* : Select the Heater Element with the listed FLA nearest the full load value shown on the motor nameplate.
2. *For Higher Temperature at the Controller than at the Motor* : If the full load current value shown on the motor nameplate is between the listed FLAs, select the Heater Element with the next higher value.
3. *For a Lower Temperature at the Controller than at the Motor* : If the full load current value shown on the motor nameplate is between the listed FLAs, select the Heater Element with the next lower value.
4. *All other motors rated for continuous duty* (includes motors with marked service factor 1.0): Select the Heater Element one rating smaller than determined by rules in 1, 2 and 3.

Ordering Instructions

Order FMS Catalog Number
Order Required FMS Heater Element(s) ①
Order Optional FMS Locking Attachment

- ① One heater is required for 1-pole or 2-pole applications. See schematic on next page.
- ② Two-pole selections are applicable for 3/4 HP at 115...230V DC.
- ③ Rule 2 and 3 temperature difference not to exceed more than 10°C (18°F).


Heater Element (Required) ①

Full Load Amps	Catalog Number
0.17	P1
0.21	P2
0.25	P3
0.32	P4
0.39	P5
0.46	P6
0.57	P7
0.71	P8
0.79	P9
0.87	P10
0.98	P11
1.08	P12
1.19	P13
1.30	P14
1.43	P15
1.58	P16
1.75	P17
1.88	P18
2.13	P19
2.40	P20
2.58	P21
2.92	P22
3.09	P23
3.32	P24
3.37	P25
4.16	P26
4.51	P27
4.93	P28
5.43	P29
6.03	P30
6.83	P31
7.72	P32
8.24	P33
8.90	P34
9.60	P35
10.8	P36
12.0	P37
13.5	P38
15.2	P39

Technical Information

Eutectic Operation

Thermal overload devices using the eutectic alloy method are spring loaded in the normal, or reset, position. When the heater is cold, the solder is solid and holding the spring loaded ratchet. When FLA is passed through the heater, and if excess current flows, then the solder will melt and allow the ratchet mechanism to turn. This result trips the device. The device is reset by turning the switch to the OFF position and allowing it to cool.

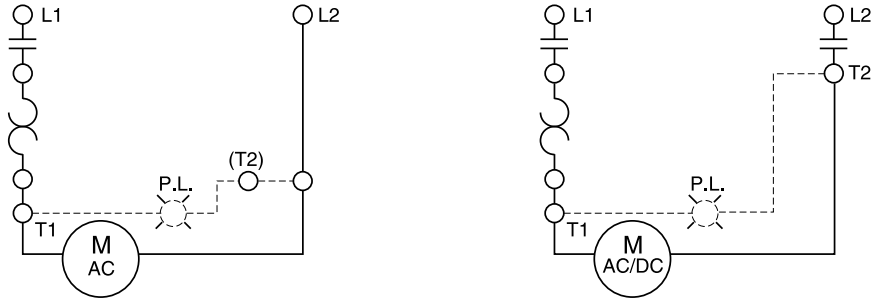

Standards Compliance

- UL 508
- EN60947-4-1
- CSA C22.2, No. 14

Certifications


- UL Listed - Enclosed Products (File No. E14841; Guide No. NLRV)
- CSA Certified (File No. LR 1234)
- American Bureau of Shipping (ABS)
- CE marked

Trip Time


- Class 20
- Reset Time: The actual time to reset will vary based on the ambient temperature surrounding the overload. Under most conditions, it will take from approximately 90 seconds up to 5 minutes for the solder to solidify enough for the overload to be reset. Until this happens, the overload will not be able to be reset by pressing on the reset button. The ratchet assembly inside the overload block will spin freely until the solder has solidified.

Dimensions

FMS Type 1 General Purpose Surface Mounting

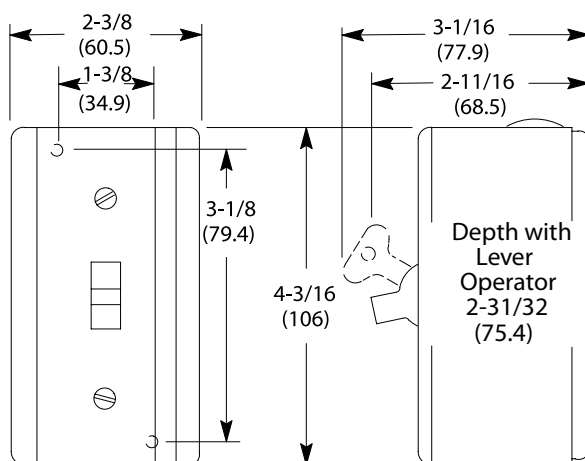

TIME - Current Characteristics at 40°C

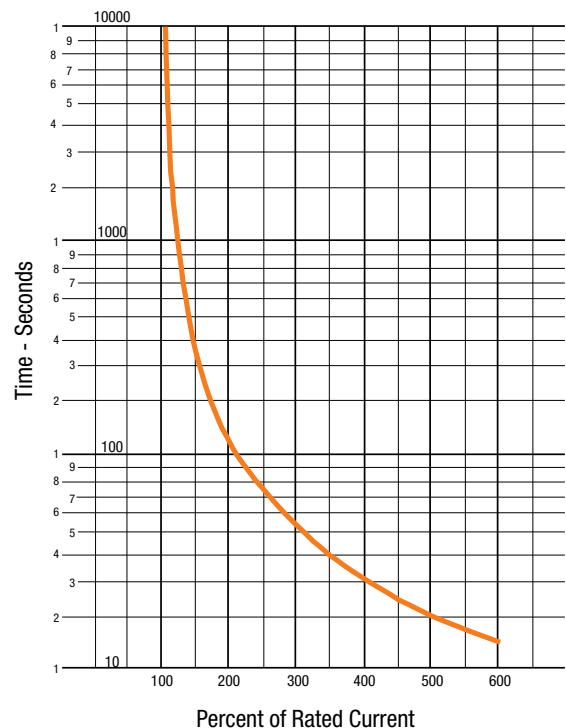

NOTE: Trip will occur at 115% of FLA

NEMA Labeled KWIKStarters

**Preassembled or
build from stock –
Easy, fast, economical
enclosed starters for
applications up to 25HP**

C7
NEMA Starters



KWIKstarters come standard with our advanced CEP7 Solid State Overload Relay (select appropriate overload relay)

Sprecher + Schuh offers a broad selection of pre-assembled or “build-from-stock” starters housed in a high impact, non-metallic, cUL Approved, Type 1, 12, 4, 4X enclosure. Built for convenience, space savings and economy, KWIKstarters are efficiently designed to use stock CAN7 contactors and CEP7 overloads usually stocked by distributors. Contactor and overload are either pre-wired and pre-mounted onto the enclosure’s built-in DIN-rail or may be ordered as separate components. Ample knockouts and open terminals guarantee quick, no fuss wiring.

Sized for most industrial applications

NEMA labeled KWIKstarters control motors up to 25 HP @ 460V in two sizes of enclosures, measuring only 208 x 98mm (7.4” x 3.9”) or 250 x 125mm (9.85” x 4.93”) for our larger sizes. This covers over 85% of industrial motor control applications in a very compact package that can be mounted adjacent to or directly on equipment.

Solid state overload options

KWIKstarters are supplied with Sprecher + Schuh’s CEP7 solid state overload relay. The CEP7 Overload with Manual Reset is standard on all KWIKstarters. An Automatic Reset is available as an additional option.

The CEP7 solid state overload relays measure motor current directly through integrated current transformers and on board electronics. The electronics provide increased accuracy and numerous other advantages over electromechanical relays. Learn more about Sprecher + Schuh overload relays in Section B of this catalog.

Build it yourself...

KWIKstarters may be assembled from stock components. Just grab a CAN7 contactor and overload of your choice and snap them into the enclosure. Minimal wiring is required and assembly can be completed in minutes.



NEMA KWIKstarters with CEP7 Overload Relays

Cover Control/ Enclosure (KS7-C0S1/C0S4)	NEMA Size	Maximum Horsepower						Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	D I M
		Single Ø		Three Ø							
		115V	230V	200V	230V	460V	575V	NO	NC	Catalog Number	3
	KWIKstarter with Start & Raised Stop with AC Coil ④⑤										
	00	.33	1	~	~	~	~	1 ②	0	CLNB-KA712*-◆-3	Q1
		~	~	1.5	1.5	2	2			CLN-KA712*-◆-3	
	0	1	2	~	~	~	~	1 ②	0	CLNB-KA716*-◆-3	Q1
		~	~	3	3	5	5			CLN-KA716*-◆-3	
		KWIKstarter with Reset with AC Coil									
00		.33	1	~	~	~	~	1 ②	0	CLNB-KA712*-◆-0	Q1
		~	~	1.5	1.5	2	2			CLN-KA712*-◆-0	
0		1	2	~	~	~	~	1 ②	0	CLNB-KA716*-◆-0	Q1
		~	~	3	3	5	5			CLN-KA716*-◆-0	



Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table.

C7

NEMA Starters

Coil Codes ⑥⑥

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-Phase	3-Phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200-220V	208-240V	Common	Common
0277	240V	277V	Common	~
0415	400-415V	~	~	Common
0480	440V	480V	~	Common
0600	550V	600V	~	Common

D.C. Coil Code	Voltage Range
	VDC
012E	12V
024E	24V

KWIKstarters with CEP7 Solid State Overload Relay ⑥

For use with KWIKstarter...	Amp Range	Overload Relay Code (◆)	Catalog Number (of Overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CLN-KA712...16 CLNB-KA712...16	0.1...0.5	1EAB	CEP7-1EEAB
	0.2...1.0	1EBB	CEP7-1EEBB
	1.0...5.0	1ECB	CEP7-1EECB
	3.2...16	1EDB	CEP7-1EEDB
	5.4...27	1EEB	CEP7-1EEEB
1-Phase & 3-Phase / Auto or Manual Reset / Class 10...30			
CLN-KA712...16 CLNB-KA712...16	0.1...0.5	FAB	CEP7-1EFAB
	0.2...1.0	FBB	CEP7-1EFBB
	1.0...5.0	FCB	CEP7-1EFCB
	3.2...16	FDB	CEP7-1EFDB
	5.4...27	FEB	CEP7-1EFEB

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Replace (◆) with O/L Relay	See this page
Important Note: KWIKstarters are only designed to accommodate CEP7 Solid State Overload Relays.	

- ① KWIKstarters are designed for three-wire control circuits. Two-wire (maintain) control can be accomplished by adding pushbutton latch KS7-PLA.
- ② A special design NO auxiliary contact (Cat.# KS7-PCK) is used as the holding circuit interlock, as well as, the START button interface. It is not available for other use.
- ③ Refer to page C7:16 for dimensional information.
- ④ STOP button also functions as RESET button. Plastic Bezel is standard.
- ⑤ Other voltages available, see Section A.
- ⑥ CLN-KA712...16 with electronic coils are not interchangeable with non-electronic DC or AC coils.

NEMA KWIKstarters with CEP7 Overload Relays

Enclosure (KS7-C2S4)	NEMA Size	Maximum Horsepower						Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	D I M ③
		Single Ø		Three Ø							
		115V	230V	200V	230V	460V	575V	NO	NC	Catalog Number	
	NEMA KWIKstarters										
	1	2	3	~	~	~	~	1	0	CLNB-KAL737*-◆-▼	Q2
		~	~	7.5	7.5	10	10			CLN-KAL737*-◆-▼	
	2	3	7.5	~	~	~	~	1	0	CLNB-KAL743*-◆-▼	Q2
		~	~	10	15	25	25			CLN-KAL743*-◆-▼	



Coil Codes (*) ④⑤⑦

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-Phase	3-Phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200-220V	208-240V	Common	Common
0277	240V	277V	Common	~
0415	400-415V	~	~	Common
0480	440V	480V	~	Common
0600	550V	600V	~	Common

D.C. Coil Code	Voltage Range
	VDC
012E	12V
024E	24V
048E	48-72V
220E	220-250V

AC Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table. Pilot lights are 240 VAC maximum.

Pilot Device Options (includes reset) ②⑥

Pushbutton Description	Replace ▼ in catalog number with
START-STOP Multi-function (shown)	3U
I-O Multi-function	4U
OFF-ON 2-Position Selector switch	6
Pilot Light Red (LED) with START-STOP Multi-function ③	13U
Pilot Light Red (LED) with I-O Multi-function ③	14U

Optional CA7 Modifications (Factory Assembled) ④

Description	Add to end of catalog number
Electronic Interface	-JE
Surge Suppressor RD	-C
Surge Suppressor Varistor	-V
Additional NC Contact	-L01
Additional NO Contact	-L10

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See this page only
Replace (◆) with O/L Relay	
Replace (▼) with Pilot Device Option	

Replace ◆ with one of the following Overload Relays

For use with KWIKstarter...	Amp Range	Overload Relay Code (◆)	Catalog Number (of Overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CLN-KAL730...43	5.4...27	1EED	CEP7-1EEED
CLNB-KAL730...43	11...55	1EFD	CEP7-1EEFD
1-Phase & 3-Phase / Auto or Manual Reset / Class 10, 15, 20, 30 ③			
CLN-KAL730...43	5.4...27	FED	CEP7-1EFED
CLNB-KAL730...43	11...55	FFD	CEP7-1EFFD

- ① Use CEP7-1 overloads only. Also backward compatible to CEP7-ED1/EE.
- ② Plastic Bezel is standard. Pilot Device options include D7-BX_ Base Mounted contact blocks. See page C7:16 for more information.
- ③ Refer to page C7:14 for wiring diagram and C7:16 for dimensional information.
- ④ CLN-KAL737...43 with electronic coils are not interchangeable with non-electronic DC or AC coils.
- ⑤ Other voltages available, see Section A.
- ⑥ One and only one Pilot Device option must be selected. If Pilot Light option is selected then coil voltage must be 24V AC or DC, 120V or 240V AC only.
- ⑦ CPT not possible with KS7-C2S4 (Q2) enclosure.
- ⑧ List price adder may apply for this option.

NEMA KWIKstarters with CEP7 Overload Relays with H-O-A and Reset ①②

Cover Control/ Enclosure (KS7-COS1)	NEMA Size	Maximum Horsepower						Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	D I M	
		Single Ø		Three Ø				NO	NC			
		115V	230V	200V	230V	460V	575V			Catalog Number		②
	NEMA KWIKstarter with Reset and Illuminated H-O-A Selector Switch											
	00	.33	1	~	~	~	~	1 ③	0	CLNB-KA712*-◆-17		Q1
		~	~	1.5	1.5	2	2			CLN-KA712*-◆-17		
	0	1	2	~	~	~	~	1 ③	0	CLNB-KA716*-◆-17		Q1
		~	~	3	3	5	5			CLN-KA716*-◆-17		

Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table.

Coil Codes ③

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-Phase	3-Phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200-220V	208-240V	Common	Common

D.C. Coil Code	Voltage Range
	VDC
012E	12V
024E	24V

KWIKstarters with CEP7 Solid State Overload Relay

For use with KWIKstarter...	Amp Range	Overload Relay Code (◆)	Catalog Number (of Overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CLN-KA712...16 CLNB-KA712...16	0.1...0.5	1EAB	CEP7-1EEAB
	0.2...1.0	1EBB	CEP7-1EEBB
	1.0...5.0	1ECB	CEP7-1EECB
	3.2...16	1EDB	CEP7-1EEDB
	5.4...27	1EEB	CEP7-1EEEB
1-Phase & 3-Phase / Auto or Manual Reset / Class 10...30 ④			
CLN-KA712...16 CLNB-KA712...16	0.1...0.5	FAB	CEP7-1EFAB
	0.2...1.0	FBB	CEP7-1EFBB
	1.0...5.0	FCB	CEP7-1EFCB
	3.2...16	FDB	CEP7-1EFDB
	5.4...27	FEB	CEP7-1EFEB

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Replace (◆) with O/L Relay	See this page
Important Note: KWIKstarters are only designed to accommodate CEP7 Solid State Overload Relays.	

- ① This is a factory assembly. The KS7-COS1 (Q1) enclosure does not include knock-outs for field assembly of this starter.
- ② Refer to page C7.14 for wiring and C7.16 for dimensional information. This is a clam-shell enclosure design with wires to cover controls.
- ③ One NO auxiliary for customer use. There is no room for additional auxiliaries.
- ④ CLN-KA712...16 with electronic coils are not interchangeable with non-electronic DC or AC coils.
- ⑤ List price adder may apply for this option.

Three Phase Reversing NEMA KWIKstarters with CEP7 Overload Relays ①②

Enclosure (KS7-C054R)	NEMA Size	Maximum Horsepower				Total Aux. Contacts Installed		cUL Approved- Type 1/12/4/4X IP66	D I M ③
		Three Ø							
		200V	230V	460V	575V	NO	NC		
	3-Phase FVR NEMA KWIKstarter with AC Coil								
	00	1.5	1.5	2	2	1	1	CLUN-KAL712*-◆-▼	Q3
	0	3	3	5	5	1	1	CLUN-KAL716*-◆-▼	Q3



Coil Codes (*) ④⑤⑦

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-Phase	3-Phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200-220V	208-240V	Common	Common
0277	240V	277V	Common	~
0415	400-415V	~	~	Common
0480	440V	480V	~	Common
0600	550V	600V	~	Common

D.C. Coil Code	Voltage Range VDC
012E	12V
024E	24V
036E	36-48V
048E	48-72V
110E	110-125V
220E	220-250V

AC Control Circuit Note

Common: Coils and pilot devices in the control circuit are assumed to be common with the line voltage and will be connected to the line source (L1-L2) per the table.

Separate: Coils and pilot devices in the control circuit are assumed to be from a separate source and will not be connected to the line source per the table. Pilot lights are 240 VAC maximum.

Pilot Device Options (includes reset) ②③

Pushbutton Description	Replace ▼ in catalog number with
FOR-STOP-REV Multi-function (shown)	3U
UP-STOP-DOWN Multi-function	4U
OPEN-STOP-CLOSE Multi-function	5U
FOR-STOP-REV 3-Position Selector switch	6
UP-OFF-DOWN 3-Position Selector switch	7
OPEN-OFF-CLOSE 3-Position Selector switch	8
Overload Alarm Pilot Light	1Y
D7-N8 22mm Hole Plug (Reset Only)	0

Optional CA7 Modifications (Factory Assembled) ④

Description (supplied on each contactor)	Add to end of catalog number
Electronic Interface	-2JE
Surge Suppressor RD	-2C
Surge Suppressor Varistor	-2V

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See this page only
Replace (◆) with O/L Relay	
Replace (▼) with Pilot Device Option	

Replace ◆ with one of the following Overload Relays

For use with KWIKstarter...	Amp Range	Overload Relay Code (◆)	Catalog Number (of Overload Relay used)
1-Phase & 3-Phase / Manual Reset / Class 10 or 20			
CLUN-KAL712...16	0.1...0.5	1EAB	CEP7-1EEAB
	0.2...1.0	1EBB	CEP7-1EEBB
	1.0...5.0	1ECB	CEP7-1EECB
	3.2...16	1EDB	CEP7-1EEDB
	5.4...27	1EEB	CEP7-1EEEB
1-Phase & 3-Phase / Auto or Manual Reset / Class 10, 15, 20, 30 ⑨			
CLUN-KAL712...16	0.1...0.5	FAB	CEP7-1EFAB
	0.2...1.0	FBB	CEP7-1EFBB
	1.0...5.0	FCB	CEP7-1EFCB
	3.2...16	FDB	CEP7-1EFDB
	5.4...27	FEB	CEP7-1EFEB

- ① Use CEP7-1 overloads only. Also backward compatible to CEP7-ED1/EE.
- ② Plastic Bezel is standard. Pilot Device options include D7-BX_ Base Mounted contact blocks. See page C7:16 for more information.
- ③ Refer to page C7:15 for wiring diagram and C7:17 for dimensional information.
- ④ CLUN-KAL712...16 with electronic coils are not interchangeable with non-electronic DC or AC coils.
- ⑤ Other voltages available, see Section A.
- ⑥ One Pilot Device option must be selected. Blanks are not available. If Pilot Light option is selected then Pilot Light must match Coil Voltage 24V AC or DC, 120V or 240V AC only.
- ⑦ CPT not possible with KS7-COS4R (Q3) enclosure.
- ⑧ One N.C. auxiliary contact is used for electrical interlocking. On CLUN-KAL7 reversing starters, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat# CM7-02).
- ⑨ List price adder may apply for this option.

Three Phase, Non-Reversing CLN-KA7 @ 200V AC KWIKstarter

NEMA Size	Max HP 3 Ø	Adjustment Range	Start-Stop Pushbutton or Multifunction with Reset	Reset Only	D I M ⑥
	200V		Catalog Number	Catalog Number	
00	0.5	1.0...5.0	CLN-KA712220W-1ECB-3 ① ② ③	CLN-KA712220W-1ECB-0 ① ②	Q1
	0.75	1.0...5.0	CLN-KA712220W-1ECB-3 ① ② ③	CLN-KA712220W-1ECB-0 ① ②	
	1	3.2...16	CLN-KA712220W-1EDB-3 ① ② ③	CLN-KA712220W-1EDB-0 ① ②	
	1.5	3.2...16	CLN-KA712220W-1EDB-3 ① ② ③	CLN-KA712220W-1EDB-0 ① ②	
0	2	3.2...16	CLN-KA716220W-1EDB-3 ① ② ③	CLN-KA716220W-1EDB-0 ① ②	Q1
	3	3.2...16	CLN-KA716220W-1EDB-3 ① ② ③	CLN-KA716220W-1EDB-0 ① ②	
1	5	5.4...27	CLN-KAL737220W-1EED-3U ④ ⑤		Q2
	7.5	11...55	CLN-KAL737220W-1EFD-3U ④ ⑤		
2	10	11...55	CLN-KAL743220W-1EFD-3U ④ ⑤		


 12...16 Amp
(Q1 Dim – Start/Stop)

 12...16 Amp
(Q1 Dim - Reset) Only

 37...43 Amp
(Q2 Dim)

C7
NEMA Starters

Three Phase, Non-Reversing CLN-KA7 @ 200-230V AC KWIKstarter

NEMA Size	Max HP 3 Ø	Adjustment Range	Start-Stop Pushbutton or Multifunction with Reset	Reset Only	D I M ⑥
	230V		Catalog Number	Catalog Number	
00	0.5	1.0...5.0	CLN-KA712220W-1ECB-3 ① ② ③	CLN-KA712220W-1ECB-0 ① ②	Q1
	0.75	1.0...5.0	CLN-KA712220W-1ECB-3 ① ② ③	CLN-KA712220W-1ECB-0 ① ②	
	1	1.0...5.0	CLN-KA712220W-1ECB-3 ① ② ③	CLN-KA712220W-1ECB-0 ① ②	
	1.5	3.2...16	CLN-KA712220W-1EDB-3 ① ② ③	CLN-KA712220W-1EDB-0 ① ②	
0	2	3.2...16	CLN-KA716220W-1EDB-3 ① ② ③	CLN-KA716220W-1EDB-0 ① ②	Q1
	3	3.2...16	CLN-KA716220W-1EDB-3 ① ② ③	CLN-KA716220W-1EDB-0 ① ②	
1	5	5.4...27	CLN-KAL737220W-1EED-3U ④ ⑤		Q2
	7.5	5.4...27	CLN-KAL737220W-1EED-3U ④ ⑤		
2	10	11...55	CLN-KAL743220W-1EFD-3U ④ ⑤		Q2
	15	11...55	CLN-KAL743220W-1EFD-3U ④ ⑤		

Full Voltage Non-Reversing (FVNR)
Features include:

- NEMA-sized CAN7 contactor
- CEP7 Solid State Overload Relay (Q1/Q2 Dim)
- Green Start pushbutton (Q1 Dim – Start/Stop)
- Red Raise Stop pushbutton (Q1 Dim – Start/Stop)
- Reset pushbutton (Q1 Dim – Reset)
- 1-NO auxiliary for customer use
- Non-Metallic Enclosure Type 1/12/4/4X, IP66
- Pre-wired for easy installation
- Ideal for compressors, fans, blowers

Three Phase, Non-Reversing CLN-KA7 @ 480V AC KWIKstarter

NEMA Size	Max HP 3 Ø	Adjustment Range	Start-Stop Pushbutton or Multifunction with Reset	Reset Only	D I M ⑥
	460V		Catalog Number	Catalog Number	
00	0.5	1.0...5.0	CLN-KA7120480-1ECB-3 ① ② ③	CLN-KA7120480-1ECB-0 ① ②	Q1
	0.75	1.0...5.0	CLN-KA7120480-1ECB-3 ① ② ③	CLN-KA7120480-1ECB-0 ① ②	
	1	1.0...5.0	CLN-KA7120480-1ECB-3 ① ② ③	CLN-KA7120480-1ECB-0 ① ②	
	1.5	1.0...5.0	CLN-KA7120480-1ECB-3 ① ② ③	CLN-KA7120480-1ECB-0 ① ②	
0	2	1.0...5.0	CLN-KA7120480-1ECB-3 ① ② ③	CLN-KA7120480-1ECB-0 ① ②	Q1
	3	3.2...16	CLN-KA7160480-1EDB-3 ① ② ③	CLN-KA7160480-1EDB-0 ① ②	
1	5	3.2...16	CLN-KA7160480-1EDB-3 ① ② ③	CLN-KA7160480-1EDB-0 ① ②	Q1
	7.5	5.4...27	CLN-KAL7370480-1EED-3U ④ ⑤		Q2
2	10	5.4...27	CLN-KAL7370480-1EED-3U ④ ⑤		
	15	11...55	CLN-KAL7430480-1EFD-3U ④ ⑤		Q2
	20	11...55	CLN-KAL7430480-1EFD-3U ④ ⑤		
2	25	11...55	CLN-KAL7430480-1EFD-3U ④ ⑤		

- ① KWIKstarters are designed for three-wire control circuits. Two-wire (maintain) control can be accomplished by adding pushbutton latch KS7-PLA.
- ② A special design NO auxiliary contact (Cat.# KS7-PCK) is used as the holding circuit interlock, as well as, the START button interface. It is not available for other use.
- ③ STOP button also functions as RESET button. Plastic bezel is standard.
- ④ Use CEP7-1 overloads only - and also backward compatible to CEP7-ED1/EE.
- ⑤ Plastic bezel is standard. Pilot device options include D7-BX_ base Mounted contact blocks. See page H69 for more information.
- ⑥ Refer to page C7:16 for dimensional information.

Single Phase, Non-Reversing CLNB-KA7 @ 115V AC KWIKstarter ❶

NEMA Size	Max HP 1 Ø	Adjustment Range	Start-Stop Pushbutton or Multifunction with Reset ❷❸❹	Reset Only	D I M ❸
	115V		Catalog Number	Catalog Number	
00	0.25	3.2...16	CLNB-KA7120120-1EDB-3 ❹	CLNB-KA7120120-1EDB-0 ❹	Q1
	0.33	3.2...16	CLNB-KA7120120-1EDB-3 ❹	CLNB-KA7120120-1EDB-0 ❹	
0	0.5	3.2...16	CLNB-KA7160120-1EDB-3 ❹	CLNB-KA7160120-1EDB-0 ❹	
	0.75	3.2...16	CLNB-KA7160120-1EDB-3 ❹	CLNB-KA7160120-1EDB-0 ❹	
	1	5.4...27	CLNB-KA7160120-1EEB-3 ❹	CLNB-KA7160120-1EEB-0 ❹	
1	1.5	5.4...27	CLNB-KAL7370120-1EED-3U ❷❹		Q2
	2	11...55	CLNB-KAL7370120-1EFD-3U ❷❹		
2	3	11...55	CLNB-KAL7430120-1EFD-3U ❷❹		



12...16 Amp



12...16 Amp
Reset Only



37...43 Amp

Single Phase, Non-Reversing CLNB-KA7 @ 230V AC KWIKstarter ❶

NEMA Size	Max HP 1 Ø	Adjustment Range	Start-Stop Pushbutton or Multifunction with Reset ❷❸❹	Reset Only	D I M ❸
	230V		Catalog Number	Catalog Number	
00	0.25	1.0...5.0	CLNB-KA712220W-1ECB-3 ❹	CLNB-KA712220W-1ECB-0 ❹	Q1
	0.33	1.0...5.0	CLNB-KA712220W-1ECB-3 ❹	CLNB-KA712220W-1ECB-0 ❹	
	0.5	3.2...16	CLNB-KA712220W-1EDB-3 ❹	CLNB-KA712220W-1EDB-0 ❹	
	0.75	3.2...16	CLNB-KA712220W-1EDB-3 ❹	CLNB-KA712220W-1EDB-0 ❹	
	1	3.2...16	CLNB-KA712220W-1EDB-3 ❹	CLNB-KA712220W-1EDB-0 ❹	
0	1.5	3.2...16	CLNB-KA716220W-1EDB-3 ❹	CLNB-KA716220W-1EDB-0 ❹	
	2	3.2...16	CLNB-KA716220W-1EDB-3 ❹	CLNB-KA716220W-1EDB-0 ❹	
1	3	5.4...27	CLNB-KAL737220W-1EED-3U ❷❹		Q2
2	5	11...55	CLNB-KAL743220W-1EFD-3U ❷❹		
	7.5	11...55	CLNB-KAL743220W-1EFD-3U ❷❹		

Full Voltage Non-Reversing (FVNR)

Features include:

- NEMA-sized CAN7 contactor
- CEP7 Solid State Overload Relay
- Green Start pushbutton
- Red Raise Stop pushbutton
- Reset pushbutton
- 1-NO auxiliary for customer use
- Non-Metallic Enclosure Type 1/12/4/4X, IP66
- Pre-wired for easy installation
- Ideal for compressors, fans, blowers

❶ KWIKstarters are designed for three-wire control circuits. Two-wire (maintain) control can be accomplished by adding pushbutton latch KS7-PLA.
 ❷ A special design NO auxiliary contact (Cat.# KS7-PCK) is used as the holding circuit interlock, as well as, the START button interface. It is not available for other use.
 ❸ Refer to page C7:14 for wiring diagram and C7:16 for dimensional information.
 ❹ STOP button also functions as RESET button. Plastic Bezel is standard.
 ❺ Other voltages available, see Section A.
 ❻ Use CEP7-1 overloads only - and also backward compatible to CEP7-ED1/EE.
 ❼ Plastic Bezel is standard. Pilot Device options include D7-BX_ Base Mounted contact blocks. See page C7:16 for more information.
 ❽ CPT not possible with KS7-C254 (Q2) enclosure.

Three Phase, Non-Reversing CLN-KA7 @ 200V AC KWIKstarter ①②

NEMA Size	Max HP 3 Ø	Adjustment Range	with CEP7 Overload Relay	D I M ②
	200V		Catalog Number	
00	0.5	1.0...5.0	CLN-KA712220W-1ECB-17	Q1
	0.75	1.0...5.0	CLN-KA712220W-1ECB-17	
	1	3.2...16	CLN-KA712220W-1EDB-17	
	1.5	3.2...16	CLN-KA712220W-1EDB-17	
0	2	3.2...16	CLN-KA716220W-1EDB-17	
	3	3.2...16	CLN-KA716220W-1EDB-17	


Three Phase, Non-Reversing CLN-KA7 @ 230V AC KWIKstarter ①②

NEMA Size	Max HP 3 Ø	Adjustment Range	with CEP7 Overload Relay	D I M ②
	230V		Catalog Number	
00	0.5	1.0...5.0	CLN-KA712220W-1ECB-17	Q1
	0.75	1.0...5.0	CLN-KA712220W-1ECB-17	
	1	1.0...5.0	CLN-KA712220W-1ECB-17	
	1.5	3.2...16	CLN-KA712220W-1EDB-17	
0	2	3.2...16	CLN-KA716220W-1EDB-17	
	3	3.2...16	CLN-KA716220W-1EDB-17	

Full Voltage Non-Reversing (FVNR)
Features include:

- NEMA-sized CAN7 contactor
- CEP7 Solid State Overload Relay
- Illuminated (Red) Hand-Off-Auto Selector Switch
- Reset pushbutton
- 1-NO auxiliary for customer use
- Non-Metallic Enclosure Type 1/12/4/4X, IP66
- Pre-wired for easy installation
- Ideal for compressors, fans, blowers

Single Phase, Non-Reversing CLNB-KA7 @ 115V AC KWIKstarter ①②

NEMA Size	Max HP 1 Ø	Adjustment Range	with CEP7 Overload Relay	D I M ②
	115V		Catalog Number	
00	0.25	3.2...16	CLNB-KA7120120-1EDB-17	Q1
	0.33	3.2...16	CLNB-KA7120120-1EDB-17	
	0.5	3.2...16	CLNB-KA7160120-1EDB-17	
0	0.75	3.2...16	CLNB-KA7160120-1EDB-17	
	1	5.4...27	CLNB-KA7160120-1EEB-17	

Single Phase, Non-Reversing CLNB-KA7 @ 230V AC KWIKstarter ①②

NEMA Size	Max HP 1 Ø	Adjustment Range	with CEP7 Overload Relay	D I M ②
	230V		Catalog Number	
00	0.25	1.0...5.0	CLNB-KA712220W-1ECB-17	Q1
	0.33	1.0...5.0	CLNB-KA712220W-1ECB-17	
	0.5	3.2...16	CLNB-KA712220W-1EDB-17	
	0.75	3.2...16	CLNB-KA712220W-1EDB-17	
	1	3.2...16	CLNB-KA712220W-1EDB-17	
0	1.5	3.2...16	CLNB-KA716220W-1EDB-17	
	2	3.2...16	CLNB-KA716220W-1EDB-17	

① This is a factory assembly. The KS7-C0S1 (Q1) enclosure does not include knock-outs for field assembly of this starter.

② Refer to page C7:14 for wiring and C7:16 for dimensional information. This is a clam-shell enclosure design with wires to cover controls.

③ One NO auxiliary for customer use. There is no room for additional auxiliaries.

NEMA Labeled KWIKstarter Enclosures with CA7-9..43 and CEP7 Overload Relays ①②

Component	Description	For Use With		Environmental Approvals	Catalog Number
		Contactor	Overload		
	Flush Green START / Extended Red STOP- Mechanical interface auxiliary contact (KS7-PCK) included in enclosure.	CAN7-9...23	CEP7-1___B	cUL Type 1/12/4/4x IEC IP66	KS7-C0S4
	Blue RESET Only	CAN7-9...23	CEP7-1___B	cUL Type 1/12/4/4x IEC IP66	KS7-C0S1
	Enclosure for KWIKstarter ② CLN-KAL737...743 CLNB-KAL737...743	CAN7-30...55 CAN7-30E...55E	CEP7-1___D ④	cUL Type 1/12/4/4x IEC IP66	KS7-C2S4
	Enclosure for Reversing KWIKstarter ③ CLUN-KAL709...723	CAUN7-9...23 CAUN7-9E...23E	CEP7-1___B ④	cUL Type 1/12/4/4x IEC IP66	KS7-C0S4R

- ① NEMA KWIKstarters are only designed to accommodate CAN7-12/16/37/43 contactors with CEP7 Solid State Overload Relays. If ordering components, select contactor from Section A and overload relay from Section B in this catalog.
- ② KWIKstarter enclosure KS7-C2S4 are designed to fit CAN7-30(E)...43(E) contactors with CEP7 Overload Relays. CT7N Thermal Overloads can not be substituted.
- ③ KWIKstarter enclosure KS7-C0S4R are designed to fit CAUN7-12(E)...16(E) reversing contactors with CEP7 Overload Relays. CT7N Thermal Overloads can not be substituted.

- ④ KS7-C2S4 and KS7-C0S4R are supplied with two 22mm holes for Pilot Devices. A Reset is required and one additional pilot device kit from page C7:13 must be selected. Use of a CPT is not possible.
- ⑤ KS7-C_ series B enclosure are compatible to 3rd gen CEP7-1 and 2nd gen CEP7-ED1/EE. KS7-C_ series A enclosures (obsolete) are only compatible to 2nd gen CEP7.

KWIKstarter Components (for use with KS7-C0S1 / KS7-C0S4)

Component	Description	For Use With...	Catalog Number
	Start - Contact kit Specially designed NO auxiliary; mechanically interfaces with the START button. Mounts on right side. A KS_-PCK is included in every KS_-C0S4 enclosure.	KS7-C0S4 (Replacement Part)	KS7-PCK
	Pushbutton Latch - For maintain contact control (2-wire control)	KS7-C0S4	KS7-PLA
	Neutral Terminal	All KWIKstarter Enclosures	KS7-PNT
	Grounding Kit (for use with metal conduit)	KS7-C0S1 KS7-C0S4 enclosures	KS7-GR1

KWIKstarter Pilot Device Kits (for use with KS7-C2S4 / KS7-C0S4R) ❶


Kits	Description	For Use With Enclosure...	Contact Blocks included		Catalog Number
			NO	NC	
	Multi-Function Pushbutton kit Non-illuminated, plastic START-STOP I-O	KS7-C2S4 Type 1, 12, 4, 4X	1	1	KS7-P3U KS7-P4U
	FOR-STOP-REV UP-STOP-DOWN OPEN-STOP-CLOSE	KS7-C0S4R Type 1, 12, 4, 4X	2	1	KS7-P3U-REV KS7-P4U-REV KS7-P5U-REV
	Selector switch kits: Non-illuminated, plastic, includes legend plate ON-OFF 2-Position	KS7-C2S4 Type 1, 12, 4, 4X	1	-	KS7-P6
	FOR-OFF-REV 3-Position UP-OFF-DOWN 3-Position OPEN-OFF-CLOSE 3-Position	KS7-C0S4R Type 1, 12, 4, 4X	2	-	KS7-P6-REV KS7-P7-REV KS7-P8-REV
	Reset Pushbutton, Blue Plastic push button, flush operator with Blue Cap and R text	KS7-C2S4 KS7-C0S4	Black Plastic with Blue Cap and White "R"		D7P-F611 ❷

❶ Plastic bezel is standard. Pilot Device Kits include D7-BX_ Base Mounted contact blocks. See page C7:16 for more information.

❷ D7P-R611 and CEP7-1ERA can not be used with KS7-C2S4 or KS7-C0S4R. See Section H for more information.

KWIKstarter (in enclosure KS7-C0S1/C0S4)

CUSTOMER MUST PROVIDE PROPER BRANCH CIRCUIT PROTECTION (F1)
SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
FOR MAX. FUSE SIZE & CLASS AND APPLICABLE SHORT CIRCUIT RATING
(USE 75°C COPPER WIRE ONLY)

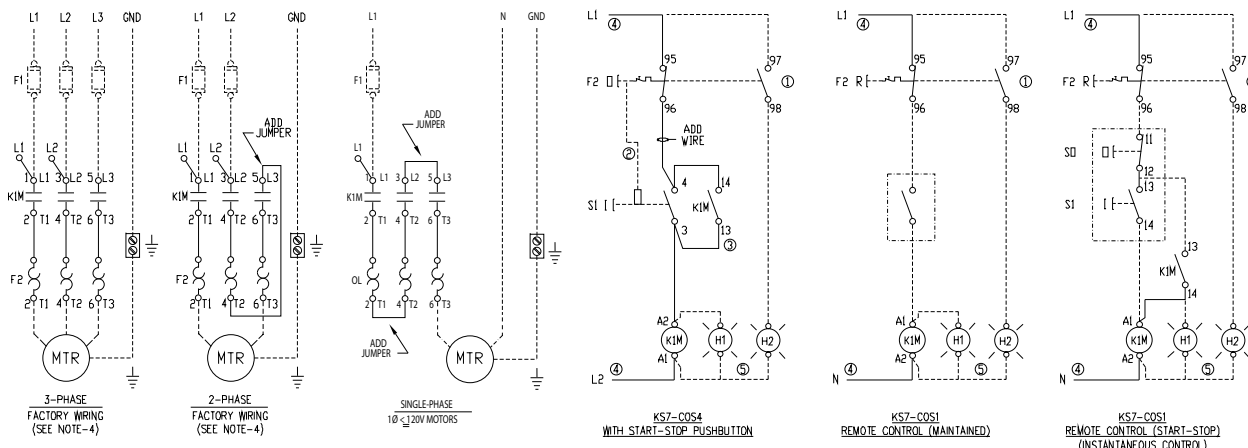


THIS DRAWING IS FOR THE FOLLOWING ENCLOSURES:
KS7-C0S4 with integrated START-STOP push buttons
KS7-C0S1 with integrated RESET push button


NOTES:

- 1) MECHANICAL LATCH KS7-PLA FOR MAINTAINED CONTROL (OPTIONAL).
- 2) START CONTACT KIT KS7-PCK (INCLUDED) MOUNTS ON THE RIGHT SIDE WITH MOLDED PRE-FORMED JUMPERS.
- 3) DO NOT WIRE CONTROLS CIRCUIT TO LINE SIDE OF CONTACTOR WHEN COIL VOLTAGE IS 120V OR LESS. (FACTORY WIRING STANDARD)
- 4) OPTIONAL PILOT LIGHTS.

KWIKstarter (in enclosure KS7-C2S4)

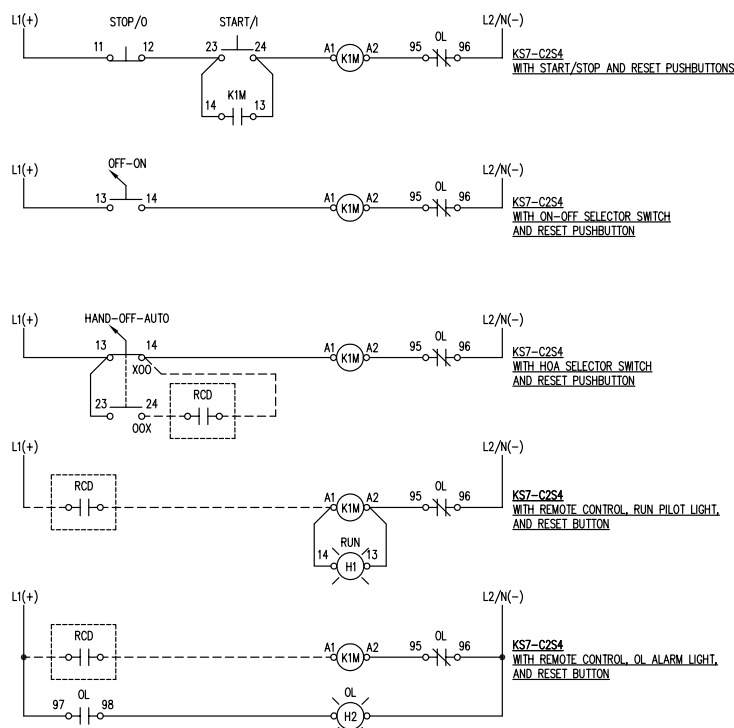



CUSTOMER WILL PROVIDE BRANCH CIRCUIT PROTECTION (F1)
SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
FOR MAX. FUSE SIZE, CLASS, AND APPLICABLE SHORT CIRCUIT RATING
(USE 75°C COPPER WIRE ONLY)

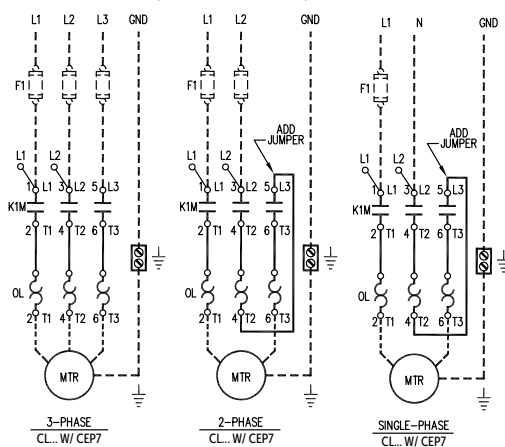

NOTES:


1. DO NOT CONNECT A1-A2 TO L1-L2 UNLESS COIL VOLTAGE MATCHES LINE VOLTAGE
2. PILOT LIGHTS POSSIBLE FOR REMOTE OR OVERLOAD ALARM IF NO START/STOP CONTROL DEVICES IN COVER
3. RCD = REMOTE CONTROL DEVICE (BY OTHERS)

Reversing KWIKstarter (in enclosure KS7-C0S4R)

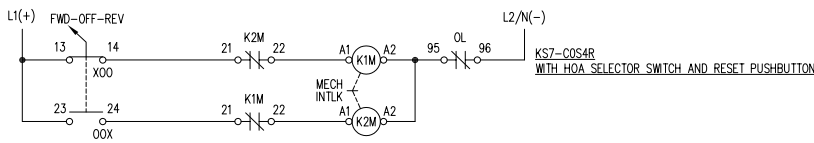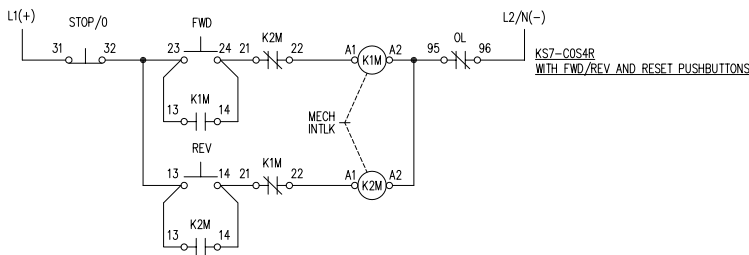



NOTE:
DO NOT CONNECT A1-A2 TO L1-L2 UNLESS COIL VOLTAGE MATCHES LINE VOLTAGE

CUSTOMER WILL PROVIDE BRANCH CIRCUIT PROTECTION (F1)
SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
FOR MAX. FUSE SIZE, CLASS, AND APPLICABLE SHORT CIRCUIT RATING
(USE 75°C COPPER WIRE ONLY)

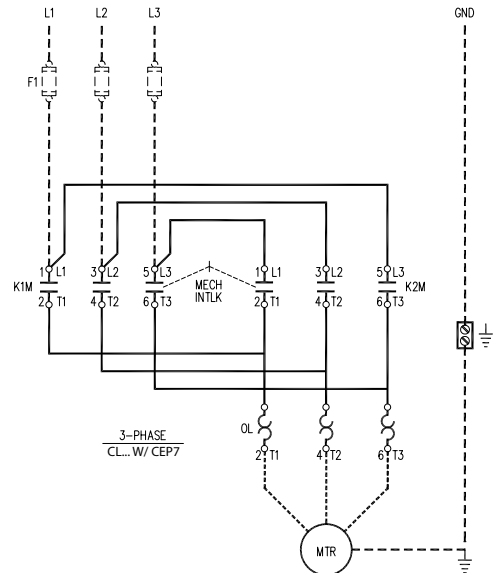


KWIKstarter (in enclosure KS7-C0S1) with HOA option

HAND-OFF-AUTO WITH
ILLUMINATED SELECTOR SWITCH

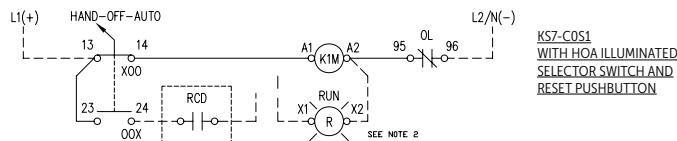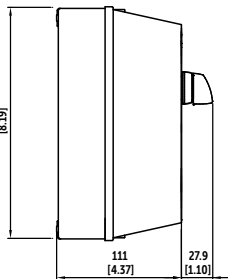

A.C. Coil Code	Voltage Range		Control Source	
	50 Hz	60 Hz	1-Phase	3-Phase
024Z	24V	24V	Separate	Separate
0120	110V	120V	Common	Separate
220W	200V-220V	208V-240V	Common	Common
D.C. Coil Code	Voltage Range		Control Source	
	VDC		1-Phase	3-Phase
012E	12V		Separate	Separate
024E	24V		Separate	Separate

CUSTOMER WILL PROVIDE BRANCH CIRCUIT PROTECTION (F1)
SEE THE APPLICATION INSTRUCTION SHEET - COMPONENT SELECTION TABLES
FOR MAX. FUSE SIZE, CLASS, AND APPLICABLE SHORT CIRCUIT RATING
(USE 75°C COPPER WIRE ONLY)

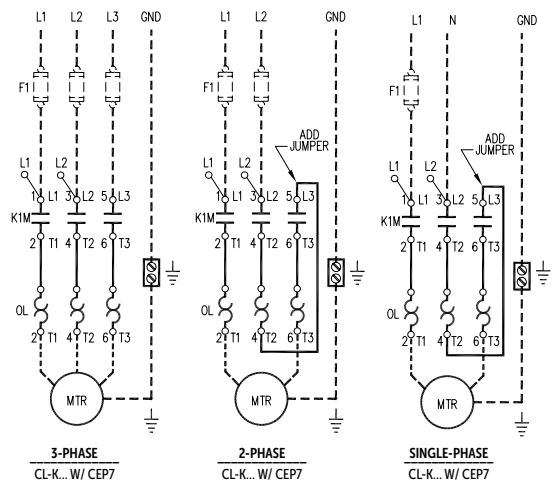


NOTES:


- RCD = REMOTE CONTROL DEVICE (BY OTHERS). WIRE RCD TO TERMINAL 24 ON THE H-O-A SEL. SW. AND TERMINAL A1 ON THE CONTACTOR.
- DASHED LINES - - - - - INDICATE WIRING PROVIDED IN THE FIELD.

KWIKstarter Enclosure KS7-C0S1/C0S4 (Dimension Code Q1)

Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

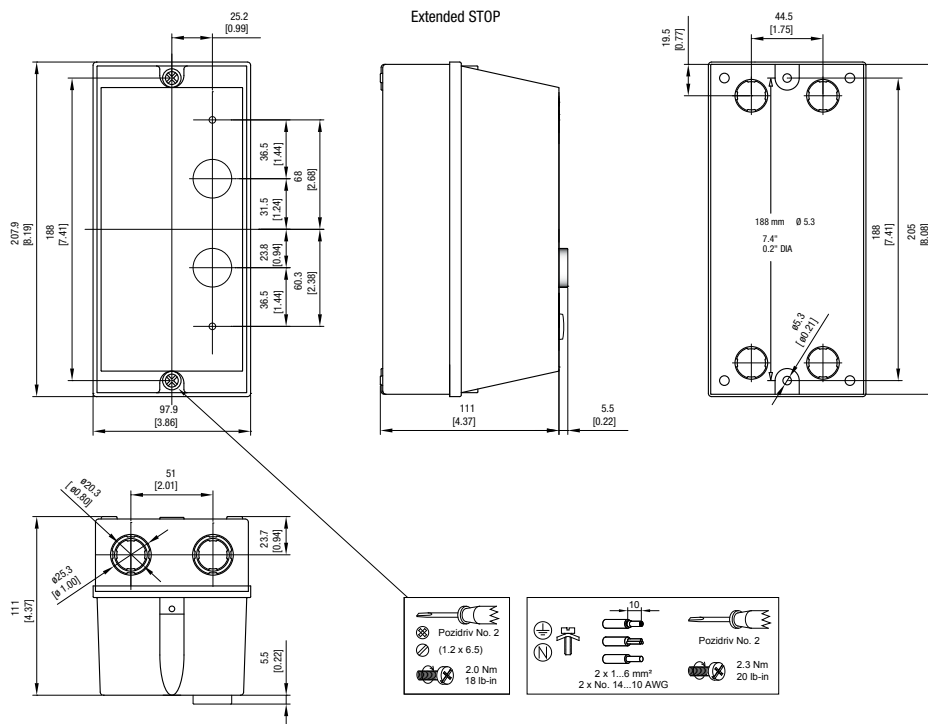
**KWIKstarter Enclosure KS7-C2S4 (Dimension Code Q2)**

Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

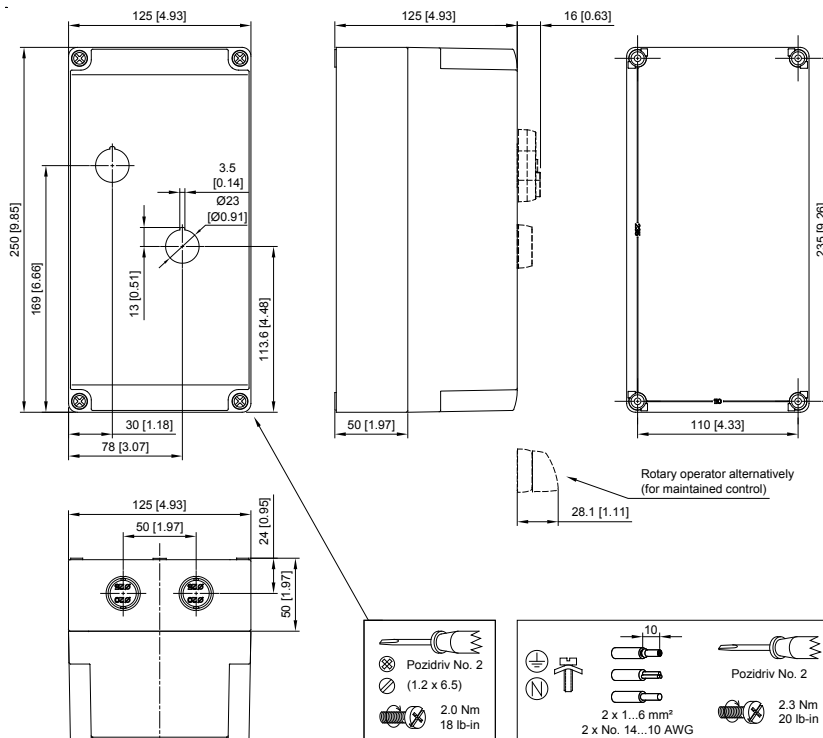

KWIKstarter Enclosure KS7-C0S4R (Dimension Code Q3)


Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

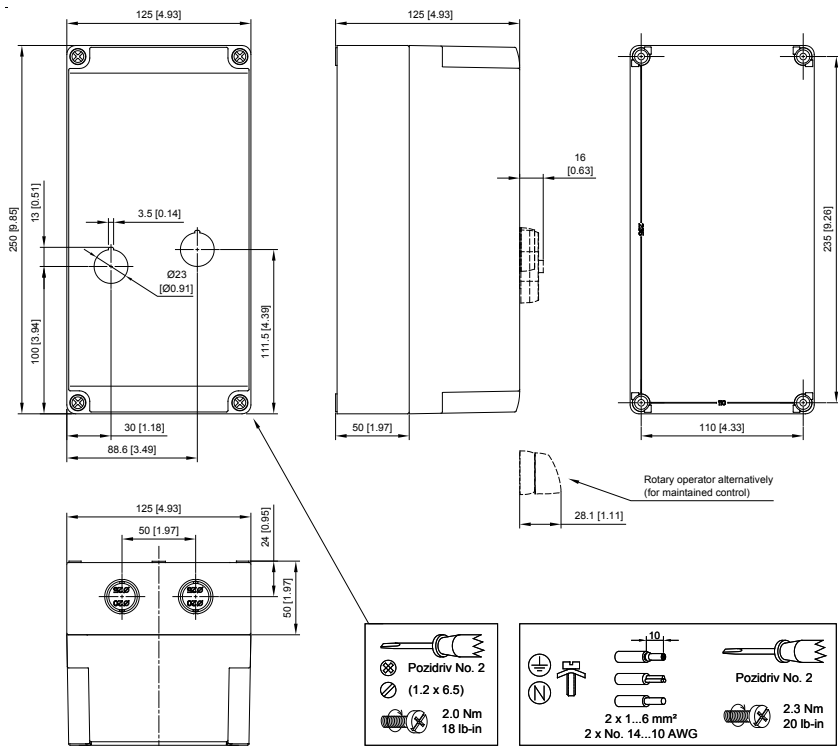

NEMA Sized Open and Enclosed Contactors and Non-Combination Motor Starters

C7
NEMA Starters

Built to your specifications and ready to install

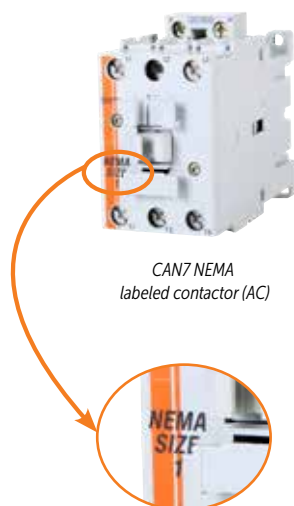

Sprecher + Schuh magnetic motor starters are intended to eliminate the purchase and assembly of a separate contactor, overload relay and associated wiring. When purchased with an enclosure, the starters are mounted and ready to install on receipt.

Starting with the best

At the heart of all Sprecher + Schuh NEMA sized magnetic motor starters is the CATN7 line of motor starters. Each starter proudly displays the NEMA size (00, 0, 1, 2, or 3) and HP at applied voltage. This line of starters is designed to meet rigid consultant specifications for NEMA starters.

Top line protection...

NEMA labeled magnetic starters are equipped with Sprecher + Schuh's premium CEP7 solid state overload relay standard. Unlike traditional overload relays that indirectly sense motor current through heater elements, CEP7 solid state overload relays measure motor current directly through integrated current transformers and on board electronics. The electronics provide numerous advantages over electromechanical relays. Alternatively, the CT7N Thermal Overload Relay may also be selected.

The right enclosure... whatever the application

Sprecher + Schuh's line of NEMA style starters can be purchased pre-installed in a variety of standard enclosures.

Cataloged enclosures include:

- | | |
|---------|----------------------|
| Type 1 | General Purpose |
| Type 12 | Industrial Dusttight |
| Type 3R | Raintight (outdoor) |
| Type 4 | Watertight |
| Type 4X | Watertight, |



Corrosion Resistant

Even though these are the most popular enclosure types for most industrial applications, we can house any starter in a custom enclosure of your choosing.

Quality enclosures ensure the highest confidence

Sprecher + Schuh only sources enclosures from name brand manufacturers, ensuring the highest quality. We primarily use enclosures that meet UL Standards, i.e., Type 1, Type 3R, etc., however, we can also source other enclosures at your request. Enclosures are sized first to accommodate the depth of the contactor and offer sufficient electrical clearances to satisfy UL.

Add a variety of modifications

If you need a larger enclosure than what is specified in our catalog, your sales representative and our Engineering department will work with you to customize any of our enclosed products to suit your exact specifications. Any combination of enclosure types, sizes, pilot devices, meters and other modifications can be combined to provide exactly the panel you need.



Type 1



Type 3R



Type 4



Type 4X

Three Phase, Non-Reversing CAN7

NEMA Size	Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ③		Type 1 General Purpose Catalog Number	D I M ①	Type 12 [Type 3R ②] Industrial Dusttight Catalog Number	D I M ①
	200V	230V	460V	575V	NO	NC				
00	1.5	1.5	2	2	1	0	CAN7-12-*G0	A	CAN7-12-*D0	L
0	3	3	5	5	1	0	CAN7-16-*G0	A	CAN7-16-*D0	L
1	7.5	7.5	10	10	1	0	CAN7-37-*G0	A	CAN7-37-*D0	L
2	10	15	25	25	1	0	CAN7-43-*G0	A	CAN7-43-*D0	L
3	25	30	50	50	1	0	CAN7-85-*G0	B	CAN7-85-*D0	M

NEMA Size	Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ③		Type 4 Watertight Catalog Number	D I M ①	Type 4X Watertight Corrosion Resistant Non-metallic Catalog Number	D I M ①
	200V	230V	460V	575V	NO	NC				
00	1.5	1.5	2	2	1	0	CAN7-12-*W0	N	CAN7-12-*C0	S1
0	3	3	5	5	1	0	CAN7-16-*W0	N	CAN7-16-*C0	S1
1	7.5	7.5	10	10	1	0	CAN7-37-*W0	N	CAN7-37-*C0	S1
2	10	15	25	25	1	0	CAN7-43-*W0	N	CAN7-43-*C0	S1
3	25	30	50	50	1	0	CAN7-85-*W0	O	CAN7-85-*C0	U1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C7:13 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Factory Modifications available	Refer to page C7:14 Refer to pages C7:14-C8:10

- ① Dimensional information starts on page C7:15.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAN7-23-*D0 becomes CAN7-23-*R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.

Three Phase, Reversing CAUN7

NEMA Size	Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ③		Type 1 General Purpose	DIM ①	Type 12 [Type 3R ②] Industrial Dusttight	DIM ①
	200V	230V	460V	575V	NO	NC ④	Catalog Number		Catalog Number	
00	1.5	1.5	2	2	1	1	CAUN7-12-* -G0	A	CAUN7-12-* -D0	M
0	3	3	5	5	1	1	CAUN7-16-* -G0	A	CAUN7-16-* -D0	M
1	7.5	7.5	10	10	1	1	CAUN7-37-* -G0	A	CAUN7-37-* -D0	M
2	10	15	25	25	1	1	CAUN7-43-* -G0	B	CAUN7-43-* -D0	M
3	25	30	50	50	1	1	CAUN7-85-* -G0	C	CAUN7-85-* -D0	O

NEMA Size	Maximum Horsepower Three Phase				Auxiliary Contacts per Contactor ③		Type 4 Watertight	DIM ①	Type 4X Watertight Corrosion Resistant Non-metallic	DIM ①
	200V	230V	460V	575V	NO	NC ④	Catalog Number		Catalog Number	
00	1.5	1.5	2	2	1	1	CAUN7-12-* -W0	N	CAUN7-12-* -C0	U1
0	3	3	5	5	1	1	CAUN7-16-* -W0	N	CAUN7-16-* -C0	U1
1	7.5	7.5	10	10	1	1	CAUN7-37-* -W0	N	CAUN7-37-* -C0	U1
2	10	15	25	25	1	1	CAUN7-43-* -W0	N	CAUN7-43-* -C0	U1
3	25	30	50	50	1	1	CAUN7-85-* -W0	O	CAUN7-85-* -C0	V1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C7:13 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code Factory Modifications available	Refer to page C7:14 Refer to pages C7:14-C8:10

- ① Dimensional information starts on page C7:15.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CAUN7-23-* -D0 becomes CAUN7-23-* -R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ④ One N.C. auxiliary contact is used for electrical interlocking. On CAUN7 reversing contactors, the N.C. contact comes from the Mechanical/Electrical Interlock unit (Cat # CM7-02).

Three Phase, Non-Reversing CATN7

NEMA Size	Maximum Horsepower Three Phase				Aux. Contacts per Contactor ③		Open Type Catalog Number	Type 1 General Purpose Catalog Number	D I M	Type 12 [Type 3R ②] Industrial Dusttight Catalog Number	D I M
	200V	230V	460V	575V	NO	NC					
00	1.5	1.5	2	2	1	0	CATN7-12-*-*◆	CATN7-12-*-*◆-G0	A	CATN7-12-*-*◆-D0	L
0	3	3	5	5	1	0	CATN7-16-*-*◆	CATN7-16-*-*◆-G0	A	CATN7-16-*-*◆-D0	L
1	7.5	7.5	10	10	1	0	CATN7-37-*-*◆	CATN7-37-*-*◆-G0	A	CATN7-37-*-*◆-D0	L
2	10	15	25	25	1	0	CATN7-43-*-*◆	CATN7-43-*-*◆-G0	A	CATN7-43-*-*◆-D0	L
3	25	30	50	50	1	0	CATN7-85-*-*◆	CATN7-85-*-*◆-G0	B	CATN7-85-*-*◆-D0	M

NEMA Size	Maximum Horsepower Three Phase				Aux. Contacts per Contactor ③		Type 4 Watertight Catalog Number	D I M	Type 4X Watertight Corrosion Resistant Non-metallic Catalog Number	D I M
	200V	230V	460V	575V	NO	NC				
00	1.5	1.5	2	2	1	0	CATN7-12-*-*◆-W0	N	CATN7-12-*-*◆-C0	S1
0	3	3	5	5	1	0	CATN7-16-*-*◆-W0	N	CATN7-16-*-*◆-C0	S1
1	7.5	7.5	10	10	1	0	CATN7-37-*-*◆-W0	N	CATN7-37-*-*◆-C0	U1
2	10	15	25	25	1	0	CATN7-43-*-*◆-W0	N	CATN7-43-*-*◆-C0	U1
3	25	30	50	50	1	0	CATN7-85-*-*◆-W0	O	CATN7-85-*-*◆-C0	U1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C7:13 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C7:14 See page C8:5 See pages C7:14-C8:10
Replace (◆) with O/L Relay	
Factory Modifications available	

- ① Dimensional information starts on page C7:15.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CATN7-37-*-*◆-D0 becomes CATN7-37-*-*◆-R0. Price remains the same.
- ③ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.

Three Phase, Non-Reversing CATN7 @208V AC ①

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	208V		Catalog Number		Catalog Number	
00	1.5	0.2...1.0	CATN7-12-XA-1EBB-G17-L11	A	CATN7-12-XA-1EBB-R17-L11	L
	3	1.0...5.0	CATN7-12-XA-1ECB-G17-L11	A	CATN7-12-XA-1ECB-R17-L11	L
	7.5	1.0...5.0	CATN7-12-XA-1ECB-G17-L11	A	CATN7-12-XA-1ECB-R17-L11	L
	10	1.0...5.0	CATN7-12-XA-1ECB-G17-L11	A	CATN7-12-XA-1ECB-R17-L11	L
	25	3.2...16	CATN7-12-XA-1EDB-G17-L11	A	CATN7-12-XA-1EDB-R17-L11	L
0	2	3.2...16	CATN7-16-XA-1EDB-G17-L11	A	CATN7-16-XA-1EDB-R17-L11	L
	3	3.2...16	CATN7-16-XA-1EDB-G17-L11	A	CATN7-16-XA-1EDB-R17-L11	L
1	5	5.4...27	CATN7-37-XA-1EED-G17-L11	A	CATN7-37-XA-1EED-R17-L11	L
	7.5	5.4...27	CATN7-37-XA-1EED-G17-L11	A	CATN7-37-XA-1EED-R17-L11	L
2	10	11...55	CATN7-43-XA-1EFD-G17-L11	A	CATN7-43-XA-1EFD-R17-L11	L
3	15	20...100	CATN7-85-XA-1EGE-G17-L11	B	CATN7-85-XA-1EGE-R17-L11	M
	20	20...100	CATN7-85-XA-1EGE-G17-L11	B	CATN7-85-XA-1EGE-R17-L11	M
	25	20...100	CATN7-85-XA-1EGE-G17-L11	B	CATN7-85-XA-1EGE-R17-L11	M

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CATN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- Reset pushbutton

Three Phase, Non-Reversing CATN7 @230V AC ①

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	230V		Catalog Number		Catalog Number	
00	0.25	0.2...1.0	CATN7-12-XB-1EBB-G17-L11	A	CATN7-12-XB-1EBB-R17-L11	L
	0.5	1.0...5.0	CATN7-12-XB-1ECB-G17-L11	A	CATN7-12-XB-1ECB-R17-L11	L
	0.75	1.0...5.0	CATN7-12-XB-1ECB-G17-L11	A	CATN7-12-XB-1ECB-R17-L11	L
	1	1.0...5.0	CATN7-12-XB-1ECB-G17-L11	A	CATN7-12-XB-1ECB-R17-L11	L
	1.5	1.0...5.0	CATN7-12-XB-1ECB-G17-L11	A	CATN7-12-XB-1ECB-R17-L11	L
0	2	3.2...16	CATN7-16-XB-1EDB-G17-L11	A	CATN7-16-XB-1EDB-R17-L11	L
	3	3.2...16	CATN7-16-XB-1EDB-G17-L11	A	CATN7-16-XB-1EDB-R17-L11	L
1	5	5.4...27	CATN7-37-XB-1EED-G17-L11	A	CATN7-37-XB-1EED-R17-L11	L
	7.5	5.4...27	CATN7-37-XB-1EED-G17-L11	A	CATN7-37-XB-1EED-R17-L11	L
2	10	11...55	CATN7-43-XB-1EFD-G17-L11	A	CATN7-43-XB-1EFD-R17-L11	L
	15	11...55	CATN7-43-XB-1EFD-G17-L11	A	CATN7-43-XB-1EFD-R17-L11	L
3	15	20...100	CATN7-85-XB-1EGE-G17-L11	B	CATN7-85-XB-1EGE-R17-L11	M
	20	20...100	CATN7-85-XB-1EGE-G17-L11	B	CATN7-85-XB-1EGE-R17-L11	M
	25	20...100	CATN7-85-XB-1EGE-G17-L11	B	CATN7-85-XB-1EGE-R17-L11	M

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CATN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- Reset pushbutton

- ① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.
- ② Contactors are equipped with 2 NO and 1 NC auxiliary contact. See page C8:7 to order additional or different auxiliary contacts.
- ③ Dimensional information starts on page C122.

Three Phase, Non-Reversing CATN7 @460V AC ①

NEMA Size	Max HP 1-Phase ①	Adjustment Range	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	460V		Catalog Number		Catalog Number	
00	0.25	0.2...1.0	CATN7-12-XC-1EBB-G17-L11	A	CATN7-12-XC-1EBB-R17-L11	L
	0.5	1.0...5.0	CATN7-12-XC-1ECB-G17-L11	A	CATN7-12-XC-1ECB-R17-L11	L
	0.75	1.0...5.0	CATN7-12-XC-1ECB-G17-L11	A	CATN7-12-XC-1ECB-R17-L11	L
	1	1.0...5.0	CATN7-12-XC-1ECB-G17-L11	A	CATN7-12-XC-1ECB-R17-L11	L
	1.5	1.0...5.0	CATN7-12-XC-1ECB-G17-L11	A	CATN7-12-XC-1ECB-R17-L11	L
	2	1.0...5.0	CATN7-12-XC-1ECB-G17-L11	A	CATN7-12-XC-1ECB-R17-L11	L
0	3	3.2...16	CATN7-16-XC-1EDB-G17-L11	A	CATN7-16-XC-1EDB-R17-L11	L
	5	3.2...16	CATN7-16-XC-1EDB-G17-L11	A	CATN7-16-XC-1EDB-R17-L11	L
1	7.5	5.4...27	CATN7-37-XC-1EED-G17-L11	A	CATN7-37-XC-1EED-R17-L11	L
	10	5.4...27	CATN7-37-XC-1EED-G17-L11	A	CATN7-37-XC-1EED-R17-L11	L
2	15	11...55	CATN7-43-XC-1EFD-G17-L11	A	CATN7-43-XC-1EFD-R17-L11	L
	20	11...55	CATN7-43-XC-1EFD-G17-L11	A	CATN7-43-XC-1EFD-R17-L11	L
	25	11...55	CATN7-43-XC-1EFD-G17-L11	A	CATN7-43-XC-1EFD-R17-L11	L
3	30	20...100	CATN7-85-XC-1EGE-G17-L11	B	CATN7-85-XC-1EGE-R17-L11	M
	40	20...100	CATN7-85-XC-1EGE-G17-L11	B	CATN7-85-XC-1EGE-R17-L11	M
	50	20...100	CATN7-85-XC-1EGE-G17-L11	B	CATN7-85-XC-1EGE-R17-L11	M

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- Reset pushbutton

Three Phase, Non-Reversing CATN7 @575V AC ①

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	575V		Catalog Number		Catalog Number	
00	0.25	0.2...1.0	CATN7-12-XD-1EBB-G17-L11	A	CATN7-12-XD-1EBB-R17-L11	L
	0.5	1.0...5.0	CATN7-12-XD-1ECB-G17-L11	A	CATN7-12-XD-1ECB-R17-L11	L
	0.75	1.0...5.0	CATN7-12-XD-1ECB-G17-L11	A	CATN7-12-XD-1ECB-R17-L11	L
	1	1.0...5.0	CATN7-12-XD-1ECB-G17-L11	A	CATN7-12-XD-1ECB-R17-L11	L
	2	1.0...5.0	CATN7-12-XD-1ECB-G17-L11	A	CATN7-12-XD-1ECB-R17-L11	L
	3	3.2...16	CATN7-16-XD-1EDB-G17-L11	A	CATN7-16-XD-1EDB-R17-L11	L
0	5	3.2...16	CATN7-16-XD-1EDB-G17-L11	A	CATN7-16-XD-1EDB-R17-L11	L
	7.5	5.4...27	CATN7-37-XD-1EED-G17-L11	A	CATN7-37-XD-1EED-R17-L11	L
1	10	5.4...27	CATN7-37-XD-1EED-G17-L11	A	CATN7-37-XD-1EED-R17-L11	L
	15	11...55	CATN7-43-XD-1EFD-G17-L11	A	CATN7-43-XD-1EFD-R17-L11	L
2	20	11...55	CATN7-43-XD-1EFD-G17-L11	A	CATN7-43-XD-1EFD-R17-L11	L
	25	11...55	CATN7-43-XD-1EFD-G17-L11	A	CATN7-43-XD-1EFD-R17-L11	L
	30	20...100	CATN7-85-XD-1EGE-G17-L11	B	CATN7-85-XD-1EGE-R17-L11	M
3	40	20...100	CATN7-85-XD-1EGE-G17-L11	B	CATN7-85-XD-1EGE-R17-L11	M
	50	20...100	CATN7-85-XD-1EGE-G17-L11	B	CATN7-85-XD-1EGE-R17-L11	M

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- Reset pushbutton

- ① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.
- ② Contactors are equipped with 2 NO and 1 NC auxiliary contact. See page C8:7 to order additional or different auxiliary contacts.
- ③ Dimensional information starts on page C7:15.

Single Phase, Non-Reversing CBTN7

NEMA Size	Maximum HP Single ø		Aux. Contacts per Contactor ❶		Open Type	Type 1 General Purpose	D I M	Type 12 [Type 3R ❷] Industrial Dusttight	D I M
	115V	230V	NO	NC	Catalog Number	Catalog Number	❸	Catalog Number	❸
00	.33	1	1	0	CBTN7-12-*-*◆	CBTN7-12-*-*◆-G0	A	CBTN7-12-*-*◆-D0	L
0	1	2	1	0	CBTN7-16-*-*◆	CBTN7-16-*-*◆-G0	A	CBTN7-16-*-*◆-D0	L
1	2	3	1	0	CBTN7-37-*-*◆	CBTN7-37-*-*◆-G0	A	CBTN7-37-*-*◆-D0	L
2	3	7.5	1	0	CBTN7-43-*-*◆	CBTN7-43-*-*◆-G0	A	CBTN7-43-*-*◆-D0	L
3	7.5	15	1	0	CBTN7-85-*-*◆	CBTN7-85-*-*◆-G0	B	CBTN7-85-*-*◆-D0	M

Single Phase, Non-Reversing CBTN7

NEMA Size	Maximum HP Single ø		Aux. Contacts per Contactor ❶		Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
	115V	230V	NO	NC	Catalog Number	❸	Catalog Number	❸
00	.33	1	1	0	CBTN7-12-*-*◆-W0	N	CBTN7-12-*-*◆-C0	S1
0	1	2	1	0	CBTN7-16-*-*◆-W0	N	CBTN7-16-*-*◆-C0	S1
1	2	3	1	0	CBTN7-37-*-*◆-W0	N	CBTN7-37-*-*◆-C0	U1
2	3	7.5	1	0	CBTN7-43-*-*◆-W0	N	CBTN7-43-*-*◆-C0	U1
3	7.5	15	1	0	CBTN7-85-*-*◆-W0	O	CBTN7-85-*-*◆-C0	U1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C7:13 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C7:14
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C7:14-C8:10

- ❶ Contactors are equipped with number and type of auxiliaries indicated. See page C8:7 to order additional or different auxiliary contacts.
- ❷ For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CBTN7-37-*-*◆-D0 becomes CBTN7-37-*-*◆-R0. Price remains the same.
- ❸ Dimensional information starts on page C7:15.

Single Phase, Non-Reversing CBTN7 @115V AC ①

NEMA Size	Max HP 1-Phase ①	Adjustment Range	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	115V		Catalog Number		Catalog Number	
00	0.33	3.2...16	CBTN7-12-120-1EDB-G17-L11	A	CBTN7-12-120-1EDB-R17-L11	L
0	0.5	5.4...27	CBTN7-16-120-1EEB-G17-L11	A	CBTN7-16-120-1EEB-R17-L11	L
	0.75	5.4...27	CBTN7-16-120-1EEB-G17-L11	A	CBTN7-16-120-1EEB-R17-L11	L
	1	5.4...27	CBTN7-16-120-1EEB-G17-L11	A	CBTN7-16-120-1EEB-R17-L11	L
1	1.5	11...55	CBTN7-37-120-1EFD-G17-L11	A	CBTN7-37-120-1EFD-R17-L11	L
	2	11...55	CBTN7-37-120-1EFD-G17-L11	A	CBTN7-37-120-1EFD-R17-L11	L
2	3	11...55	CBTN7-43-120-1EFD-G17-L11	A	CBTN7-43-120-1EFD-R17-L11	L
3	5	20...100	CBTN7-85-120-1EGE-G17-L11	B	CBTN7-85-120-1EGE-R17-L11	M
	7.5	20...100	CBTN7-85-120-1EGE-G17-L11	B	CBTN7-85-120-1EGE-R17-L11	M

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- Reset pushbutton

Single Phase, Non-Reversing CBTN7 @230V AC ①

NEMA Size	Max HP 1-Phase ①	Adjustment Range	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	230V		Catalog Number		Catalog Number	
00	0.25	1.0...5.0	CBTN7-12-220W-1ECB-G17-L11	A	CBTN7-12-220W-1ECB-R17-L11	L
	0.5	1.0...5.0	CBTN7-12-220W-1ECB-G17-L11	A	CBTN7-12-220W-1EDB-R17-L11	L
	0.75	3.2...16	CBTN7-12-220W-1EDB-G17-L11	A	CBTN7-12-220W-1EDB-R17-L11	L
	1	3.2...16	CBTN7-12-220W-1EDB-G17-L11	A	CBTN7-12-220W-1EDB-R17-L11	L
0	1.5	5.4...27	CBTN7-16-220W-1EEB-G17-L11	A	CBTN7-16-220W-1EEB-R17-L11	L
	2	5.4...27	CBTN7-16-220W-1EEB-G17-L11	A	CBTN7-16-220W-1EEB-R17-L11	L
1	3	11...55	CBTN7-37-220W-1EFD-G17-L11	A	CBTN7-37-220W-1EFD-R17-L11	L
2	5	11...55	CBTN7-43-220W-1EFD-G17-L11	A	CBTN7-43-220W-1EFD-R17-L11	L
	7.5	11...55	CBTN7-43-220W-1EFD-G17-L11	A	CBTN7-43-220W-1EFD-R17-L11	L
3	10	20...100	CBTN7-85-220W-1EGE-G17-L11	B	CBTN7-85-220W-1EGE-R17-L11	M
	15	20...100	CBTN7-85-220W-1EGE-G17-L11	B	CBTN7-85-220W-1EGE-R17-L11	M

- ① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.
- ② Contactors are equipped with 2 NO and 1 NC Auxiliary contacts. See page C8:7 to order additional or different auxiliary contacts.
- ③ Dimensional information starts on page C7:15.

NEMA Sized Combination Starters - Through the Door Operated

C7
NEMA Starters

Smart and cost effective... for any application



CAN7 NEMA labeled contactor (AC)



Sprecher + Schuh's through-the-door operated combination starters represent an economical alternative to the classic flange-operated combo solution. It is designed to meet rigid UL/NEC withstand specifications. Sprecher + Schuh has been building custom control panels with this design for years. Experience the durability of this product!

Starting with the best

At the heart of all Sprecher + Schuh NEMA sized combination starters is the CATN7 line of motor starters. Each starter proudly displays the NEMA size (00, 0, 1, 2, or 3) and HP at applied voltage. This line of starters is designed to meet rigid consultant specifications for NEMA starters.

Top line protection...

NEMA labeled combination starters are equipped with Sprecher + Schuh's premium CEP7 solid state overload relay standard. Unlike traditional overload relays that indirectly sense motor current through heater elements, CEP7 solid state overload relays measure motor current directly through integrated current transformers and on board electronics. The electronics provide numerous advantages over electromechanical relays. Alternatively, the CT7N Thermal Overload Relay may also be selected.

Choice of Disconnect

- Choices for disconnect include:
- Thermal Magnetic Molded Case Circuit Breaker (MCCB)
- L11 Fusible or Non-Fusible Disconnect switch



Thermal Magnetic Molded Case Circuit Breaker (MCCB)

The through-the-door operated combo MCCB is available to meet UL short circuit withstand specifications. An MCCB prevents single phasing by simultaneously opening all three phases when a fault occurs in any one phase. An MCCB can often be reset after the fault has been cleared.

Disconnect Switches

The through-the-door operated combo is available with the L11 switch. A mechanical door interlock system prevents the door from being opened when the disconnect is closed, and conversely, prevents the disconnect from being closed when the door is open. Both functions can be defeated for test and maintenance purposes. Other safety features include padlock provisions and a high visibility operating handle.

The L11 Switch disconnects have a quick make/quick break, non-teasing action. The L11 fusible switch is suitable for interrupting up to 100,000 amperes when class "J" fuses are used. All L11 disconnect switches conform to UL 98 standards.

Choice of Enclosures

- Available enclosures include;
- Type 1 General Purpose
- Type 3R Raintight
- Type 12 Dusttight
- Type 4 Watertight
- Type 4X Corrosion Resistant

Series CATN7 with Thermal-Magnetic Circuit Breaker

NEMA Size	Maximum Horsepower Three Phase				MCCB Amps	Type 1 General Purpose	DIM	Type 12 [Type 3R Ⓢ] Industrial Dusttight	DIM	Type 4 Watertight	DIM	Type 4X Watertight Corrosion Resistant Non-metallic	DIM
	200V	230V	460V	575V		Catalog No.	Ⓢ	Catalog No.	Ⓢ	Catalog No.	Ⓢ	Catalog No.	Ⓢ
						CATN		CATN		CATN		CATN	
00	1.5	1.5	2	2 Ⓢ	15	7-12-✱-◆-TB15G0	C2	7-12-✱-◆-TB15D0	C3	7-12-✱-◆-TB15W0	C2	7-12-✱-◆-TB15C0	V2
0	2	2	5	5 Ⓢ	15	7-16-✱-◆-TB15G0	C2	7-16-✱-◆-TB15D0	C3	7-16-✱-◆-TB15W0	C2	7-16-✱-◆-TB15C0	V2
	3	3	~	~	20	7-16-✱-◆-TB20G0	C2	7-16-✱-◆-TB20D0	C3	7-16-✱-◆-TB20W0	C2	7-16-✱-◆-TB20C0	V2
1	~	~	7.5	10 Ⓢ	20	7-37-✱-◆-TB20G0	C2	7-37-✱-◆-TB20D0	C3	7-37-✱-◆-TB20W0	C2	7-37-✱-◆-TB20C0	V2
	~	5	10	~	30	7-37-✱-◆-TB30G0	C2	7-37-✱-◆-TB30D0	C3	7-37-✱-◆-TB30W0	C2	7-37-✱-◆-TB30C0	V2
	5	~	~	~	35	7-37-✱-◆-TB35G0	C2	7-37-✱-◆-TB35D0	C3	7-37-✱-◆-TB35W0	C2	7-37-✱-◆-TB35C0	V2
	~	7.5	~	~	40	7-37-✱-◆-TB40G0	C2	7-37-✱-◆-TB40D0	C3	7-37-✱-◆-TB40W0	C2	7-37-✱-◆-TB40C0	V2
	7.5	~	~	~	50	7-37-✱-◆-TB50G0	C2	7-37-✱-◆-TB50D0	C3	7-37-✱-◆-TB50W0	C2	7-37-✱-◆-TB50C0	V2
2	~	~	~	15 Ⓢ	35	7-43-✱-◆-TB35G0	C2	7-43-✱-◆-TB35D0	C3	7-43-✱-◆-TB35W0	C2	7-43-✱-◆-TB35C0	V2
	~	~	15	20 Ⓢ	40	7-43-✱-◆-TB40G0	C2	7-43-✱-◆-TB40D0	C3	7-43-✱-◆-TB40W0	C2	7-43-✱-◆-TB40C0	V2
	~	10	20	25 Ⓢ	50	7-43-✱-◆-TB50G0	C2	7-43-✱-◆-TB50D0	C3	7-43-✱-◆-TB50W0	C2	7-43-✱-◆-TB50C0	V2
	10	~	25	~	60	7-43-✱-◆-TB60G0	C2	7-43-✱-◆-TB60D0	C3	7-43-✱-◆-TB60W0	C2	7-43-✱-◆-TB60C0	V2
	~	15	~	~	80	7-43-✱-◆-TB80G0	C2	7-43-✱-◆-TB80D0	C3	7-43-✱-◆-TB80W0	C2	7-43-✱-◆-TB80C0	V2
3	~	~	~	30 Ⓢ	60	7-85-✱-◆-TB60G0	D3	7-85-✱-◆-TB60D0	Q	7-85-✱-◆-TB60W0	Q	7-85-✱-◆-TB60C0	W2
	~	~	30	40 Ⓢ	80	7-85-✱-◆-TB80G0	D3	7-85-✱-◆-TB80D0	Q	7-85-✱-◆-TB80W0	Q	7-85-✱-◆-TB80C0	W2
	15	20	40	50 Ⓢ	100	7-85-✱-◆-TB100G0	D3	7-85-✱-◆-TB100D0	Q	7-85-✱-◆-TB100W0	Q	7-85-✱-◆-TB100C0	W2
	25	30	50	~	125	7-85-✱-◆-TB125G0	D3	7-85-✱-◆-TB125D0	Q	7-85-✱-◆-TB125W0	Q	7-85-✱-◆-TB125C0	W2

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C7:13 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (✱) with Coil Code	See page C7:14 See page C8:5 See pages C7:14-C8:10
Replace (◆) with O/L Relay	
Factory Modifications available	

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CATN7-37-✱-◆-TB40D0 becomes CATN7-37-✱-◆-TB40R0. Price remains the same.
- ③ Applicable to 600Y/347V only. Refer to next page for 600V Delta solution.

Series CATN7 with Thermal-Magnetic Circuit Breaker - 600V Delta

NEMA Size	Maximum Horsepower Three Phase				MCCB Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R ②] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
	200V	230V	460V	575V		Catalog No.	①	Catalog No.	①	Catalog No.	①	Catalog No.	①
						CATN		CATN		CATN		CATN	
00	1.5	1.5	2	2	15	7-12-*-*♦-TBH15G0	C2	7-12-*-*♦-TBH15D0	C3	7-12-*-*♦-TBH15W0	C2	7-12-*-*♦-TBH15C0	V2
0	2	3	5	5	15	7-16-*-*♦-TBH15G0	C2	7-16-*-*♦-TBH15D0	C3	7-16-*-*♦-TBH15W0	C2	7-16-*-*♦-TBH15C0	V2
1	~	~	7.5	10	20	7-37-*-*♦-TBH20G0	C2	7-37-*-*♦-TBH20D0	C3	7-37-*-*♦-TBH20W0	C2	7-37-*-*♦-TBH20C0	V2
2	~	~	~	15	35	7-43-*-*♦-TBH35G0	C2	7-43-*-*♦-TBH35D0	C3	7-43-*-*♦-TBH35W0	C2	7-43-*-*♦-TBH35C0	V2
	~	~	15	20	40	7-43-*-*♦-TBH40G0	C2	7-43-*-*♦-TBH40D0	C3	7-43-*-*♦-TBH40W0	C2	7-43-*-*♦-TBH40C0	V2
	~	~	20	25	50	7-43-*-*♦-TBH50G0	C2	7-43-*-*♦-TBH50D0	C3	7-43-*-*♦-TBH50W0	C2	7-43-*-*♦-TBH50C0	V2
3	~	~	~	30	60	7-85-*-*♦-TBH60G0	D3	7-85-*-*♦-TBH60D0	Q	7-85-*-*♦-TBH60W0	Q	7-85-*-*♦-TBH60C0	W2
	~	~	30	40	80	7-85-*-*♦-TBH80G0	D3	7-85-*-*♦-TBH80D0	Q	7-85-*-*♦-TBH80W0	Q	7-85-*-*♦-TBH80C0	W2
	15	20	40	50	100	7-85-*-*♦-TBH100G0	D3	7-85-*-*♦-TBH100D0	Q	7-85-*-*♦-TBH100W0	Q	7-85-*-*♦-TBH100C0	W2

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C7:13 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C7:14
Replace (♦) with O/L Relay	See page C8:5
Factory Modifications available	See pages C7:14-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CATN7-37-*-*♦-TBH40D0 becomes CATN7-37-*-*♦-TBH40R0. Price remains the same.

Series CATN7 208V AC with Thermal-Magnetic Circuit Breaker ①

NEMA Size	Max HP 3-Phase ①	Adjustment Range	MCCB Amps	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	208V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	15	CATN7-12-XA-1EBB-TB15G17-L11	C2	CATN7-12-XA-1EBB-TB15R17-L11	O
	0.5	1.0...5.0	15	CATN7-12-XA-1ECB-TB15G17-L11	C2	CATN7-12-XA-1ECB-TB15R17-L11	O
	0.75	1.0...5.0	15	CATN7-12-XA-1ECB-TB15G17-L11	C2	CATN7-12-XA-1ECB-TB15R17-L11	O
	1	1.0...5.0	15	CATN7-12-XA-1ECB-TB15G17-L11	C2	CATN7-12-XA-1ECB-TB15R17-L11	O
	1.5	3.2...16	15	CATN7-12-XA-1EDB-TB15G17-L11	C2	CATN7-12-XA-1EDB-TB15R17-L11	O
0	2	3.2...16	15	CATN7-16-XA-1EDB-TB15G17-L11	C2	CATN7-16-XA-1EDB-TB15R17-L11	O
	3	3.2...16	20	CATN7-16-XA-1EDB-TB20G17-L11	C2	CATN7-16-XA-1EDB-TB20R17-L11	O
1	5	5.4...27	35	CATN7-37-XA-1EED-TB35G17-L11	C2	CATN7-37-XA-1EED-TB35R17-L11	O
	7.5	5.4...27	50	CATN7-37-XA-1EED-TB50G17-L11	C2	CATN7-37-XA-1EED-TB50R17-L11	O
2	10	11...55	60	CATN7-43-XA-1EFD-TB60G17-L11	C2	CATN7-43-XA-1EFD-TB60R17-L11	O
3	15	20...100	100	CATN7-85-XA-1EGE-TB100G17-L11	D3	CATN7-85-XA-1EGE-TB100R17-L11	O
	20	20...100	125	CATN7-85-XA-1EGE-TB125G17-L11	D3	CATN7-85-XA-1EGE-TB125R17-L11	O
	25	20...100	125	CATN7-85-XA-1EGE-TB125G17-L11	D3	CATN7-85-XA-1EGE-TB125R17-L11	O

Series CATN7 230V AC with Thermal-Magnetic Circuit Breaker ①

NEMA Size	Max HP 3-Phase ①	Adjustment Range	MCCB Amps	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	230V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	15	CATN7-12-XB-1EBB-TB15G17-L11	C2	CATN7-12-XB-1EBB-TB15R17-L11	O
	0.5	1.0...5.0	15	CATN7-12-XB-1ECB-TB15G17-L11	C2	CATN7-12-XB-1ECB-TB15R17-L11	O
	0.75	1.0...5.0	15	CATN7-12-XB-1ECB-TB15G17-L11	C2	CATN7-12-XB-1ECB-TB15R17-L11	O
	1	1.0...5.0	15	CATN7-12-XB-1ECB-TB15G17-L11	C2	CATN7-12-XB-1ECB-TB15R17-L11	O
	1.5	1.0...5.0	15	CATN7-12-XB-1ECB-TB15G17-L11	C2	CATN7-12-XB-1ECB-TB15R17-L11	O
0	2	3.2...16	15	CATN7-16-XB-1EDB-TB15G17-L11	C2	CATN7-16-XB-1EDB-TB15R17-L11	O
	3	3.2...16	15	CATN7-16-XB-1EDB-TB15G17-L11	C2	CATN7-16-XB-1EDB-TB15R17-L11	O
1	5	5.4...27	30	CATN7-37-XB-1EED-TB30G17-L11	C2	CATN7-37-XB-1EED-TB30R17-L11	O
	7.5	5.4...27	40	CATN7-37-XB-1EED-TB40G17-L11	C2	CATN7-37-XB-1EED-TB40R17-L11	O
2	10	11...55	60	CATN7-43-XB-1EFD-TB60G17-L11	C2	CATN7-43-XB-1EFD-TB60R17-L11	O
	15	11...55	80	CATN7-43-XB-1EFD-TB80G17-L11	C2	CATN7-43-XB-1EFD-TB80R17-L11	O
3	20	20...100	100	CATN7-85-XB-1EGE-TB100G17-L11	D3	CATN7-85-XB-1EGE-TB100R17-L11	O
	25	20...100	125	CATN7-85-XB-1EGE-TB125G17-L11	D3	CATN7-85-XB-1EGE-TB125R17-L11	O
	30	20...100	150	CATN7-85-XB-1EGE-TB150G17-L11	D3	CATN7-85-XB-1EGE-TB150R17-L11	O

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CATN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- Reset pushbutton
- UL489 600V class thermal-magnetic molded case circuit breaker

- ① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.
- ② Contactors are equipped with 2 NO and 1 NC auxiliary contacts. See page C8:7 to order additional or different auxiliary contacts.
- ③ Dimensional information starts on page C8:23.

Series CATN7 460V AC with Thermal-Magnetic Circuit Breaker ②

NEMA Size	Max HP 3-Phase ①	Adjustment Range	MCCB Amps	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	460V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	15	CATN7-12-XC-1EBB-TB15G17-L11	C2	CATN7-12-XC-1EBB-TB15R17-L11	O
	0.5	1.0...5.0	15	CATN7-12-XC-1ECB-TB15G17-L11	C2	CATN7-12-XC-1ECB-TB15R17-L11	O
	0.75	1.0...5.0	15	CATN7-12-XC-1ECB-TB15G17-L11	C2	CATN7-12-XC-1ECB-TB15R17-L11	O
	1	1.0...5.0	15	CATN7-12-XC-1ECB-TB15G17-L11	C2	CATN7-12-XC-1ECB-TB15R17-L11	O
	1.5	1.0...5.0	15	CATN7-12-XC-1ECB-TB15G17-L11	C2	CATN7-12-XC-1ECB-TB15R17-L11	O
	2	1.0...5.0	15	CATN7-12-XC-1ECB-TB15G17-L11	C2	CATN7-12-XC-1ECB-TB15R17-L11	O
0	3	3.2...16	15	CATN7-16-XC-1EDB-TB15G17-L11	C2	CATN7-16-XC-1EDB-TB15R17-L11	O
	5	3.2...16	15	CATN7-16-XC-1EDB-TB15G17-L11	C2	CATN7-16-XC-1EDB-TB15R17-L11	O
1	7.5	5.4...27	20	CATN7-37-XC-1EED-TB20G17-L11	C2	CATN7-37-XC-1EED-TB20R17-L11	O
	10	5.4...27	30	CATN7-37-XC-1EED-TB30G17-L11	C2	CATN7-37-XC-1EED-TB30R17-L11	O
2	15	11...55	40	CATN7-43-XC-1EFD-TB40G17-L11	C2	CATN7-43-XC-1EFD-TB40R17-L11	O
	20	11...55	50	CATN7-43-XC-1EFD-TB50G17-L11	C2	CATN7-43-XC-1EFD-TB50R17-L11	O
	25	11...55	60	CATN7-43-XC-1EFD-TB60G17-L11	C2	CATN7-43-XC-1EFD-TB60R17-L11	O
3	30	20...100	80	CATN7-85-XC-1EGE-TB80G17-L11	D3	CATN7-85-XC-1EGE-TB80R17-L11	O
	40	20...100	100	CATN7-85-XC-1EGE-TB100G17-L11	D3	CATN7-85-XC-1EGE-TB100R17-L11	O
	50	20...100	125	CATN7-85-XC-1EGE-TB125G17-L11	D3	CATN7-85-XC-1EGE-TB125R17-L11	O

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- Reset pushbutton
- UL489 600V class thermal-magnetic molded case circuit breaker

① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.

② Contactors are equipped with 2 NO and 1 NC auxiliary contacts standard. See page C8:7 to order additional or different auxiliary contacts.

③ Dimensional information starts on page C8:23.

Series CATN7 575V AC with Thermal-Magnetic Circuit Breaker ①

NEMA Size	Max HP 3-Phase ①	Adjustment Range	MCCB Amps	Type 1 Metallic General Purpose (except TBH)	D I M	Type 3R Metallic Outdoor Raintight	D I M
	575V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	15	CATN7-12-XD-1EBB-TBH15G17-L11	C2	CATN7-12-XD-1EBB-TBH15R17-L11	O
	0.5	1.0...5.0	15	CATN7-12-XD-1ECB-TBH15G17-L11	C2	CATN7-12-XD-1ECB-TBH15R17-L11	O
	0.75	1.0...5.0	15	CATN7-12-XD-1ECB-TBH15G17-L11	C2	CATN7-12-XD-1ECB-TBH15R17-L11	O
	1	1.0...5.0	15	CATN7-12-XD-1ECB-TBH15G17-L11	C2	CATN7-12-XD-1ECB-TBH15R17-L11	O
	2	1.0...5.0	15	CATN7-12-XD-1ECB-TBH15G17-L11	C2	CATN7-12-XD-1ECB-TBH15R17-L11	O
0	3	3.2...16	15	CATN7-16-XD-1EDB-TBH15G17-L11	C2	CATN7-16-XD-1EDB-TBH15R17-L11	O
	5	3.2...16	15	CATN7-16-XD-1EDB-TBH15G17-L11	C2	CATN7-16-XD-1EDB-TBH15R17-L11	O
1	7.5 ④	5.4...27	20	CATN7-37-XD-1EED-TB20G17-L11	C2	CATN7-37-XD-1EED-TB20R17-L11	O
	10 ④	9...45	20	CATN7-37-XD-1EFD-TB20G17-L11	C2	CATN7-37-XD-1EED-TB20R17-L11	O
	7.5	5.4...27	20	CATN7-37-XD-1EED-TBH20G17-L11	C2	CATN7-37-XD-1EED-TBH20R17-L11	O
	10	11...55	20	CATN7-37-XD-1EFD-TBH20G17-L11	C2	CATN7-37-XD-1EFD-TBH20R17-L11	O
2	15 ④	11...55	35	CATN7-43-XD-1EFD-TB35G17-L11	C2	CATN7-43-XD-1EFD-TB35R17-L11	O
	20 ④	11...55	40	CATN7-43-XD-1EFD-TB40G17-L11	C2	CATN7-43-XD-1EFD-TB40R17-L11	O
	25 ④	11...55	50	CATN7-43-XD-1EFD-TB50G17-L11	C2	CATN7-43-XD-1EFD-TB50R17-L11	O
	15	11...55	35	CATN7-43-XD-1EFD-TBH35G17-L11	C2	CATN7-43-XD-1EFD-TBH35R17-L11	O
	20	11...55	40	CATN7-43-XD-1EFD-TBH40G17-L11	C2	CATN7-43-XD-1EFD-TBH40R17-L11	O
	25	11...55	50	CATN7-43-XD-1EFD-TBH50G17-L11	C2	CATN7-43-XD-1EFD-TBH50R17-L11	O
3	30 ④	20...100	60	CATN7-85-XD-1EGE-TB60G17-L11	D3	CATN7-85-XD-1EGE-TB60R17-L11	O
	40 ④	20...100	80	CATN7-85-XD-1EGE-TB80G17-L11	D3	CATN7-85-XD-1EGE-TB80R17-L11	O
	50 ④	20...100	100	CATN7-85-XD-1EGE-TB100G17-L11	D3	CATN7-85-XD-1EGE-TB100R17-L11	O
	30	20...100	60	CATN7-85-XD-1EGE-TBH60G17-L11	D3	CATN7-85-XD-1EGE-TBH60R17-L11	O
	40	20...100	80	CATN7-85-XD-1EGE-TBH80G17-L11	D3	CATN7-85-XD-1EGE-TBH80R17-L11	O
	50	20...100	100	CATN7-85-XD-1EGE-TBH100G17-L11	D3	CATN7-85-XD-1EGE-TBH100R17-L11	O

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- Reset pushbutton
- UL489 600V class thermal-magnetic molded case circuit breaker

- ① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.
- ② Contactors are equipped with 2 NO and 1 NC auxiliary contacts standard. See page C8:7 to order additional or different auxiliary contacts.
- ③ Dimensional information starts on page C8:23.
- ④ Applicable to 600Y/347V only.

Series CATN7 with Fusible Disconnect (J-Type) ①②

NEMA Size	Maximum Horsepower Three Phase				Fuse Clip Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R ③] Industrial Dusttight	D I M	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
	200V	230V	460V	575V		Catalog No.		Catalog No.		Catalog No.		Catalog No.	
						CATN		CATN		CATN		CATN	
00	1.5	1.5	2	2	30	7-12-*◆-JF61G0	C	7-12-*◆-JF61D0	C2	7-12-*◆-JF61W0	Q	7-12-*◆-JF61C0	V1
0	3	3	5	5	30	7-16-*◆-JF61G0	C	7-16-*◆-JF61D0	C2	7-16-*◆-JF61W0	Q	7-16-*◆-JF61C0	V1
1	5	5	10	10	30	7-37-*◆-JF61G0	C	7-37-*◆-JF61D0	C2	7-37-*◆-JF61W0	Q	7-37-*◆-JF61C0	V1
	7-1/2	7.5	~	~	60	7-37-*◆-JF62G0	C	7-37-*◆-JF62D0	C2	7-37-*◆-JF62W0	Q	7-37-*◆-JF62C0	V1
2	~	~	~	15	30	7-43-*◆-JF61G0	C	7-43-*◆-JF61D0	C2	7-43-*◆-JF61W0	Q	7-43-*◆-JF61C0	V1
	10	10	25	25	60	7-43-*◆-JF62G0	C	7-43-*◆-JF62D0	C2	7-43-*◆-JF62W0	Q	7-43-*◆-JF62C0	V1
	~	15	~	~	100	7-43-*◆-JF63G0	D3	7-43-*◆-JF63D0	Q	7-43-*◆-JF63W0	Q	7-43-*◆-JF63C0	W1
3	~	~	30	40	60	7-85-*◆-JF62G0	D3	7-85-*◆-JF62D0	Q	7-85-*◆-JF62W0	Q	7-85-*◆-JF62C0	W2
	20	25	50	50	100	7-85-*◆-JF63G0	D3	7-85-*◆-JF63D0	Q	7-85-*◆-JF63W0	Q	7-85-*◆-JF63C0	W2
	25	30	~	~	200	7-85-*◆-JF64G0	G	7-85-*◆-JF64D0	T	7-85-*◆-JF64W0	T	7-85-*◆-JF64C0	X1

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C7:13 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See page C7:14
Replace (◆) with O/L Relay	See page C8:5
Factory Modifications available	See pages C7:14-C8:10

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CATN7-16-*◆-JF61D0 becomes CATN7-16-*◆-JF61R0. Price remains the same.
- ③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.
- ④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.

Series CATN7 208V AC with Fusible Disconnect (J-Type) ①②③

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Fuse Clip Amps	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	208V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	30	CATN7-12-XA-1EBB-JF61G17-L11	C	CATN7-12-XA-1EBB-JF61R17-L11	O
	0.5	1.0...5.0	30	CATN7-12-XA-1ECB-JF61G17-L11	C	CATN7-12-XA-1ECB-JF61R17-L11	O
	0.75	1.0...5.0	30	CATN7-12-XA-1ECB-JF61G17-L11	C	CATN7-12-XA-1ECB-JF61R17-L11	O
	1	1.0...5.0	30	CATN7-12-XA-1ECB-JF61G17-L11	C	CATN7-12-XA-1ECB-JF61R17-L11	O
	1.5	3.2...16	30	CATN7-12-XA-1EDB-JF61G17-L11	C	CATN7-12-XA-1EDB-JF61R17-L11	O
0	2	3.2...16	30	CATN7-16-XA-1EDB-JF61G17-L11	C	CATN7-16-XA-1EDB-JF61R17-L11	O
	3	3.2...16	30	CATN7-16-XA-1EDB-JF61G17-L11	C	CATN7-16-XA-1EDB-JF61R17-L11	O
1	5	5.4...27	30	CATN7-37-XA-1EED-JF61G17-L11	C	CATN7-37-XA-1EED-JF61R17-L11	O
	7.5	5.4...27	60	CATN7-37-XA-1EED-JF62G17-L11	C	CATN7-37-XA-1EED-JF62R17-L11	O
2	10	11...55	60	CATN7-43-XA-1EFD-JF62G17-L11	C	CATN7-43-XA-1EFD-JF62R17-L11	O
3	15	20...100	100	CATN7-85-XA-1EGE-JF63G17-L11	D3	CATN7-85-XA-1EGE-JF63R17-L11	O
	20	20...100	100	CATN7-85-XA-1EGE-JF63G17-L11	D3	CATN7-85-XA-1EGE-JF63R17-L11	O
	25	20...100	200	CATN7-85-XA-1EGE-JF64G17-L11	G	CATN7-85-XA-1EGE-JF64R17-L11	T

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CATN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- UL98 fusible L11 disconnect
- Reset pushbutton

Series CATN7 230V AC with Fusible Disconnect (J-Type) ①②③

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Fuse Clip Amps	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	230V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	30	CATN7-12-XB-1EBB-JF61G17-L11	C	CATN7-12-XB-1EBB-JF61R17-L11	O
	0.5	1.0...5.0	30	CATN7-12-XB-1ECB-JF61G17-L11	C	CATN7-12-XB-1ECB-JF61R17-L11	O
	0.75	1.0...5.0	30	CATN7-12-XB-1ECB-JF61G17-L11	C	CATN7-12-XB-1ECB-JF61R17-L11	O
	1	1.0...5.0	30	CATN7-12-XB-1ECB-JF61G17-L11	C	CATN7-12-XB-1ECB-JF61R17-L11	O
	1.5	1.0...5.0	30	CATN7-12-XB-1ECB-JF61G17-L11	C	CATN7-12-XB-1ECB-JF61R17-L11	O
0	2	3.2...16	30	CATN7-16-XB-1EDB-JF61G17-L11	C	CATN7-16-XB-1EDB-JF61R17-L11	O
	3	3.2...16	30	CATN7-16-XB-1EDB-JF61G17-L11	C	CATN7-16-XB-1EDB-JF61R17-L11	O
1	5	5.4...27	30	CATN7-37-XB-1EED-JF61G17-L11	C	CATN7-37-XB-1EED-JF61R17-L11	O
	7.5	5.4...27	60	CATN7-37-XB-1EED-JF62G17-L11	C	CATN7-37-XB-1EED-JF62R17-L11	O
2	10	11...55	60	CATN7-43-XB-1EFD-JF62G17-L11	C	CATN7-43-XB-1EFD-JF62R17-L11	O
	15	11...55	100	CATN7-43-XB-1EFD-JF63G17-L11	C	CATN7-43-XB-1EFD-JF63R17-L11	O
3	20	20...100	100	CATN7-85-XB-1EGE-JF63G17-L11	D3	CATN7-85-XB-1EGE-JF63R17-L11	O
	25	20...100	100	CATN7-85-XB-1EGE-JF63G17-L11	D3	CATN7-85-XB-1EGE-JF63R17-L11	O
	30	20...100	200	CATN7-85-XB-1EGE-JF64G17-L11	G	CATN7-85-XB-1EGE-JF64R17-L11	T

① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.

② Contactors are equipped with 2 NO and 2 NC auxiliary contacts standard. See page C8:7 to order additional or different auxiliary contacts.

③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.

④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.

⑤ Dimensional information starts on page C8:23.

208V Series CATN7 with Fusible Disconnect (J Type) with Power Fuses 000

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Fuse Clip AMPS	Fuse Size	Type 1 (M1) Metallic General Purpose Catalog Number	D I M ⑤	Type 3R (M3) Metallic Outdoor Raintight Catalog Number	D I M ⑤
	208V							
00	0.25	0.2...1.0	30	2	CATN7-12-XA-1EBB-JF2G17-L11	C	CATN7-12-XA-1EBB-JF2R17-L11	O
	0.5	1.0...5.0	30	3.5	CATN7-12-XA-1ECB-JF3.5G17-L11	C	CATN7-12-XA-1ECB-JF3.5R17-L11	O
	0.75	1.0...5.0	30	5	CATN7-12-XA-1ECB-JF5G17-L11	C	CATN7-12-XA-1ECB-JF5R17-L11	O
	1	1.0...5.0	30	7	CATN7-12-XA-1ECB-JF7G17-L11	C	CATN7-12-XA-1ECB-JF7R17-L11	O
	1.5	3.2...16	30	10	CATN7-12-XA-1EDB-JF10G17-L11	C	CATN7-12-XA-1EDB-JF10R17-L11	O
0	2	3.2...16	30	12	CATN7-16-XA-1EDB-JF12G17-L11	C	CATN7-16-XA-1EDB-JF12R17-L11	O
	3	3.2...16	30	15	CATN7-16-XA-1EDB-JF15G17-L11	C	CATN7-16-XA-1EDB-JF15R17-L11	O
1	5	5.4...27	30	25	CATN7-37-XA-1EED-JF25G17-L11	C	CATN7-37-XA-1EED-JF25R17-L11	O
	7.5	5.4...27	60	35	CATN7-37-XA-1EED-JF35G17-L11	C	CATN7-37-XA-1EED-JF35R17-L11	O
2	10	11...55	60	50	CATN7-43-XA-1EFD-JF50G17-L11	C	CATN7-43-XA-1EFD-JF50R17-L11	O
3	15	20...100	100	70	CATN7-85-XA-1EGE-JF70G17-L11	D3	CATN7-85-XA-1EGE-JF70R17-L11	O
	20	20...100	100	90	CATN7-85-XA-1EGE-JF90G17-L11	D3	CATN7-85-XA-1EGE-JF90R17-L11	O
	25	20...100	100	110	CATN7-85-XA-1EGE-JF110G17-L11	G	CATN7-85-XA-1EGE-JF110R17-L11	T



Class J Fuses

Some customers have expressed a desire to buy fusible combination motor starters with Type J power fuses installed in the motor starter. Dealers want and need power fuses installed at Sprecher + Schuh; so, they won't have to open packaging in order to install power fuses provided by others.

230V Series CATN7 with Fusible Disconnect (J Type) with Power Fuses 000

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Fuse Clip AMPS	Fuse Size	Type 1 (M1) Metallic General Purpose Catalog Number	D I M ⑤	Type 3R (M3) Metallic Outdoor Raintight Catalog Number	D I M ⑤
	230V							
00	0.25	0.2...1.0	30	1.8	CATN7-12-XB-1EBB-JF1.8G17-L11	C	CATN7-12-XB-1EBB-JF1.8G17-L11	O
	0.5	1.0...5.0	30	3.5	CATN7-12-XB-1ECB-JF3.5G17-L11	C	CATN7-12-XB-1ECB-JF3.5G17-L11	O
	0.75	1.0...5.0	30	5	CATN7-12-XB-1ECB-JF5G17-L11	C	CATN7-12-XB-1ECB-JF5G17-L11	O
	1	1.0...5.0	30	6.25	CATN7-12-XB-1ECB-JF6.25G17-L11	C	CATN7-12-XB-1ECB-JF6.25G17-L11	O
	1.5	3.2...16	30	9	CATN7-12-XB-1EDB-JF9G17-L11	C	CATN7-12-XB-1EDB-JF9G17-L11	O
0	2	3.2...16	30	10	CATN7-16-XB-1EDB-JF10G17-L11	C	CATN7-16-XB-1EDB-JF10G17-L11	O
	3	3.2...16	30	15	CATN7-16-XB-1EDB-JF15G17-L11	C	CATN7-16-XB-1EDB-JF15G17-L11	O
1	5	5.4...27	30	25	CATN7-37-XB-1EED-JF25G17-L11	C	CATN7-37-XB-1EED-JF25G17-L11	O
	7.5	5.4...27	60	35	CATN7-37-XB-1EED-JF35G17-L11	C	CATN7-37-XB-1EED-JF35G17-L11	O
2	10	11...55	60	40	CATN7-43-XB-1EFD-JF40G17-L11	C	CATN7-43-XB-1EFD-JF40G17-L11	O
	15	11...55	60	70	CATN7-43-XB-1EFD-JF70G17-L11	C	CATN7-43-XB-1EFD-JF70G17-L11	O
3	20	20...100	100	80	CATN7-85-XB-1EGE-JF80G17-L11	D3	CATN7-85-XB-1EGE-JF80G17-L11	O
	25	20...100	100	100	CATN7-85-XB-1EGE-JF100G17-L11	D3	CATN7-85-XB-1EGE-JF100G17-L11	O
	30	20...100	200	125	CATN7-85-XB-1EGE-JF125G17-L11	G	CATN7-85-XB-1EGE-JF125G17-L11	T

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- UL98 fusible L11 disconnect and included with set of line power fuses
- Reset pushbutton

① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.

② Contactors are equipped with 2 NO and 1 NC auxiliary contact standard. See Modification Section to order additional or different auxiliary contacts.

③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses are supplied with this specific assembly.

④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.

⑤ Dimensional information starts on page C7:15.

Series CATN7 460V AC with Fusible Disconnect (J-Type) ①②

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Fuse Clip AMPS	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	460V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	30	CATN7-12-XC-1EBB-JF61G17-L11	C	CATN7-12-XC-1EBB-JF61R17-L11	O
	0.5	1.0...5.0	30	CATN7-12-XC-1ECB-JF61G17-L11	C	CATN7-12-XC-1ECB-JF61R17-L11	O
	0.75	1.0...5.0	30	CATN7-12-XC-1ECB-JF61G17-L11	C	CATN7-12-XC-1ECB-JF61R17-L11	O
	1	1.0...5.0	30	CATN7-12-XC-1ECB-JF61G17-L11	C	CATN7-12-XC-1ECB-JF61R17-L11	O
	1.5	1.0...5.0	30	CATN7-12-XC-1ECB-JF61G17-L11	C	CATN7-12-XC-1ECB-JF61R17-L11	O
	2	1.0...5.0	30	CATN7-12-XC-1ECB-JF61G17-L11	C	CATN7-12-XC-1ECB-JF61R17-L11	O
0	3	3.2...16	30	CATN7-16-XC-1EDB-JF61G17-L11	C	CATN7-16-XC-1EDB-JF61R17-L11	O
	5	3.2...16	30	CATN7-16-XC-1EDB-JF61G17-L11	C	CATN7-16-XC-1EDB-JF61R17-L11	O
1	7.5	5.4...27	30	CATN7-37-XC-1EED-JF61G17-L11	C	CATN7-37-XC-1EED-JF61R17-L11	O
	10	5.4...27	30	CATN7-37-XC-1EED-JF61G17-L11	C	CATN7-37-XC-1EED-JF61R17-L11	O
2	15	11...55	60	CATN7-43-XC-1EFD-JF62G17-L11	C	CATN7-43-XC-1EFD-JF62R17-L11	O
	20	11...55	60	CATN7-43-XC-1EFD-JF62G17-L11	C	CATN7-43-XC-1EFD-JF62R17-L11	O
	25	11...55	60	CATN7-43-XC-1EFD-JF62G17-L11	C	CATN7-43-XC-1EFD-JF62R17-L11	O
3	30	20...100	60	CATN7-85-XC-1EGE-JF62G17-L11	D3	CATN7-85-XC-1EGE-JF62R17-L11	O
	40	20...100	100	CATN7-85-XC-1EGE-JF63G17-L11	D3	CATN7-85-XC-1EGE-JF63R17-L11	O
	50	20...100	100	CATN7-85-XC-1EGE-JF63G17-L11	D3	CATN7-85-XC-1EGE-JF63R17-L11	O

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- UL98 fusible L11 disconnect
- Reset pushbutton

Series CATN7 575V AC with Fusible Disconnect (J-Type) ①②

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Fuse Clip AMPS	Type 1 Metallic General Purpose	D I M	Type 3R Metallic Outdoor Raintight	D I M
	575V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	30	CATN7-12-XD-1EBB-JF61G17-L11	C	CATN7-12-XD-1EBB-JF61R17-L11	O
	0.5	1.0...5.0	30	CATN7-12-XD-1ECB-JF61G17-L11	C	CATN7-12-XD-1ECB-JF61R17-L11	O
	0.75	1.0...5.0	30	CATN7-12-XD-1ECB-JF61G17-L11	C	CATN7-12-XD-1ECB-JF61R17-L11	O
	1	1.0...5.0	30	CATN7-12-XD-1ECB-JF61G17-L11	C	CATN7-12-XD-1ECB-JF61R17-L11	O
	2	1.0...5.0	30	CATN7-12-XD-1ECB-JF61G17-L11	C	CATN7-12-XD-1ECB-JF61R17-L11	O
	3	3.2...16	30	CATN7-16-XD-1EDB-JF61G17-L11	C	CATN7-16-XD-1EDB-JF61R17-L11	O
0	5	3.2...16	30	CATN7-16-XD-1EDB-JF61G17-L11	C	CATN7-16-XD-1EDB-JF61R17-L11	O
	7.5	5.4...27	30	CATN7-37-XD-1EED-JF61G17-L11	C	CATN7-37-XD-1EED-JF61R17-L11	O
1	10	5.4...27	30	CATN7-37-XD-1EED-JF61G17-L11	C	CATN7-37-XD-1EED-JF61R17-L11	O
	15	11...55	30	CATN7-43-XD-1EFD-JF61G17-L11	C	CATN7-43-XD-1EFD-JF61R17-L11	O
2	20	11...55	60	CATN7-43-XD-1EFD-JF62G17-L11	C	CATN7-43-XD-1EFD-JF62R17-L11	O
	25	11...55	60	CATN7-43-XD-1EFD-JF62G17-L11	C	CATN7-43-XD-1EFD-JF62R17-L11	O
	30	20...100	60	CATN7-85-XD-1EGE-JF62G17-L11	D3	CATN7-85-XD-1EGE-JF62R17-L11	O
3	40	20...100	60	CATN7-85-XD-1EGE-JF62G17-L11	D3	CATN7-85-XD-1EGE-JF62R17-L11	O
	50	20...100	100	CATN7-85-XD-1EGE-JF63G17-L11	D3	CATN7-85-XD-1EGE-JF63R17-L11	O

① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.

② Contactors are equipped with 2 NO and 1 NC auxiliary contacts standard. See page C8.7 to order additional or different auxiliary contacts.

③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.

④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.

⑤ Dimensional information starts on page C8.23.

460V Series CATN7 with Fusible Disconnect (J Type) ②③④

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Fuse Clip Amps	Fuse Size	Type 1 (M1) Metallic General Purpose	D I M	Type 3R (M3) Metallic Outdoor Raintight	D I M
					Catalog Number		Catalog Number	
00	460V							
	0.25	0.2...1.0	30	1	CATN7-12-XC-1EBB-JF1G17-L11	C	CATN7-12-XC-1EBB-JF1R17-L11	O
	0.5	1.0...5.0	30	1.6	CATN7-12-XC-1ECB-JF1.6G17-L11	C	CATN7-12-XC-1ECB-JF1.6R17-L11	O
	0.75	1.0...5.0	30	2.25	CATN7-12-XC-1ECB-JF2.25G17-L11	C	CATN7-12-XC-1ECB-JF2.25R17-L11	O
	1	1.0...5.0	30	3.2	CATN7-12-XC-1ECB-JF3.2G17-L11	C	CATN7-12-XC-1ECB-JF3.2R17-L11	O
	1.5	1.0...5.0	30	4.5	CATN7-12-XC-1ECB-JF4.5G17-L11	C	CATN7-12-XC-1ECB-JF4.5R17-L11	O
0	2	3.2...16	30	5	CATN7-12-XC-1EDB-JF5G17-L11	C	CATN7-12-XC-1EDB-JF5R17-L11	O
	3	3.2...16	30	8	CATN7-16-XC-1EDB-JF8G17-L11	C	CATN7-16-XC-1EDB-JF8R17-L11	O
1	5	3.2...16	30	12	CATN7-16-XC-1EDB-JF12G17-L11	C	CATN7-16-XC-1EDB-JF12R17-L11	O
	7.5	5.4...27	30	17.5	CATN7-37-XC-1EED-JF17.5G17-L11	C	CATN7-37-XC-1EED-JF17.5R17-L11	O
2	10	5.4...27	30	20	CATN7-37-XC-1EED-JF20G17-L11	C	CATN7-37-XC-1EED-JF20R17-L11	O
	15	11...55	60	35	CATN7-43-XC-1EFD-JF35G17-L11	C	CATN7-43-XC-1EFD-JF35R17-L11	O
3	20	11...55	60	40	CATN7-43-XC-1EFD-JF40G17-L11	C	CATN7-43-XC-1EFD-JF40R17-L11	O
	25	11...55	60	50	CATN7-43-XC-1EFD-JF50G17-L11	C	CATN7-43-XC-1EFD-JF50R17-L11	O
3	30	20...100	60	60	CATN7-85-XC-1EGE-JF60G17-L11	D3	CATN7-85-XC-1EGE-JF60R17-L11	O
	40	20...100	100	80	CATN7-85-XC-1EGE-JF80G17-L11	D3	CATN7-85-XC-1EGE-JF80R17-L11	O
	50	20...100	100	100	CATN7-85-XC-1EGE-JF100G17-L11	D3	CATN7-85-XC-1EGE-JF100R17-L11	O



Class J Fuses

Some customers have expressed a desire to buy fusible combination motor starters with Type J power fuses installed in the motor starter. Dealers want and need power fuses installed at Sprecher + Schuh; so, they won't have to open packaging in order to install power fuses provided by others.

575V Series CATN7 with Fusible Disconnect (J Type) ②③④

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Fuse Clip Amp	Fuse Size	Type 1 (M1) Metallic General Purpose	D I M	Type 3R (M3) Metallic Outdoor Raintight	D I M
					Catalog Number		Catalog Number	
00	575V							
	0.25	0.2...1.0	30	1	CATN7-12-XD-1EBB-JF1G17-L11	C	CATN7-12-XD-1EBB-JF1R17-L11	O
	0.5	1.0...5.0	30	1.5	CATN7-12-XD-1ECB-JF1.5G17-L11	C	CATN7-12-XD-1ECB-JF1.5R17-L11	O
	0.75	1.0...5.0	30	2	CATN7-12-XD-1ECB-JF2G17-L11	C	CATN7-12-XD-1ECB-JF2R17-L11	O
	1	1.0...5.0	30	2.8	CATN7-12-XD-1ECB-JF2.8G17-L11	C	CATN7-12-XD-1ECB-JF2.8R17-L11	O
	1.5	1.0...5.0	30	3.5	CATN7-12-XD-1ECB-JF3.5G17-L11	C	CATN7-12-XD-1ECB-JF3.5R17-L11	O
0	2	1.0...5.0	30	4	CATN7-12-XD-1ECB-JF4G17-L11	C	CATN7-12-XD-1ECB-JF4R17-L11	O
	3	3.2...16	30	6	CATN7-16-XD-1EDB-JF6G17-L11	C	CATN7-16-XD-1EDB-JF6R17-L11	O
1	5	3.2...16	30	10	CATN7-16-XD-1EDB-JF10G17-L11	C	CATN7-16-XD-1EDB-JF10R17-L11	O
	7.5	5.4...27	30	15	CATN7-37-XD-1EED-JF15G17-L11	C	CATN7-37-XD-1EED-JF15R17-L11	O
2	10	5.4...27	30	17.5	CATN7-37-XD-1EED-JF17.5G17-L11	C	CATN7-37-XD-1EED-JF17.5R17-L11	O
	15	11...55	30	25	CATN7-43-XD-1EFD-JF25G17-L11	C	CATN7-43-XD-1EFD-JF25R17-L11	O
3	20	11...55	60	35	CATN7-43-XD-1EFD-JF35G17-L11	C	CATN7-43-XD-1EFD-JF35R17-L11	O
	25	11...55	60	40	CATN7-43-XD-1EFD-JF40G17-L11	C	CATN7-43-XD-1EFD-JF40R17-L11	O
3	30	20...100	60	50	CATN7-85-XD-1EGE-JF50G17-L11	D3	CATN7-85-XD-1EGE-JF50R17-L11	O
	40	20...100	60	60	CATN7-85-XD-1EGE-JF60G17-L11	D3	CATN7-85-XD-1EGE-JF60R17-L11	O
	50	20...100	100	80	CATN7-85-XD-1EGE-JF80G17-L11	D3	CATN7-85-XD-1EGE-JF80R17-L11	O

Full Voltage Non-Reversing (FVNR)

Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- UL98 fusible L11 disconnect and included with set of line power fuses
- Reset pushbutton

① HP and NEMA size selection for line voltages shown. Contact your Sprecher + Schuh representative for other voltage application.

② Contactors are equipped with 2 NO and 1 NC auxiliary contacts standard. See page C108 to order additional or different auxiliary contacts.

③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses are supplied with this specific assembly.

④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.

⑤ Dimensional information starts on page C7:15.

Series CATN7 with Non-Fusible Disconnect ☐☐

NEMA Size	Maximum Horsepower Three Phase				Disc Size/Amps	Type 1 General Purpose	D I M	Type 12 [Type 3R ☐] Industrial Dusttight	D I M
	200V	230V	460V	575V		Catalog No.		Catalog No.	
00	1.5	1.5	2	2	30	CATN7-12-☐-◆-JU61G0	C	CATN7-12-☐-◆-JU61D0	C2
0	3	3	5	5	30	CATN7-16-☐-◆-JU61G0	C	CATN7-16-☐-◆-JU61D0	C2
1	5	7.5	10	10	30	CATN7-37-☐-◆-JU61G0	C	CATN7-37-☐-◆-JU61D0	C2
	7.5	~	~	~	60	CATN7-37-☐-◆-JU62G0	C	CATN7-37-☐-◆-JU62D0	C2
2	~	~	15	15	30	CATN7-43-☐-◆-JU61G0	C	CATN7-43-☐-◆-JU61D0	C2
	10	15	25	25	60	CATN7-43-☐-◆-JU62G0	C	CATN7-43-☐-◆-JU62D0	C2
3	15	~	30	40	60	CATN7-85-☐-◆-JU62G0	D3	CATN7-85-☐-◆-JU62D0	Q
	25	30	50	50	100	CATN7-85-☐-◆-JU63G0	D3	CATN7-85-☐-◆-JU63D0	Q

Series CATN7 with Non-Fusible Disconnect ☐☐

NEMA Size	Maximum Horsepower Three Phase				Disc Size/Amps	Type 4 Watertight	D I M	Type 4X Watertight Corrosion Resistant Non-metallic	D I M
	200V	230V	460V	575V		Catalog No.		Catalog No.	
00	1.5	1.5	2	2	30	CATN7-12-☐-◆-JU61W0	Q	CATN7-12-☐-◆-JU61C0	V1
0	3	3	5	5	30	CATN7-16-☐-◆-JU61W0	Q	CATN7-16-☐-◆-JU61C0	V1
1	5	7.5	10	10	30	CATN7-37-☐-◆-JU61W0	Q	CATN7-37-☐-◆-JU61C0	V1
	7.5	~	~	~	60	CATN7-37-☐-◆-JU62W0	Q	CATN7-37-☐-◆-JU62C0	V1
2	~	~	15	15	30	CATN7-43-☐-◆-JU61W0	Q	CATN7-43-☐-◆-JU61C0	V1
	10	15	25	25	60	CATN7-43-☐-◆-JU62W0	Q	CATN7-43-☐-◆-JU62C0	V1
3	15	~	30	40	60	CATN7-85-☐-◆-JU62W0	Q	CATN7-85-☐-◆-JU62C0	W2
	25	30	50	50	100	CATN7-85-☐-◆-JU63W0	Q	CATN7-85-☐-◆-JU63C0	W2

NOTE: Catalog numbers and enclosure dimensions reflect contactors with AC coils. For DC coils, select Coil Code from the DC Coil Code table on page C7:13 and follow the instructions for modifying catalog numbers.

Ordering Instructions

Specify Catalog Number	
Replace (☐) with Coil Code	See page C7:14 See page C8:5 See pages C7:14-C8:10
Replace (◆) with O/L Relay	
Factory Modifications available	

- ① Dimensional information starts on page C8:23.
- ② For Type 3R outdoor applications, replace "D" in catalog number with an "R". Dimensions may change. For example number CATN7-16-☐-◆-JU61D0 becomes CATN7-16-☐-◆-JU61R0. Price remains the same.
- ③ Non-fusible combo-starter uses the L11 Non-Fusible Disconnect.
- ④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JU" to "LU" in catalog number.

Series CATN7 @208V AC with Non-Fusible Disconnect ①②③

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Disc Size/Amps	Type 1 Metallic General Purpose	D I M ⑥	Type 3R Metallic Outdoor Raintight	D I M ⑥
	208V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	30	CATN7-12-XA-1EBB-JU61G17-L11	C	CATN7-12-XA-1EBB-JU61R17-L11	O
	0.5	1.0...5.0	30	CATN7-12-XA-1ECB-JU61G17-L11	C	CATN7-12-XA-1ECB-JU61R17-L11	O
	0.75	1.0...5.0	30	CATN7-12-XA-1ECB-JU61G17-L11	C	CATN7-12-XA-1ECB-JU61R17-L11	O
	1	1.0...5.0	30	CATN7-12-XA-1ECB-JU61G17-L11	C	CATN7-12-XA-1ECB-JU61R17-L11	O
	1.5	3.2...16	30	CATN7-12-XA-1EDB-JU61G17-L11	C	CATN7-12-XA-1EDB-JU61R17-L11	O
0	2	3.2...16	30	CATN7-16-XA-1EDB-JU61G17-L11	C	CATN7-16-XA-1EDB-JU61R17-L11	O
	3	3.2...16	30	CATN7-16-XA-1EDB-JU61G17-L11	C	CATN7-16-XA-1EDB-JU61R17-L11	O
1	5	5.4...27	30	CATN7-37-XA-1EED-JU61G17-L11	C	CATN7-37-XA-1EED-JU61R17-L11	O
	7.5	5.4...27	30	CATN7-37-XA-1EED-JU61G17-L11	C	CATN7-37-XA-1EED-JU61R17-L11	O
2	10	11...55	60	CATN7-43-XA-1EFD-JU62G17-L11	C	CATN7-43-XA-1EFD-JU62R17-L11	O
3	15	20...100	60	CATN7-85-XA-1EGE-JU62G17-L11	D3	CATN7-85-XA-1EGE-JU62R17-L11	O
	20	20...100	100	CATN7-85-XA-1EGE-JU63G17-L11	D3	CATN7-85-XA-1EGE-JU63R17-L11	O
	25	20...100	100	CATN7-85-XA-1EGE-JU63G17-L11	D3	CATN7-85-XA-1EGE-JU63R17-L11	O

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CAN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- UL98 non-fusible L11 disconnect switch
- Reset pushbutton

Series CATN7 @230V AC with Non-Fusible Disconnect ①②③

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Disc Size/Amps	Type 1 Metallic General Purpose	D I M ⑥	Type 3R Metallic Outdoor Raintight	D I M ⑥
	230V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	30	CATN7-12-XB-1EBB-JU61G17-L11	C	CATN7-12-XB-1EBB-JU61R17-L11	O
	0.5	1.0...5.0	30	CATN7-12-XB-1ECB-JU61G17-L11	C	CATN7-12-XB-1ECB-JU61R17-L11	O
	0.75	1.0...5.0	30	CATN7-12-XB-1ECB-JU61G17-L11	C	CATN7-12-XB-1ECB-JU61R17-L11	O
	1	1.0...5.0	30	CATN7-12-XB-1ECB-JU61G17-L11	C	CATN7-12-XB-1ECB-JU61R17-L11	O
	1.5	1.0...5.0	30	CATN7-12-XB-1ECB-JU61G17-L11	C	CATN7-12-XB-1ECB-JU61R17-L11	O
0	2	3.2...16	30	CATN7-16-XB-1EDB-JU61G17-L11	C	CATN7-16-XB-1EDB-JU61R17-L11	O
	3	3.2...16	30	CATN7-16-XB-1EDB-JU61G17-L11	C	CATN7-16-XB-1EDB-JU61R17-L11	O
1	5	5.4...27	30	CATN7-37-XB-1EED-JU61G17-L11	C	CATN7-37-XB-1EED-JU61R17-L11	O
	7.5	5.4...27	30	CATN7-37-XB-1EED-JU61G17-L11	C	CATN7-37-XB-1EED-JU61R17-L11	O
2	10	11...55	60	CATN7-43-XB-1EFD-JU62G17-L11	C	CATN7-43-XB-1EFD-JU62R17-L11	O
	15	11...55	60	CATN7-43-XB-1EFD-JU62G17-L11	C	CATN7-43-XB-1EFD-JU62R17-L11	O
3	20	20...100	100	CATN7-85-XB-1EGE-JU63G17-L11	D3	CATN7-85-XB-1EGE-JU63R17-L11	O
	25	20...100	100	CATN7-85-XB-1EGE-JU63G17-L11	D3	CATN7-85-XB-1EGE-JU63R17-L11	O
	30	20...100	100	CATN7-85-XB-1EGE-JU63G17-L11	D3	CATN7-85-XB-1EGE-JU63R17-L11	O

① HP and NEMA size selection shown for 208V ratings only. Contact your Sprecher + Schuh representative for other voltage application.

② Contactors are equipped with 2 NO and 1 NC auxiliary contacts standard. See page C8:7 to order additional or different auxiliary contacts.

③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.

④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.

⑤ HP and NEMA size selection shown for 230V ratings only. Contact your Sprecher + Schuh representative for other voltage application.

⑥ Dimensional information starts on page C8:23.

Series CATN7 @460V AC with Non-Fusible Disconnect ②③④

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Disc Size/Amps	Type 1 Metallic General Purpose	D I M ⑥	Type 3R Metallic Outdoor Raintight	D I M ⑥
	460V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	30	CATN7-12-XC-1EBB-JU61G17-L11	C	CATN7-12-XC-1EBB-JU61R17-L11	O
	0.5	1.0...5.0	30	CATN7-12-XC-1ECB-JU61G17-L11	C	CATN7-12-XC-1ECB-JU61R17-L11	O
	0.75	1.0...5.0	30	CATN7-12-XC-1ECB-JU61G17-L11	C	CATN7-12-XC-1ECB-JU61R17-L11	O
	1	1.0...5.0	30	CATN7-12-XC-1ECB-JU61G17-L11	C	CATN7-12-XC-1ECB-JU61R17-L11	O
	1.5	1.0...5.0	30	CATN7-12-XC-1ECB-JU61G17-L11	C	CATN7-12-XC-1ECB-JU61R17-L11	O
	2	1.0...5.0	30	CATN7-12-XC-1ECB-JU61G17-L11	C	CATN7-12-XC-1ECB-JU61R17-L11	O
0	3	3.2...16	30	CATN7-16-XC-1EDB-JU61G17-L11	C	CATN7-16-XC-1EDB-JU61R17-L11	O
	5	3.2...16	30	CATN7-16-XC-1EDB-JU61G17-L11	C	CATN7-16-XC-1EDB-JU61R17-L11	O
1	7.5	5.4...27	30	CATN7-37-XC-1EED-JU61G17-L11	C	CATN7-37-XC-1EED-JU61R17-L11	O
	10	5.4...27	30	CATN7-37-XC-1EED-JU61G17-L11	C	CATN7-37-XC-1EED-JU61R17-L11	O
2	15	11...55	30	CATN7-43-XC-1EFD-JU61G17-L11	C	CATN7-43-XC-1EFD-JU61R17-L11	O
	20	11...55	60	CATN7-43-XC-1EFD-JU62G17-L11	C	CATN7-43-XC-1EFD-JU62R17-L11	O
	25	11...55	60	CATN7-43-XC-1EFD-JU62G17-L11	C	CATN7-43-XC-1EFD-JU62R17-L11	O
3	30	20...100	60	CATN7-85-XC-1EGE-JU62G17-L11	D3	CATN7-85-XC-1EGE-JU62R17-L11	O
	40	20...100	100	CATN7-85-XC-1EGE-JU63G17-L11	D3	CATN7-85-XC-1EGE-JU63R17-L11	O
	50	20...100	100	CATN7-85-XC-1EGE-JU63G17-L11	D3	CATN7-85-XC-1EGE-JU63R17-L11	O

Full Voltage Non-Reversing (FVNR) Features include:

- NEMA-sized CATN7 contactor
- CEP7 Electronic Overload Relay
- Control Circuit Transformer
- Hand-Off-Auto (H-O-A) selector switch
- Red Run pilot light
- 2-NO and 1-NC auxiliaries for customer use
- Class CC Fuse holder as fused primary of CCT
- UL98 non-fusible L11 disconnect switch
- Reset pushbutton

Series CATN7 @575V AC with Non-Fusible Disconnect ②③④

NEMA Size	Max HP 3-Phase ①	Adjustment Range	Disc Size/Amps	Type 1 Metallic General Purpose	D I M ⑥	Type 3R Metallic Outdoor Raintight	D I M ⑥
	575V			Catalog No.		Catalog No.	
00	0.25	0.2...1.0	30	CATN7-12-XD-1EBB-JU61G17-L11	C	CATN7-12-XD-1EBB-JU61R17-L11	O
	0.5	1.0...5.0	30	CATN7-12-XD-1ECB-JU61G17-L11	C	CATN7-12-XD-1ECB-JU61R17-L11	O
	0.75	1.0...5.0	30	CATN7-12-XD-1ECB-JU61G17-L11	C	CATN7-12-XD-1ECB-JU61R17-L11	O
	1	1.0...5.0	30	CATN7-12-XD-1ECB-JU61G17-L11	C	CATN7-12-XD-1ECB-JU61R17-L11	O
	2	1.0...5.0	30	CATN7-12-XD-1ECB-JU61G17-L11	C	CATN7-12-XD-1ECB-JU61R17-L11	O
	3	3.2...16	30	CATN7-16-XD-1EDB-JU61G17-L11	C	CATN7-16-XD-1EDB-JU61R17-L11	O
0	5	3.2...16	30	CATN7-16-XD-1EDB-JU61G17-L11	C	CATN7-16-XD-1EDB-JU61R17-L11	O
	7.5	5.4...27	30	CATN7-37-XD-1EED-JU61G17-L11	C	CATN7-37-XD-1EED-JU61R17-L11	O
1	10	5.4...27	30	CATN7-37-XD-1EED-JU61G17-L11	C	CATN7-37-XD-1EED-JU61R17-L11	O
	15	11...55	30	CATN7-43-XD-1EFD-JU61G17-L11	C	CATN7-43-XD-1EFD-JU61R17-L11	O
2	20	11...55	30	CATN7-43-XD-1EFD-JU61G17-L11	C	CATN7-43-XD-1EFD-JU61R17-L11	O
	25	11...55	60	CATN7-43-XD-1EFD-JU62G17-L11	C	CATN7-43-XD-1EFD-JU62R17-L11	O
	30	20...100	60	CATN7-85-XD-1EGE-JU62G17-L11	D3	CATN7-85-XD-1EGE-JU62R17-L11	O
3	40	20...100	60	CATN7-85-XD-1EGE-JU62G17-L11	D3	CATN7-85-XD-1EGE-JU62R17-L11	O
	50	20...100	100	CATN7-85-XD-1EGE-JU63G17-L11	D3	CATN7-85-XD-1EGE-JU63R17-L11	O

① HP and NEMA size selection shown for 460V ratings only. Contact your Sprecher + Schuh representative for other voltage application.

② Contactors are equipped with 2 NO and 1 NC auxiliary contacts standard. See page Cam almost done but it has been a struggle all dayC8:7 to order additional or different auxiliary contacts.

③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.

④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.

⑤ HP and NEMA size selection shown for 575V ratings only. Contact your Sprecher + Schuh representative for other voltage application.

⑥ Dimensional information starts on page C8:23.

Fireman Damper Interface for HVAC Starters

Sprecher + Schuh's fireman and damper control interface option is exclusively for HVAC markets. These options are offered in a single package modification to our standard Non-Combination or Combination starters.

Bundled Features

The Fireman and Damper interface modification is available in two control voltages; 24V or 120V AC. The selection of 24V (-FD24) or 120V AC (-FD120) for the control circuit is dependent on the damper motor control voltage and fireman override voltage which matches the control power transformer secondary (if CPT is provided). The fireman and damper modification is easily added with a simple -FD24 or -FD120 to the end of the catalog number. The control circuit voltage must be specified at the time of order entry and is not field changeable. The modifications are fully integrated and factory installed for a ready-to-use starter.

The Fireman-Damper option allows for interface with electrically operated dampers where motorized dampers must be opened before the blower motor is allowed to start. This option also accommodates a contact input from a damper limit switch to signal that the motorized damper is in fact open. An end switch for analog interface with the motorized damper would be provided by others. The run permissive option includes provision for a second remote control device which is useful if the blower is initiated from two remote control devices like a thermostat and a CO₂ sensor. The emergency shutdown feature allows for two wire connection to two terminal blocks from a remote device like an E-Stop pushbutton. This bundle of features includes a Fireman Override which will accept a two-wire powered signal from

a fire control system in a remote control room. This Fireman Override feature might be used to exhaust smoke out of a building in case of fire. Use of the Fireman Override causes the damper to open and the blower to run regardless what state the other controls are in including if Off is selected on the H-O-A switch. In case of an actual fire the Fireman Override by-passes the overload relay protection and will run the motor to destruction or the overload by-pass can be disabled for periodic testing of the override circuit. 22mm incandescent pilot lights provide clear visual indication of the mode of operation and status – no squinting to see tiny LEDs'. All the bundled options are factory wired and includes jumpers for normal operation. Until the jumper is removed and the optional remote device(s) are wired into place. This means complete flexibility to use only some or all of the features included.

Standard Features

- Shutdown Input – Customer provides a normally closed dry contact which enables the starter until the shutdown button or E-stop is depressed which opens the contact and the blower starter is disabled in the Hand or Auto mode (except in Fireman's override).
- Damper Motor – Provides a 24 or 120 VAC output as specified to actuate the damper motor when the blower starter is either in the Hand or Auto mode. This option includes a connection for a customer provided end switch, which enables the damper motor to engage via an analog signal.
- Damper Switch Input – Customer provides a normally open dry contact from the damper limit switch. This option prevents the blower starter from energizing until the damper is open.
- Remote Control Device (RCD) – Customer provides a normally open dry contact from the Remote Control



Device which enables the blower starter in the Auto mode. (i.e.: thermostat or CO₂ sensor).

- Run Permissive – Customer provides normally closed dry contact. When the customer input contact opens the Auto mode is disabled.
- Fireman's Override – Customer provides a wet (powered) contact which energizes the damper circuit and then in turn energizes the blower motor regardless if in Hand or Auto mode, and regardless of the status of other inputs. This operation by-passes the overload relay and will run to destruction to extinguish the fire. Alternatively, a jumper can be removed for testing with the overload active in the circuit.
- Indicating lights – Four 22mm incandescent pilot lights (D7) are provided to indicate:
 - Power applied, blower motor not running (Green)
 - Auto mode selected (Blue)
 - Blower motor is running (Red)
 - Overload relay tripped (Amber)
- Factory Terminal Block Jumpers – Three factory installed terminal block jumpers are provided for shutdown, damper switch, and run permissive options which must be removed before connecting customer inputs.



Still a Compact Enclosed Starter

The fireman and damper option is available for combination and non-combination NEMA labeled HVAC starters in Type 1 or 3R enclosures. The -FD modification increases the size of the enclosure by only a few inches, thus maintaining the compact size Sprecher + Schuh starters are known for.

Minimal Size Increase

Enclosure Type	DIM	Approx. Dimension without -FD option	DIM	Approx. Dimension with -FD option
Non-Combination Starters				
Type 1	A	10 x 8 x 6	B	12 x 10 x 6
Type 1	B	12 x 10 x 6	D3	20 x 16 x 9
Type 3R	L	8 x 6 x 6	M	10 x 8 x 6
Type 3R	M	10 x 8 x 6	Q	20 x 16 x 8
Combination Starters				
Type 1	C	16 x 12 x 7	D3	20 x 16 x 9
Type 1	D3 & G	Size remains the same		
Type 3R	O & T	Size remains the same		


Catalog Numbers

Type 1 (M1) Metallic General Purpose Assembly Type	Type 3R (M3) Metallic Outdoor Raintight Assembly Type
NON-COMBO	
CATN7-12...43-X_-1E_-G17-L11	CATN7-12...43-X_-1E_-R17-L11
CATN7-85-X_-1EGE-G17-L11	CATN7-85-X_-1EGE-R17-L11
COMBO NON-FUSIBLE	
CATN7-12...43-X_-1E-JU61G17-L11	CATN7-12...43-X_-1E-JU61R17-L11
CATN7-43-X_1EFD-JU62G17-L11	CATN7-43-X_1EFD-JU62R17-L11
CATN7-85-X_-1EGE-JU62G17-L11	CATN7-85-X_-1EGE-JU62R17-L11
CATN7-85-X_-1EGE-JU63G17-L11	CATN7-85-X_-1EGE-JU63R17-L11
COMBO FUSIBLE	
CATN7-12...43-X_-1E_-JF61G17-L11	CATN7-12...43-X_-1E_-JF61R17-L11
CATN7-37...43-X_-1E_-JF62G17-L11	CATN7-37...43-X_-1E_-JF62R17-L11
CATN7-43-X_1EFD-JF63G17-L11	CATN7-43-X_1EFD-JF63R17-L11
CATN7-85-X_-1EGE-JF6217-L11	CATN7-85-X_-1EGE-JF6217-L11
CATN7-85-X_-1EGE-JF63G17-L11	CATN7-85-X_-1EGE-JF63R17-L11
CATN7-85-X_-1EGE-JF64G17-L11	CATN7-85-X_-1EGE-JF64R17-L11
COMBO CIRCUIT BREAKER	
CATN7-12...43-X_-1E_-TB_G17-L11	CATN7-12...43-X_-1E_-TB_R17-L11
CATN7-85-X_-1EGE-TB_G17-L11	CATN7-85-X_-1EGE-TB_R17-L11

KWIKstarters excluded from -FD* Option

- KWIKstarters as described in the HVAC catalog are NOT large enough to accommodate a CPT or DIN rail mounted relays and TBs; therefore cannot be considered for inclusion of the Fireman-Damper Interface options.

Terminal Blocks and Relays (see page C8:22 for circuit diagram)

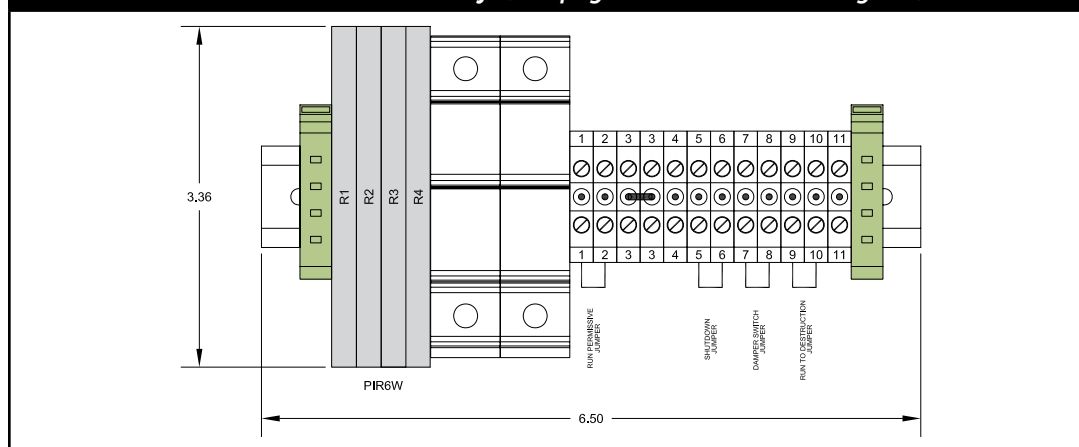

Notes

C7

NEMA Starters

Type 1 General Purpose Enclosures ②③

Enclosure (Box) Kit Includes: - Hinged cover - Backpan pre-drilled for listed arrangements (not tapped) (2) Ground Lugs and Symbol label (2) 22mm knockouts for pilot devices ④ - CEP7-1ERA Overload Reset Adapter ⑤ - MR7 Reset Kit for Cover (2) 22mm knockouts for Reset ⑥ - Dual Conduit knockouts - Top and Bottom "A" Box - (2) 1/2 to 3/4" and (1) 3/4 to 1" "B" Box - (2) 1/2 to 3/4", (1) 1 to 1-1/4", (1) 3/4 to 1" (4) 8-32 x 1/2" screws for mounting controllers "B" Box also includes (2) 10-32 x 3/4" screws - Does not include wire										
				"A" Box Kit			"B" Box Kit			
				Catalog Number			Catalog Number			
				M1-1086-A			M1-12106-B			
Optional: 35mm DIN Rail Kit with (2) 10-32 x 1/4" screws ②				SF-2 (2 inches long)			SF-3 (3 inches long)			
Dimensions ⑥				10" x 8" x 6" Type 1 Enclosure			12" x 10" x 6" Type 1 Enclosure			
For use with Controller	For use with overload			"A" Box Kit accommodates			"B" Box Kit accommodates			
	CEP7-1EE*	CEP7-1EF*	CT7N	Use with No CPT	Use with 50VA CPT ③	Space for 2" DIN Rail ②	Use with No CPT	Use with 50VA CPT	Use with 100VA CPT ③	Space for 3" DIN Rail ②
Non-reversing Contactors										
CA7-9...55	~	~	~	✓	✓	✓	✓	✓	✓	✓
CA7-60...97 ⑦	~	~	~	No	No	No	✓	N/A	✓	✓
Reversing Contactors										
CAU7-9...37	~	~	~	✓	No	✓	✓	✓	✓	✓
CAU7-43...55	~	~	~	No	No	No	✓	✓	✓	✓
CAU7-60...97 ⑦	~	~	~	No	No	No	No	N/A	No	No
Non-Reversing Starters										
CAT7-9...23	✓	✓	①	✓	✓	✓	✓	✓	✓	✓
CAT7-30...55	✓	✓	①	✓	✓	✓	✓	✓	✓	✓
CAT7-60...97 ⑦	N/A	✓	①	No	No	No	✓	N/A	✓	✓
Reversing Starters										
CAU7-9...23	✓	✓	①	✓	No	✓	✓	✓	✓	✓
CAU7-30...37	✓	✓	①	✓	No	✓	✓	✓	✓	✓
CAU7-43...55	✓	✓	①	No	No	No	✓	✓	✓	✓
CAU7-60...97 ⑦	N/A	No	No	No	No	No	No	No	No	No
NEMA Sized Non-reversing Starters										
CATN7-12...16	✓	✓	①	✓	✓	✓	✓	✓	✓	✓
CATN7-37	✓	✓	①	✓	✓	✓	✓	✓	✓	✓
CATN7-43	✓	✓	①	✓	✓	✓	✓	✓	✓	✓
CATN7-85	N/A	✓	①	No	No	No	✓	N/A	✓	✓

- ① Alternatively CT7N overload relay can be used which will require CT7N-RA3 Reset Adapter. Not included in the kit. Order separately.
- ② 2" DIN rail can accommodate up to (3) V7-W4 TB's or equivalent DIN rail mount timers, relays, etc. Order kit SF-2 separately.
3" DIN rail can accommodate up to (6) V7-W4 TB's or equivalent DIN rail mount timers, relays, etc. Order kit SF-3 separately.
- ③ Enclosure designed for use with CPT with top mount secondary fuse, plus back pan mounted Ambus Fuseholder with (2) primary fuses. A CPT and the addition of extra terminal blocks or other control relay using the 2" DIN rail space may require a design change.

- ④ This enclosure is designed for use with a D7 multi-function Start/Stop as standard plus a D7D monolithic pilot light to fit the (2) 22mm knockouts provided. Additional pilot device holes will require field drilling and may interfere with the controller or the addition of a CPT or TB's.
- ⑤ (2) 22mm knockout locations are provided for one reset Kit to be located contingent on the type of controller used. See box Instruction sheet for mounting details of controller and reset kit.
- ⑥ For enclosure dimensions see page C8:23
- ⑦ CA7-97 and CAT7-97 will not fit in "B" Box because of wire bending space requirements. See Selection tables for box sizes starting on page C8:23 for dimensions.
- ⑧ The CEP7-1ERA reset adapter is a 3rd generation accessory only compatible to 3rd generation CEP7-1 overloads

Pilot Device Kits – All applications (except Kwikstarters and Explosion Proof enclosures) ❶

Kits	Description	Contact Blocks included		For Use With Enclosure...	Catalog Number
		NO	NC		
	Multi-Function Pushbutton kit ❷ START-STOP Non-illuminated, Standard for "A" and "B" Box Kits.	1	1	Type 1, 12, 3R, 4, 4X, 13	SS6-D7P
				Type 1, 12, 3R, 4, 13	SS6-D7M
	Multi-Function Pushbutton kit ❷ FORWARD-STOP-REVERSE Non-illuminated, Standard for "A" and "B" Box Kits.	2	3	Type 1, 12, 3R, 4, 4X, 13	SS5-D7P
				Type 1, 12, 3R, 4, 13	SS5-D7M
	STOP and START Two button pushbutton kit	1	1	Type 1, 12, 3R, 4, 4X, 13	SS1-D7P
				Type 1, 12, 3R, 4, 13	SS1-D7M
	FORWARD, REVERSE and STOP Three button pushbutton kit	2	3	Type 1, 12, 3R, 4, 4X, 13	SS7-D7P
				Type 1, 12, 3R, 4, 13	SS7-D7M
	HAND-OFF-AUTO selector switch kit Name plate included.	2	0	Type 1, 12, 3R, 4, 4X, 13	SS2-D7P
				Type 1, 12, 3R, 4, 13	SS2-D7M
	FWD-OFF-REV selector switch kit Name plate included.	2	0	Type 1, 12, 3R, 4, 4X, 13	SS9-D7P
				Type 1, 12, 3R, 4, 13	SS9-D7M
	OFF-ON selector switch kit Name plate included.	1	0	Type 1, 12, 3R, 4, 4X, 13	SS4-D7P
				Type 1, 12, 3R, 4, 13	SS4-D7M
	Monolithic Pilot Light kit LED Lamp and lens cap Does not include nameplate	~	Type 1, 12, 3R, 4, 4X, 13	Green LED 24V AC/DC	D7D-P3N3
				Red LED 24V AC/DC	D7D-P4N3
				Green LED 120V AC	D7D-P3N5
				Red LED 120V AC	D7D-P4N5
				Green LED 240V AC	D7D-P3N7
				Red LED 240V AC	D7D-P4N7



Example of pushbutton kits on an "A" Box

❶ Pilot Device Kits do not include control wires. See instruction sheet for installation.

❷ Multi-function START/STOP pushbutton are standard for General Purpose Type 1(M1) dimensions A and B enclosures.

A.C. Coil Codes & Voltage Ranges ①②

All catalog numbers, list prices and enclosure dimensions in the previous section reflect contactors with AC coils. If necessary, add the appropriate price adder to the list price for each coil required as shown in the online catalog. Remember that reversing applications require two coils. Price Adder x 2.

A.C. Coil Codes (Replace "*" in cat.# with coil code)	CA7-9 thru CA7-97 CAN7-12...85	
	50 Hz	60 Hz
24Z	24V	24V
120	110V	120V
220W ②	200-220V	208-240V
277	240V	277V
415	400-415V	~
480	440V	480V
600	550V	600V

D.C. Coil Codes & Voltage Ranges ①③

For starters with DC coils, select Coil Code from the table below. Remember that reversing applications require two coils (Price Adder x 2). Starter catalog numbers must be modified when using DC coils. For example: For **CAT7-9...55** contactors, add an "E" to catalog number for Electronic DC Coils. i.e.: CAT7-9... becomes CAT7-9E... For **CAT7-60...97** contactors, add a "D" to catalog number. i.e.: CAT7-60... becomes CAT7-60D...

D.C. Coil Codes (Replace "*" in cat.# with coil code)	⑥ CA7-9E...37E CAN7-12E...37E	⑥ CA7-43E ...55E CAN7-43E	④ CA7-60D...97D CAN7-85D
	Voltage	Voltage	Voltage
12E	12VDCE	12VDCE	~
24E	24VDCE	24VDCE	~
24DD	~	~	24VDC
36E	36-48VDCE	36-48VDCE	~
48E	48-72VDCE	48-72VDCE	~
110E	110VDCE	110VDCE	~
110DD	~	~	110VDC
~	~	~	~
220E	220VDCE	220VDCE	~
250DD	~	~	250VDC

CAT9 AC/DC Coil Codes and Voltage Ranges ②③⑤

Electronic Coils	V	24-60V	48-130V	100-250V	250-500V
		(Replace "*" in cat.# with coil code)			
CA9-116...370	AC/DC	24W	48W	120W	480W
CA9-116-EI...370-EI	AC/DC with PLC Input	~	~	120W	480W
CA9-400-EI...750-EI		24W ⑦	48W	120W	480W
CA9-860-EI...1060-EI		~	~	120W	~
CA9-1260-EI		24W ⑦	48W	120W	480W
CA9-2050-EI...2650-EI		~	~	120W	~

① Only the most common coils are shown here. Other coil voltages may be available. Refer to Contactor Renewal Parts in Section A of this catalog, or contact your nearest Sprecher + Schuh sales office.

② Wide range coil.

③ "-EI" designates contactor coil with PLC input. Selections CA9-116...370 with "EI" requires use of control logic on terminals 1, 2, 3. CA9-400 contactors and larger include an integral switch to select use of "EI".

④ "DD" coils are standard for CA7-60D...97D.

⑤ Reversing applications require two coils. Add appropriate price adder(s) to list price of enclosed contactors and starters. Remember to add price for each coil required.

⑥ CA7-9E...55E electronic coils are not interchangeable with non-electronic DC or AC coils.

⑦ This coil range is 24-60V DC only.

CA7 Contactor with CEP7 Overload Relay ③④

For use with contactor...	Amp Range	Overload Relay Code (◆)	Catalog Number (of Overload Relay)
1-Phase & 3-Phase / Manual reset / Class 10 & 20			
CA7-9...CA7-23	0.1...0.5	1EAB	CEP7-1EEAB
	0.2...1.0	1EBB	CEP7-1EEBB
	1.0...5.0	1ECB	CEP7-1EECB
	3.2...16	1EDB	CEP7-1EEDB
	5.4...27	1EEB	CEP7-1EEEB
CA7-30...CA7-55	1.0...5.0	FCP	CEP7-1EFCP ❶
	3.6...16	FDP	CEP7-1EFDP ❶
	5.4...27	1EED	CEP7-1EEED
	11...55	1EFD	CEP7-1EEFD
CA7-60...97	20...100	1EGE	CEP7-1EEGE
1-Phase & 3-Phase / Auto or Manual / Adj. Trip Class 10...30			
CA7-9...CA7-23	0.1...0.5	FAB	CEP7-1EFAB
	0.2...1.0	FBB	CEP7-1EFBB
	1.0...5.0	FCB	CEP7-1EFCB
	3.2...16	FDB	CEP7-1EFDB
	5.4...27	FEB	CEP7-1EFEB
CA7-30...CA7-55	1.0...5.0	FCP	CEP7-1EFCP ❶
	3.2...16	FDP	CEP7-1EFDP ❶
	5.4...27	FED	CEP7-1EFED
	11...55	FFD	CEP7-1EFFD
CA7-55	11...55	FFD	CEP7-1EFFD
CA7-60...CA7-97	5.4...27	FEP	CEP7-1EFEP ❶
	11...55	FFP	CEP7-1EFFP ❶
	20...100	FGE	CEP7-1EFGE

CA9 Contactor with CEP7-1EF_Z Overload Relay ② / Separate-Mount

Separate Mounts from Contactor... ②③	Adj. Range (A)	Overload Relay Code (◆)	CT Ratio	Catalog Number (of Overload Relay)
Automatic or Manual Reset for 3-Phase Applications Adjustable Trip Class 10, 15, 20 & 30				
CA9-116...265	30...300	CTK	300:5	CEP7-CT-UL-300 (UL approved) + (plus) CEP7-1EFKZ
CA9-305...460	120...600	CTM	600:5	CEP7-CT-UL-600 (UL approved) + (plus) CEP7-1EFMZ
CA9-580...1060		~		Refer to Factory

CA9 Contactor with CEP9 Overload Relay ② / Direct-Mount

Directly Mounts to Contactor... ②	Adj. Range (A)	Overload Relay Code (◆)	Catalog Number (of Overload Relay)
Automatic or Manual Reset for 3-Phase Applications Adjustable Trip Class 10, 15, 20 & 30			
CA9-116...146	20...200	9IP ⑥	CEP9-ESM-I-146-200 CEP9-EIO... CEP9-ECM-PCM
		9IGP ⑥	CEP9-ESM-IG-146-200 CEP9-EIO... CEP9-ECM-PCM
		9VIGP ⑥	CEP9-ESM-VIG-146-200 CEP9-EIO... CEP9-ECM-PCM
CA9-190...205	20...200	9IP ⑥	CEP9-ESM-I-205-200 CEP9-EIO... CEP9-ECM-PCM
		9IGP ⑥	CEP9-ESM-IG-205-200 CEP9-EIO... CEP9-ECM-PCM
		9VIGP ⑥	CEP9-ESM-VIG-205-200 CEP9-EIO... CEP9-ECM-PCM

Special Notes:

Wye-Delta Starters - First multiply motor full load current by 58%. Then, using this figure, select appropriate Overload Relay Code from tables above.

Part Winding Starters - First multiply motor full load current by 50%. Then, using this figure, select appropriate Overload Relay Code from tables above.

Variable Frequency Drives - CEP7 solid state overload relays cannot be utilized on VFDs or Softstarters with Braking option.

❶ Engineered solution is a pass-thru model overload. No direct contactor mounting for this selection is available within the CEP7-1EE/1EF series.

❷ This reference is not intended to be a guide for selecting contactors. Size overload relays using the full load current of the motor.

❸ The reset time of a CEP7 set in the automatic mode is approximately 180 seconds.

❹ CEP7 Overload relays do not work with Variable Frequency Drives or any Sprecher + Schuh Softstarter with braking options.

⑥ Utilizes UL approved Current Transformers and a CEP7-1EF_Z overload relay. For CE approved Current Transformers – refer to factory.

⑥ The letter "P" designates the parameter configuration module and can be changed to an "E" to represent the use of Ethernet/IP communication module. Price adder applies.

CA7 Starters with optional CT7N Bimetallic Overload Relay ❶

Directly Mounts to Contactor...	Amp Range	Overload Relay Code (◆)	Catalog Number (of Overload Relay used)
CA7-9...CA7-23 Frame "A"	0.10...0.16	AA16	CT7N-23-A16
	0.16...0.25	AA25	CT7N-23-A25
	0.25...0.40	AA40	CT7N-23-A40
	0.35...0.50	AA50	CT7N-23-A50
	0.45...0.63	AA63	CT7N-23-A63
	0.55...0.80	AA80	CT7N-23-A80
	0.75...1.0	AB10	CT7N-23-B10
	0.90...1.3	AB13	CT7N-23-B13
	1.1...1.6	AB16	CT7N-23-B16
	1.4...2.0	AB20	CT7N-23-B20
	1.8...2.5	AB25	CT7N-23-B25
	2.3...3.2	AB32	CT7N-23-B32
	2.9...4.0	AB40	CT7N-23-B40
	3.5...4.8	AB48	CT7N-23-B48
	4.5...6.3	AB63	CT7N-23-B63
	5.5...7.5	AB75	CT7N-23-B75
	7.2...10	AC10	CT7N-23-C10
	9.0...12.5	AC12	CT7N-23-C12
	11.3...16	AC16	CT7N-23-C16
	15...20	AC20	CT7N-23-C20
	17.5...21.5	AC21	CT7N-23-C21
	21...25	AC25	CT7N-23-C25
CA7-30... CA7-37 Frame "B"	15...20	BC20	CT7N-37-C20
	17.5...21.5	BC21	CT7N-37-C21
	21...25	BC25	CT7N-37-C25
	24.5...30	BC30	CT7N-37-C30
	29...36	BC36	CT7N-37-C36
CA7-43...55 Frame "C"	33...38	BC38	CT7N-37-C38
	17...25	CC25	CT7N-43-C25
	24.5...36	CC36	CT7N-43-C36
	35...47	CC47	CT7N-43-C47
CA7-60... CA7-97 Frame "D"	45...60	CC60	CT7N-55-C60
	35...47	DC47	CT7N-85-C47
	45...60	DC60	CT7N-85-C60
	58...75	DC75	CT7N-85-C75
	72...90	DC90	CT7N-85-C90
	85...97	DC97	CT7N-97-C97

Special Notes:

Wye-Delta Starters - First multiply motor full load current by 58%. Then, using this figure, select appropriate Overload Relay Code from tables above.

Part Winding Starters - First multiply motor full load current by 50%. Then, using this figure, select appropriate Overload Relay Code from tables above.

C8

Starter Modification Codes

❶ Separately mounted overload is available. See Section B.

C8

Factory Modifications

Modifications or Special Feature ②		Change Last Digit (0) in Catalog Number To:
Pilot Devices In Cover or Flange		
"Start-Stop" Pushbutton		3
"On-Off" Pushbutton		4
"Emergency Stop" Pushbutton - Twist to Release ③		9
"Hand-Auto" Selector Switch		5
"Off-On" Selector Switch		6
"Hand-Off-Auto" Selector Switch		7
Pilot Light Only ①		1
Pilot Lights Only (2) ①		2
Pilot light w/ "Start-Stop" Pushbutton ①		13
Pilot Light w/ "On-Off" Pushbutton ①		14
Pilot Light w/ "Hand-Auto" Selector Switch ①		15
Pilot Light w/ "Off-On" Selector Switch ①		16
Pilot Light w/ "Hand-Off-Auto" Selector Switch ①		17
Reversing	"For-Stop-Rev" - Pushbutton	3
	"Up-Stop-Down" Pushbutton	4
	"Open-Stop-Close" Pushbutton	5
Multi-Speed	"High-Stop-Low" Pushbutton	3
	"Fast-Stop-Slow" Pushbutton	4
Reversing	"For-Off-Rev" Selector Switch	6
	"Up-Off-Down" Selector Switch	7
	"Open-Off-Close" Selector Switch	8
Multi-Speed	"High-Off-Low" Selector Switch	5
	"Fast-Off-Slow" Selector Switch	6
Reversing	Pilot Lights (2) w/ "For-Stop-Rev" Pushbutton ①	23
	Pilot Lights (2) w/ "Up-Stop-Down" Pushbutton ①	24
	Pilot Lights (2) w/ "Open-Stop-Close Pushbutton ①	25
Multi-Speed	Pilot Lights (2) w/ "High-Stop-Low" Pushbutton ①	23
	Pilot Lights (2) w/ "Fast-Stop-Slow" Pushbutton ①	24
Reversing	Pilot Lights (2) w/ "For-Off-Rev" Selector Switch ①	26
	Pilot Lights (2) w/ "Up-Off-Down" Selector Switch ①	27
	Pilot Lights (2) w/ "Open-Off-Close Selector Switch ①	28
Multi-Speed	Pilot Lights (2) w/ "High-Off-Low" Selector Switch ①	25
	Pilot Lights (2) w/ "Fast-Off-Slow" Selector Switch ①	26

Ordering Instructions

Change base **Catalog Number** according to instructions at top of column 2. Example: To Add a "Start-Stop" Pushbutton: change **CAT7-30-*-◆-GO** to **CAT7-30-*-◆-G3**

- ① Pilot Lights may be applied with 24VAC/DC, 120VAC or 240VAC control circuit. Pilot Lights with 380 VAC...575VAC require a control circuit transformer.
- ② Modifications may change dimension of starter enclosure.
- ③ Emergency Stop pushbutton includes inscription ring D7-15YSE112. For other selections from page H68 refer to factory.

Modifications or Special Feature ⑤			ADD Suffix to Catalog Number	Enclosure Type	
Additional Auxiliary Contacts ⑥					
1 N.O. 1 N.C.			L10 L01	All	
1 N.O. & 1 N.C. 2 N.O. 2 N.C.			L11 L20 L02	All	
1 NO + 2 NC Auxiliary 2 NO + 1 NC Auxiliary 3 NO Auxiliaries 3 NC Auxiliaries			L12 L21 L30 L03	All	
2 N.O. & 2 N.C. 1 NO + 3 NC Auxiliary 3 NO + 1 NC Auxiliary 4 NO Auxiliaries 4 NC Auxiliaries			L22 L13 L31 L40 L04	All	
Alternate Auxiliary Contact Arrangements 1 N.C. in lieu of standard 1 N.O. (on CAT7) 2 N.C. in lieu of standard 2 N.O. (on CAUT7)			LX1 LX2	All	
Control Circuit Transformer (with fused primary & secondary)					
Standard Capacity ③	Primary Volts	Secondary Volts	Replace (✱) in catalog # with following codes ②④	Type 1, 12, 3R, 4,4X Open	
	208	120	XA		
	240	120	XB		
	480	120	XC		
	600	120	XD		
	380	110	XG		
	50 Watt Extra Capacity	240	24	XE	Type 7/9
		480	24	XF	
		600	24	XJ	
		380	24	XK	
		208	24	XO	
		120	24	XP	
		277	120	XY	
100 Watt Extra Capacity	208	120	XA05	Type 1, 12, 3R, 4,4X Open	
	240	120	XB05		
	480	120	XC05		
	600	120	XD05	Type 7/9	
	240	24	XE05		
	480	24	XF05		
Special Voltage Transformer - Add suffix F/A to end of catalog # ①	208	120	XA1	Type 1, 12, 3R, 4,4X Open	
	240	120	XB1		
	480	120	XC1		
	600	120	XD1	Type 7/9	
	240	24	XE1		
	480	24	XF1		
	600	24	XJ1		
For applications requiring more than 100 Watt extra capacity				All, Open	

Ordering Instructions

Change base **Catalog Number** according to instructions in column 2.
Example: To Add a Control Circuit Transformer (480/120) and additional NO/NC auxiliaries: change **CAT7-30-✱-◆-GO** to **CAT7-30-XC-◆-G0-L11**.

Note: Separate multiple modification suffixes with a hyphen (-).

- ① Factory assigned.
- ② Coil will be factory selected based on transformer secondary.
- ③ See page C8:11 for detail specifications for Control Circuit Transformer.
- ④ Refer to factory for pricing on larger oversized control circuit transformer selections.
- ⑤ Modifications may change dimension of starter enclosure.
- ⑥ Auxiliary addition is per contactor. Quantity is double for reversing applications. Double price adder accordingly.

Modifications or Special Feature ①②	Power Supply					Replace (*) in catalog # with following codes	Enclosure Type
	Rating (W)	Input V AC	Output V DC	Output Amps			
				@ 40°C	@ 60°C		
AC to DC Output Power Supplies							
1-Phase Standard Capacity (CA7-9E...55E)							Open All
Power Supply (with no CPT)	72	115	24	2	1.5	PS1P	
Power Supply (with no CPT)	72	230	24	2	1.5	PS1E	
Power Supply w/CPT @ 208 VAC Primary	72	115	24	2	1.5	PS1XA	
Power Supply w/CPT @ 230 VAC Primary						PS1XB	
Power Supply w/CPT @ 460 VAC Primary						PS1XC	
Power Supply w/CPT @ 575 VAC Primary						PS1XD	
1-Phase Standard Capacity (CA7-60D...97D)							Open All
Power Supply (with no CPT)	336	115	24	14	10	PS4P	
Power Supply (with no CPT)	336	230	24	14	10	PS4E	
Power Supply w/CPT @ 208 VAC Primary	336	115	24	14	10	PS4XA	
Power Supply w/CPT @ 230 VAC Primary						PS4XB	
Power Supply w/CPT @ 460 VAC Primary						PS4XC	
Power Supply w/CPT @ 575 VAC Primary						PS4XD	
1-Phase 90W Extra Capacity (CA7-9E...55E)							Open All
Power Supply (with no CPT)	120	115	24	5	4	PS2P	
Power Supply (with no CPT)	120	230	24	5	4	PS2E	
Power Supply w/CPT @ 208 VAC Primary	120	115	24	5	4	PS2XA	
Power Supply w/CPT @ 230 VAC Primary						PS2XB	
Power Supply w/CPT @ 460 VAC Primary						PS2XC	
Power Supply w/CPT @ 575 VAC Primary						PS2XD	
2-Phase Standard Capacity (CA7-9E...55E)							Open All
Power Supply @ 230 VAC Primary	120	230	24	5	4	PS6B	
Power Supply @ 460 VAC Primary	120	460	24	5	4	PS6C	
2-Phase Standard Capacity (CA7-60D...97D)							Open All
Power Supply @ 230 VAC Primary	336	230	24	7.5	5	PS7B	
Power Supply @ 460 VAC Primary	336	460	24	7.5	5	PS7C	
For applications requiring extra capacity on either device, please refer to factory							
CR17E-❖ Electronic Interface Module for use with CA7-9...CA7-97: Interface between the DC control signal from a PLC and the AC operating mechanism of the contactor. - Eliminates the need for a power supply-current draw is 10 to 15 mA across a voltage range of 12-48V DC - Requires no additional surge suppression for the coils - Must have output voltage 110...240V AC - Add Suffix to end of catalog number: for example change CAT7-30-❖-❖-GO to CAT7-30-❖-❖-GO-JE						add Suffix to end of Catalog Number -JE	Open All

Ordering Instructions

Replace ***** in base **Catalog Number** with Power Supply code.
Example: To Add a Standard Capacity Power Supply with Control
Circuit Transformer (480/120):
change **CAT7-30E-~~*~~-~~◆~~-GO** to **CAT7-30E-PS1XC-~~◆~~-GO**.

- 1 Not applicable for Series CA9 Starters. CAT9 Starter applications should strongly consider the use of the "EI" functionality included in the CA9-116...1060-EI Contactors. The optional electronic interface selection allows the CA9 contactor to be switched from a PLC or other low-level signal source (15...33V DC) without the need of an interposing relay. The current burden of the interface is 15 mA maximum.
- 2 Modifications may change dimension of starter enclosure.

Modifications or Special Feature ⑦	ADD Suffix to Catalog Number	Enclosure Type
Other modifications		
Fused Control Circuit for separate or common control ⑥		
- 1 Fuse	F1	All, Open
- 2 Fuses	F2	All, Open
Surge Suppressor - RC Link	RC	All, Open
Surge Suppressor - Varistor	RV	All, Open
Surge Suppressor - Diode	RD	All, Open
Unwired Terminal Blocks Specify quantity (▼).	- ▼ TB	All
Control Relay Limited to one per controller-8 pole maximum, Specify pole arrangement and voltage ⑤	F/A ①	All, Open
Timing Relay Limited to one per controller-specify "On" or "Off" delay. Voltage will be same as coil voltage	F/A ①	All, Open
Compelling Relay ② ⑤	F/A ①	All, Open
Progressive or Decelerating Relay ② ⑤	F/A ①	All, Open
Omit Automatic Alternator ③	F/A ①	All, Open
Back Spin Timer ④	F/A ①	All, Open
Program Timer (24 hour) ④	F/A ①	All, Open
Fireman Damper Control Option		
HVAC Enclosed Starter Fireman Damper Option - 24 VAC/DC - 120 VAC/DC	FD24 FD120	Type 1
		Non-Combination
		Fusible
		Non-Fusible
		Thermal Magnetic
		Type 3R
		Non-Combination
		Fusible
		Non-Fusible
		Thermal Magnetic

Ordering Instructions

Change base catalog number according to instructions at top of column 2 or 3.

Example: To Add a "Start-Stop" Pushbutton, Control Circuit Transformer (480/120) and RC Link: change **CAT7-30-*** to **CAT7-30-XC-♦-G3-RC**.

Note: Separate multiple modification suffixes with a hyphen (-).

① Factory assigned.

② For Multi-speed controllers.

③ For Duplex Pump controllers.

④ For Pump Panel controllers.

⑤ If controller has a Control Circuit Transformer, select transformer with additional capacity for relay required.

⑥ CPT and power supply modification includes fused control circuit protection.

⑦ Modifications may change dimension of starter enclosure.

Modifications or Special Feature ③	ADD Suffix to Catalog Number	Enclosure Type
Meters		
Ammeter - Single Phase	AM1	All, Open
Ammeter - Three Phase (includes switch)	AM3	
Voltmeter - Single Phase	VM1	
Voltmeter - Three Phase (includes switch)	VM3	
Wattmeter	WM	
Elapsed Time Meter	ETM	
Enclosures		
Space Heater (with N.C. interlock)	HTR	Type 1, 12, 3R, 4, 4X
Breather and Drain	BD	Type 7/9
Service Identification Nameplate	F/A ①	All
Miscellaneous		
Lightning Arrester ②	LA	All, Open
Surge Capacitor ②	SC	
Phase Monitor Relay	F/A ①	
UL508A Panel Label	UL	Type 1, 12, 3R, 4, 4X
UL1203 Panel Label (includes 508A)	ULX	Type 7/9

Panel Shop Certifications
Sprecher + Schuh is an ISO9001 company. Our panel shops are UL and ATEX Certified. Please refer to factory for specifications and label options for the following panel certifications.
UL508A or SUSE label: Most starter assemblies can be supplied with a UL508A 'Industrial Control Panel' label. Combination starters can be supplied with Suitable for Service Entrance (SUSE) label. The need for a UL508A or SUSE label must be identified at the time of quotation as well as on the purchase order. The need for a UL508A label may not change the components we would normally use but we must consider all possible requirements at the time we are developing the bill-of-material to be referenced at the time of order entry. Failure to identify the need for a UL508A label or SUSE label at the time of quotation may result in change notice price adders.
ATEX Certification: A requirement for ATEX certification MUST be identified at the time of quotation as well as on the purchase order. ATEX certification of a Type 7/9 explosion proof enclosure definitely requires all conduit and cover openings to be drilled by the enclosure manufacturer. Further, all pilot devices and equipment to be installed must be identified as it controls the heat dissipation which is an ATEX certification requirement. Absolutely no field modification of an ATEX certified starter assembly is allowed. Failure to identify the need for an ATEX certification at the time of quotation and order entry may result in 100% cancelation or re-stocking charge since a new enclosure will be required.
UL1203 Certification: The UL1203 label for explosion proof starters and panels encompasses the UL508A certification. This means all components in a UL1203 labeled panel must first comply with UL508A, and all components in the panel must have a UL label in some form, including the wiring. A special name plate and UL508A label are applied to the panel or starter. A panel is not UL1203 certified unless both label and name plate are present. Contact customquotes@sprecherschuh.com for more information on UL1203 certified panels.

Ordering Instructions

Change base catalog number according to instructions at top of column 2.
Example: To add an Elapsed Time Meter and Breather Drain to an explosion-proof starter, change **CAT7-30-*-◆-E0** to **CAT7-30-*-◆-E0-ETM-BD**.
Note: Separate multiple modification suffixes with a hyphen (-).

- ① Factory assigned.
- ② For Pump Panel controllers.
- ③ Modifications may change dimension of starter enclosure.

Contactor (Relay) Coil Data ③

	Coil Consumption		Coil Consumption				Minimum Recommended Transformer ❸
Device	DC Watts		AC ❶				
	Inrush	Sealed	Inrush (pick-up)		Sealed (holding)		
			VA	Watts	VA	Watts	
CA8-9, CA8-12	-	-	35	32	5	1.8	50
CA8-09C, CA8-12C	3.0 cold / 2.6 warm	3.0 cold / 2.6 warm	-	-	-	-	-
CA7-9, CA7-12, CA7-16	-	-	75	50-60	9.5	2.7	50
CA7-9E, CA7-12E, CA7-16E, CA7-23E	10 avg. / 17 peak	1.7	-	-	-	-	-
CA7-23	-	-	105	60-70	12.3	3.1	50
CA7-30, CA7-37	-	-	105	70	12.3	3.1	50
CA7-30E, CA7-37E	10 avg. / 17 peak	1.7	-	-	-	-	-
CAL7-30, CA7-40	-	-	135	90-100	13.3	3.3	75
CA7-43, CA7-55	-	-	135	90-100	13.3	3.3	75
CA7-40E, CA7-43E, CA7-55E	16 avg. / 25 peak	2.5	-	-	-	-	-
CA7-60, CA7-72, CA7-85	-	-	235	110	19	6.5	100
CAL7-60, CA7-90, CA7-97	-	-	400	240	24	9	200
CA7-60D, CA7-72D, CA7-85D, CA7-97D	200	4.5	-	-	-	-	-
CA7-90D	325	5.5	-	-	-	-	-
CA9-116, CA9-146							100
CA9-190, CA9-205							100
CA9-265, CA9-305, CA9-370			See section A				100
CA9-400, CA9-460							200
CA9-580, CA9-750							200
CA9-860, CA9-1060							300
CA9-1260							200
CA9-2050, CA9-2650							300

See section A

C8

Starters & Enclosed Products

Control Circuit Transformer Voltage Specifications

Factory Modification Code ④	Factory Wired Connection		Voltage Taps Available	
	Primary	Secondary	Primary	Secondary
XA	208	120	208/230/460	115
XB	240	120	240/480	120
XC	480	120	240/480	120
XD	600	120	575/600	115/120
XE	240	24	240/480	24
XF	480	24	240/480	24
XG	380	110	380/400/415	110/220
XH	Must specify tap	115	208/230/460	115
XJ	600	24	600	12/24
XK	380	24	480/380/277/240/208	24
XL	415	24	480/415/400	24/120
XM	Must specify tap	24/115	208/230/460	24/115
XN	400	24	480/415/400	24/120
XO	208	24	208/230/460	24/115
XP	120	24	120/240	24



① 50Hz, 60Hz or 50/60Hz except CA7 which is 60Hz.

② For AC coils.

③ The "VA" values shown are the minimum requirement to energize one contactor. For multiple contactors and/or additional control circuit devices (burden) refer to control circuit transformer manufacturer's selection criteria.

④ Modification codes in Gray are Special Order. Contact a Sprecher + Schuh representative.



Motor Starters - Non-Reversing

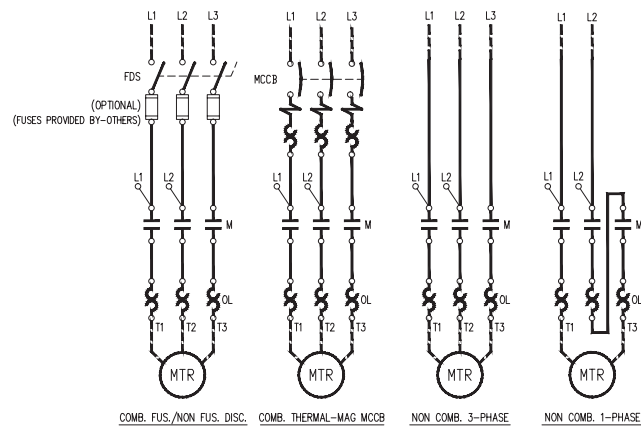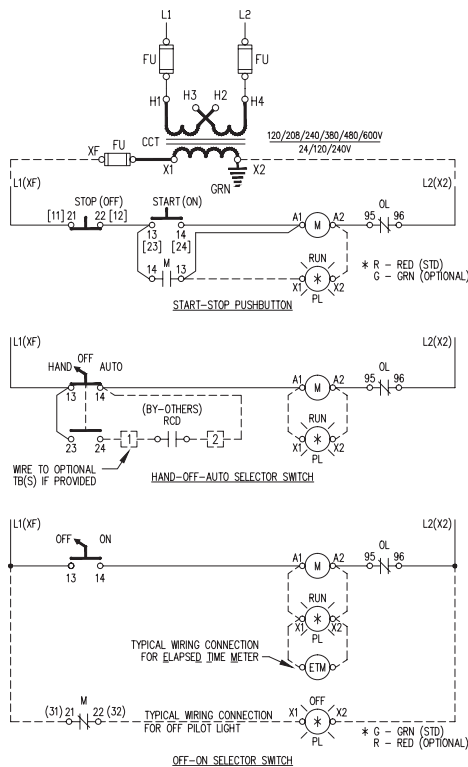

NOTES:

- 1) X2 TERMINAL GROUNDED AS STANDARD, REMOVE GROUND IF NOT REQUIRED.
- 2) RCD: STANDS FOR REMOTE CONTROL DEVICE BY CUSTOMER.
- 3) [] : FOR MULTIFUNCTION TERMINAL NUMBERS.
- 4) () : FOR ALT. AUX. CONTACT TERMINAL NUMBERS.


Motor Starters - Non-Reversing (with Current Transformers)

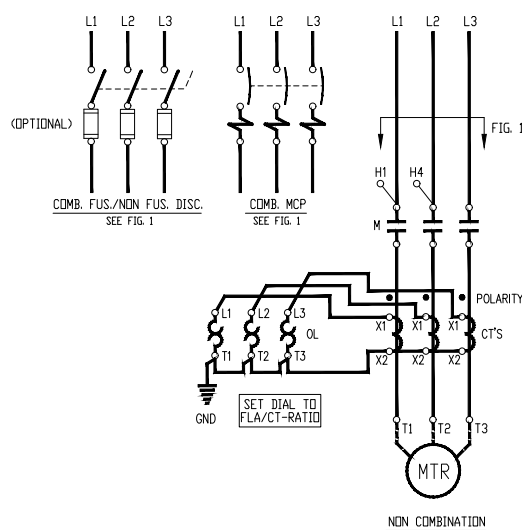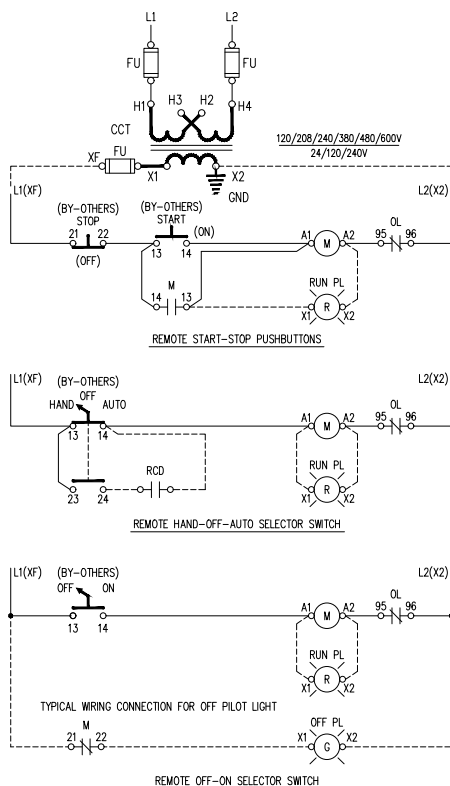



NOTES:

- 1) RCD: STANDS FOR REMOTE CONTROL DEVICE BY CUSTOMER.
- 2) X2 TERMINAL GROUNDED AS STANDARD, REMOVE GROUND IF NOT REQUIRED.
- 3) REFER TO PAGE B13 FOR CURRENT SETTING GUIDANCE


Motor Starters - Reversing (three phase & single phase reconnectable)

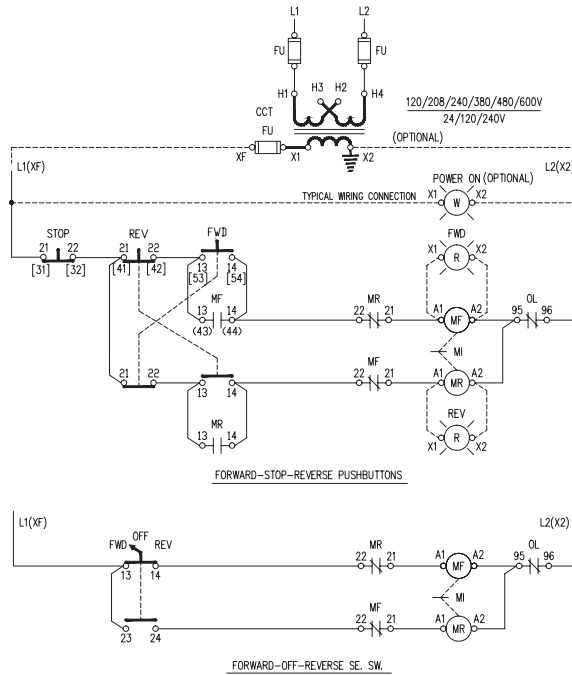



NOTES:
 1) X2 TERMINAL GROUNDED AS STANDARD. REMOVE IF NOT REQUIRED.
 2) MI: STANDS FOR MECHANICAL INTERLOCK
 3) TERMINAL NUMBERS IN () APPLIES ONLY ON CA7-30...97

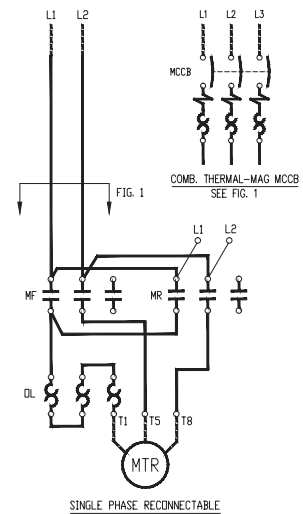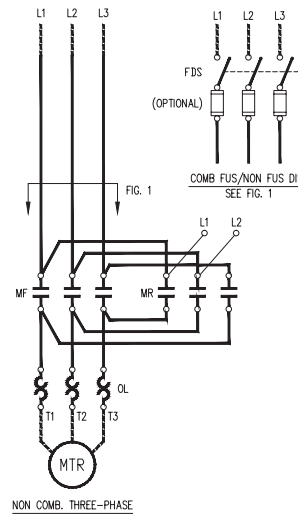



Motor Starters - Reversing (single phase series & parallel winding)

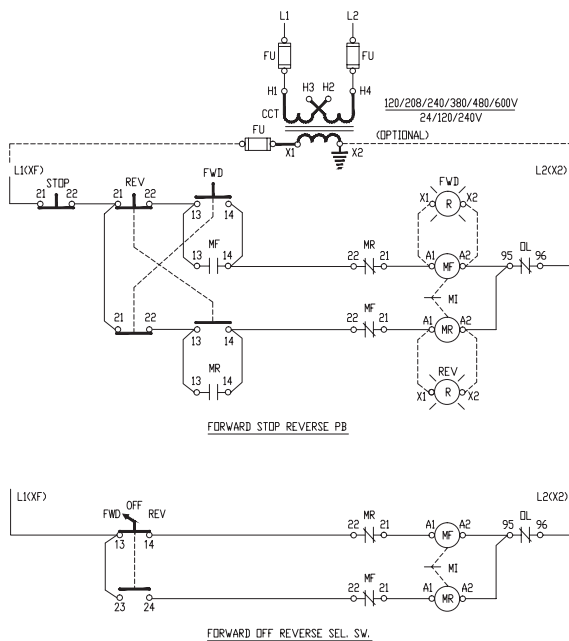

NOTES:
 1) X2 TERMINAL GROUNDED AS STANDARD. REMOVE IF NOT REQUIRED.
 2) MI STANDS FOR MECHANICAL INTERLOCK.

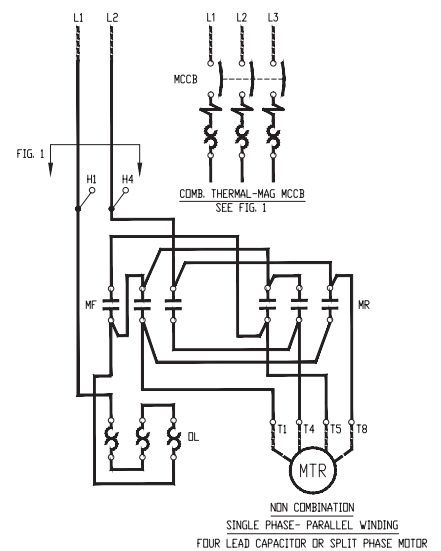
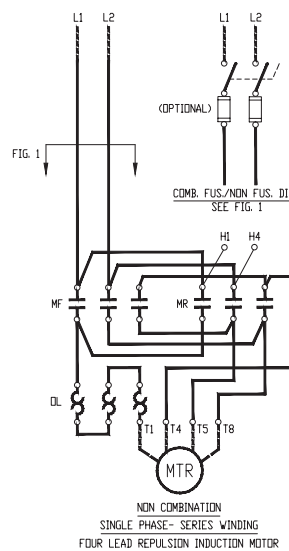


Reduced Voltage Starters - Autotransformer

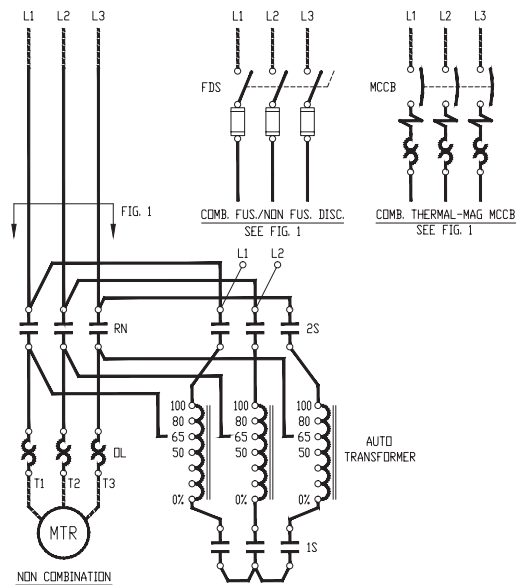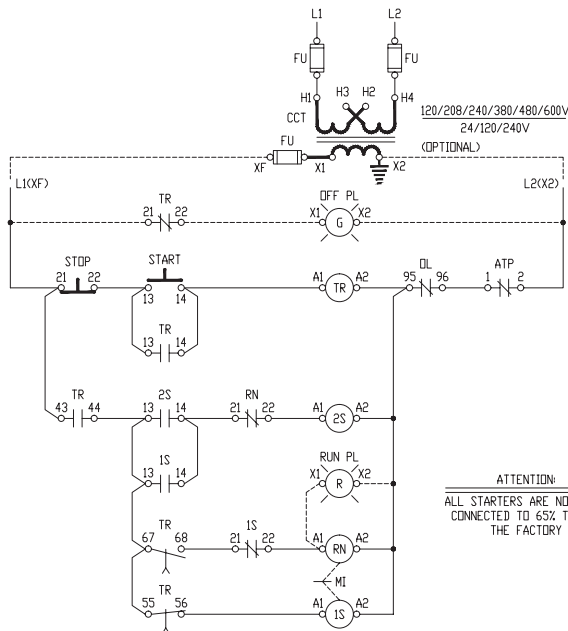


- NOTES:
- 1). ATP: STANDS FOR AUTO TRANSFORMER THERMAL PROTECTION.
 - 2). X2 TERMINAL GROUNDED AS STANDARD, REMOVE IF NOT REQUIRED.
 - 3). MI STANDS FOR MECHANICAL INTERLOCK.
 - 4). TIMING RELAY TR: CS7-22E+CZE7-30S.

Reduced Voltage Starters - Part Winding

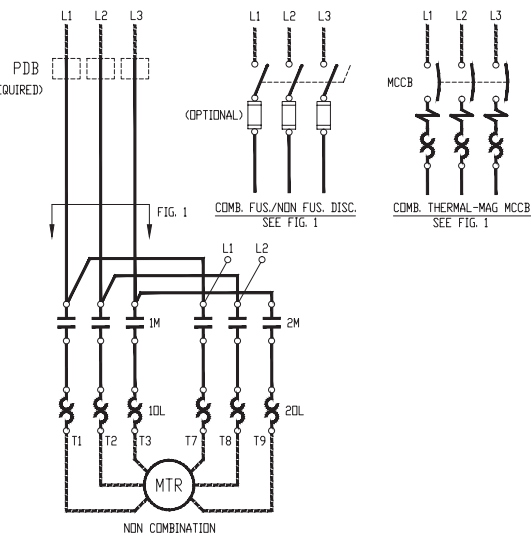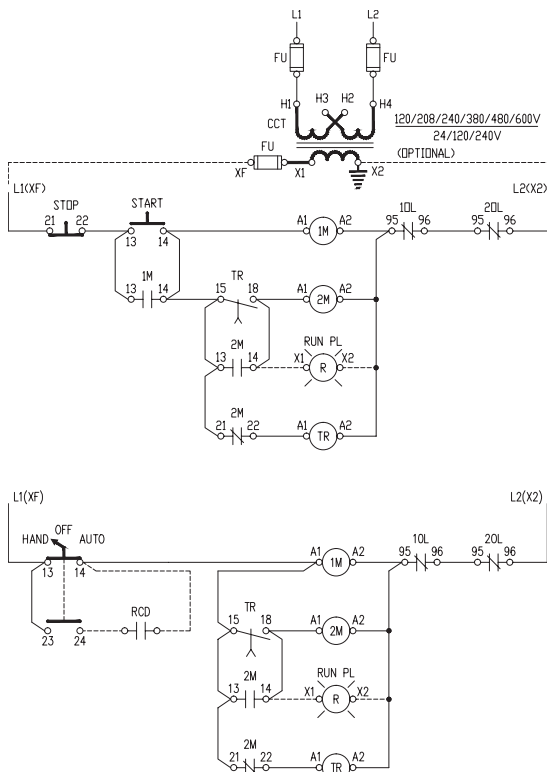


- NOTES:
- 1). OVERLOAD RELAY SETTING: MOTOR FLC X 0.5.
 - 2). X2 TERMINAL GROUNDED AS STANDARD, REMOVE IF NOT REQUIRED.
 - 3). TIME DELAY RELAY TR TO BE SET TO SHORTEST TIME POSSIBLE, MAX. 3 SECONDS.
- TIMING RELAY TR: RZ7-FSA3

Reduced Voltage Starters - Wye Delta (Open Transition)

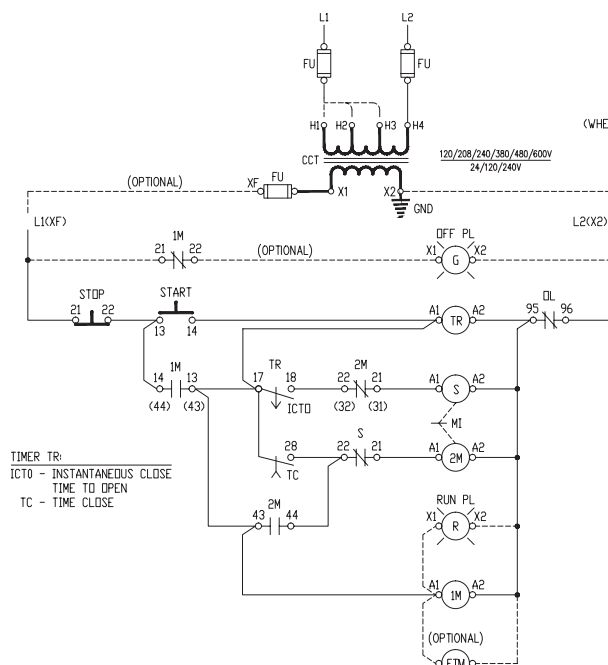


NOTES:

- 1). OVERLOAD RELAY SETTING: MOTOR FLC X 0.58.
- 2). X2 TERMINAL GROUNDED AS STANDARD, REMOVE IF NOT REQUIRED.
- 3). MI STANDS FOR MECHANICAL INTERLOCK.
- 4). TIMING RELAY TR: RZ7-FSY2 WYE DELTA TIMER.

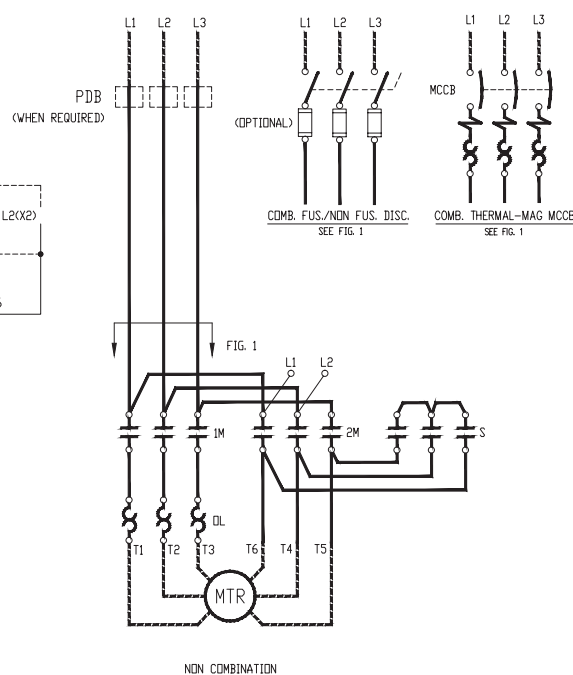


Reduced Voltage Starters - Wye Delta (Closed Transition)

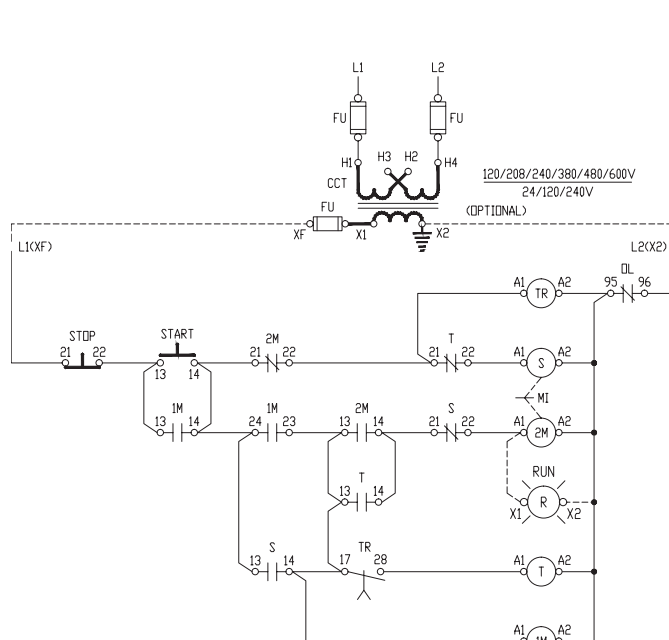


NOTES:



- 1). OVERLOAD RELAY SETTING: MOTOR FLC X 0.58.
- 2). X2 TERMINAL GROUNDED AS STANDARD, REMOVE IF NOT REQUIRED.
- 3). MI STANDS FOR MECHANICAL INTERLOCK.
- 4). TIMING RELAY TR: RZ7-FSY2D

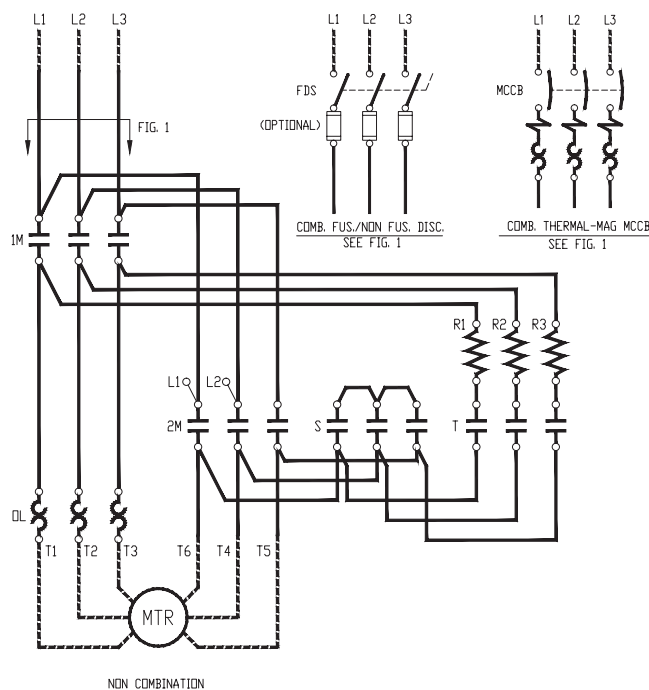

Typical Hydraulic Elevator Two-Contactor Wye-Delta Starter

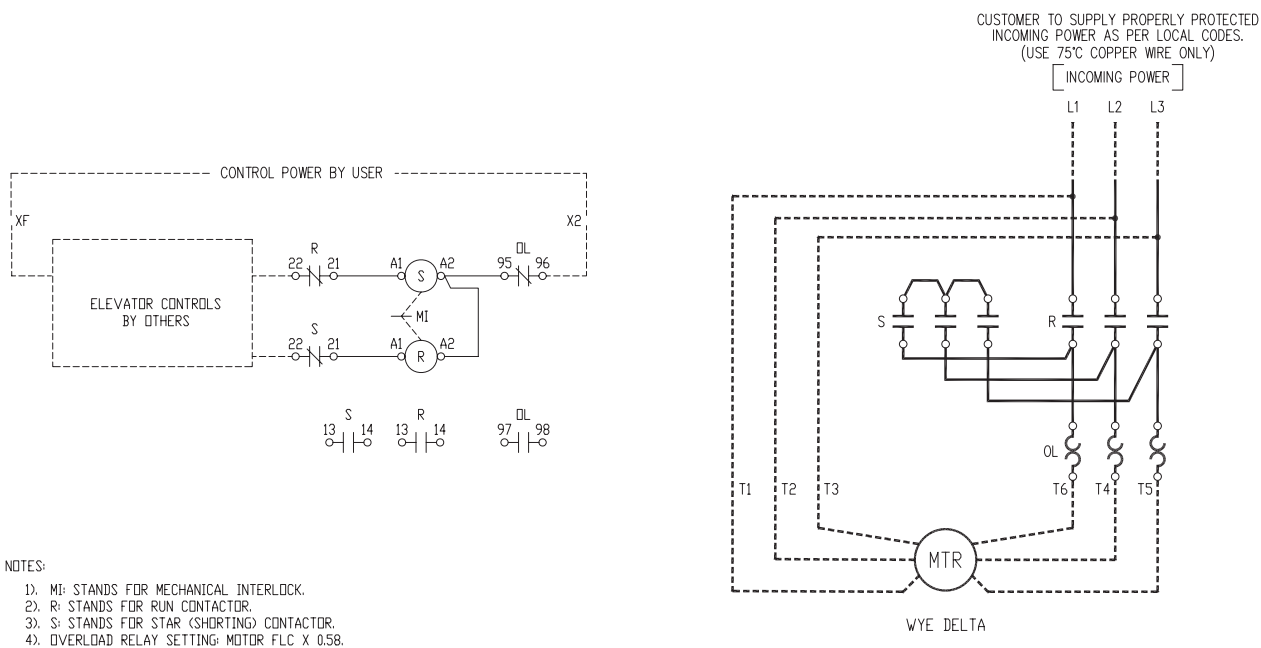



Multi Speed - One Reconnectable Winding (Selective Control)

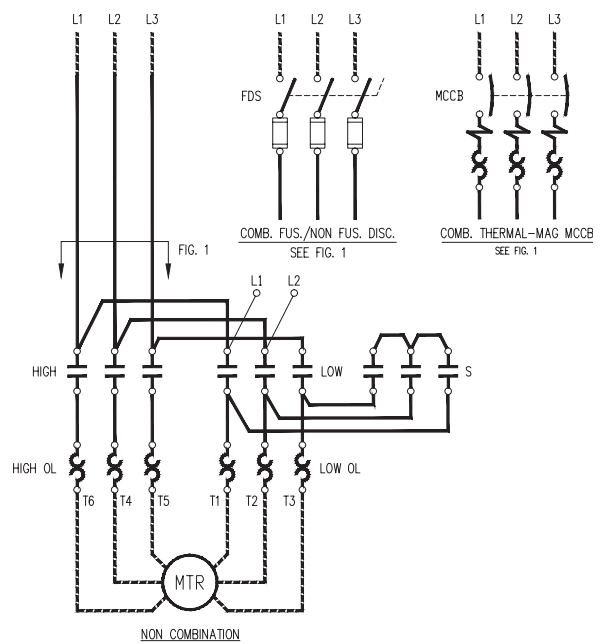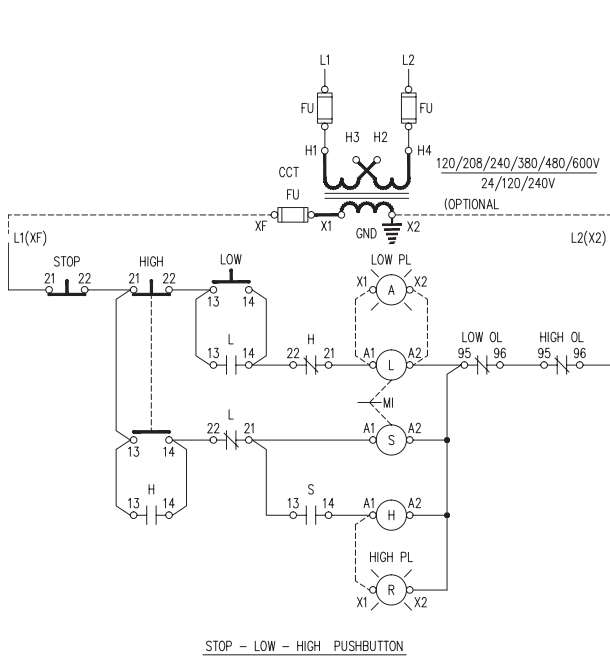

NOTES:

- 1). X2 TERMINAL GROUNDED AS STANDARD, REMOVE IF NOT REQUIRED.
- 2). MI STANDS FOR MECHANICAL INTERLOCK.


Multi Speed - Two Separate Windings (Selective Control)

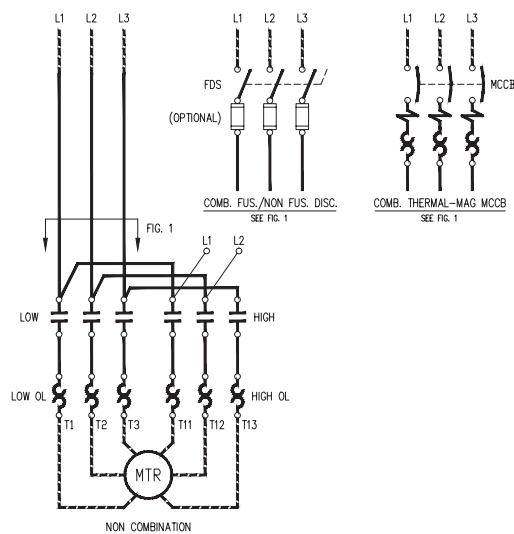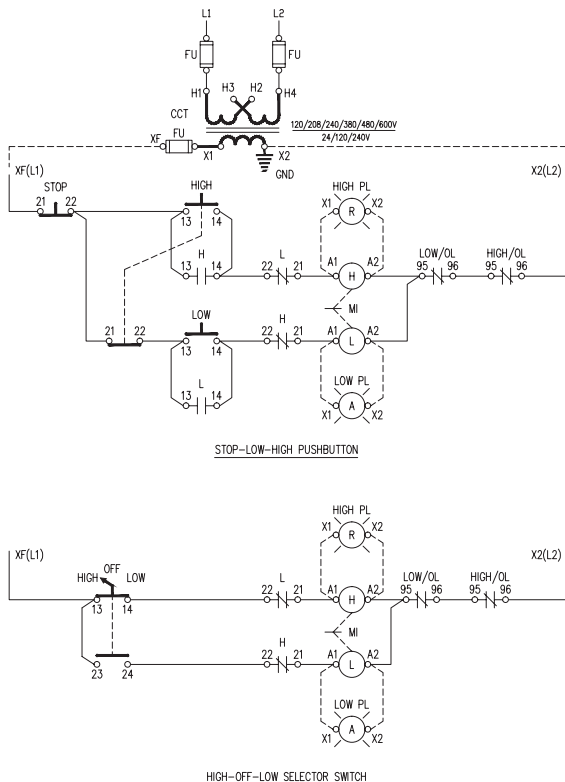


NOTES:

- 1). X2 TERMINAL GROUNDED AS STANDARD, REMOVE IF NOT REQUIRED.
- 2). MI STANDS FOR MECHANICAL INTERLOCK.


Classic Pump Control Panels

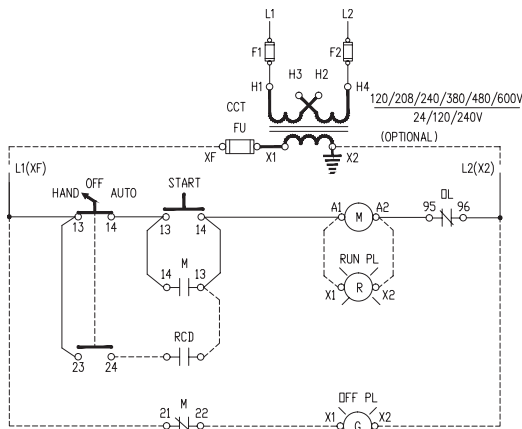

HAND-OFF-AUTO SELECTOR SWITCH WITH START PUSHBUTTON

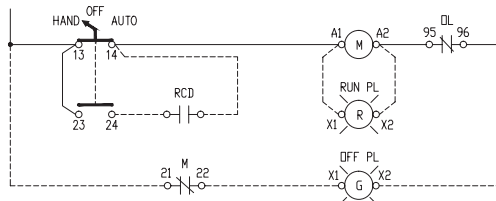

HAND-OFF-AUTO SELECTOR SWITCH

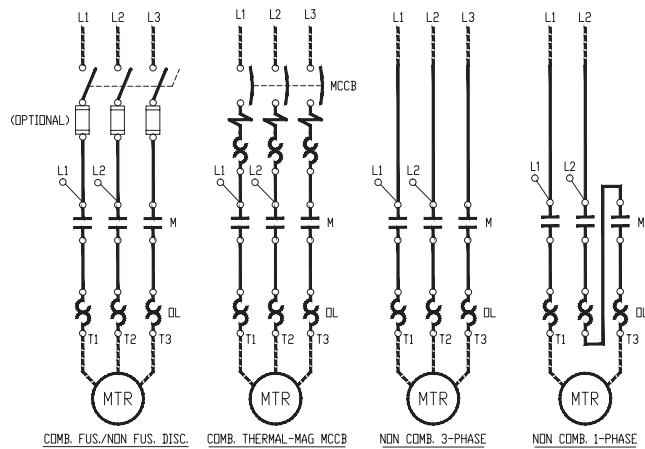


NOTES:



- 1). RCD: STANDS FOR REMOTE CONTROL DEVICE BY CUSTOMER.
- 2). X2 TERMINAL GROUNDED AS STANDARD, REMOVE GROUND IF NOT REQUIRED
- 3). DO NOT WIRE CONTROL CIRCUIT TO LINE SIDE OF CONTACTOR WHEN COIL VOLTAGE IS 120V OR LESS

Combination Fusible Switch 3-PH FVNR Duplex Alternating Panel


AC Control w/ D7 Series Pilot Devices

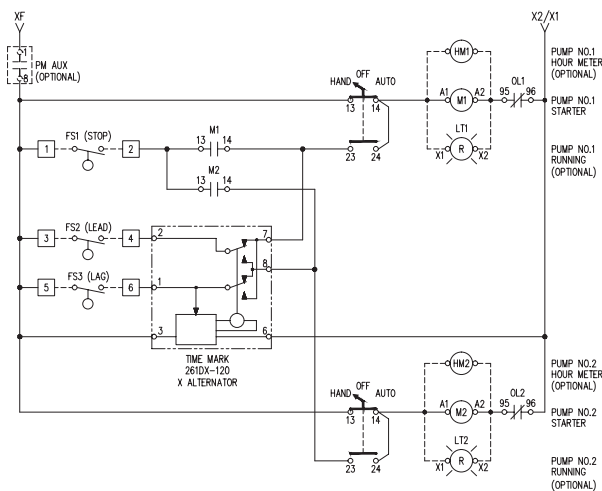

FS1 - "STOP" FLOAT SWITCH
FS2 - "LEAD" FLOAT SWITCH
FS3 - "LAG" FLOAT SWITCH



COPPER ONLY
TIGHTENING TORQUE [5-6.2 lb-in]

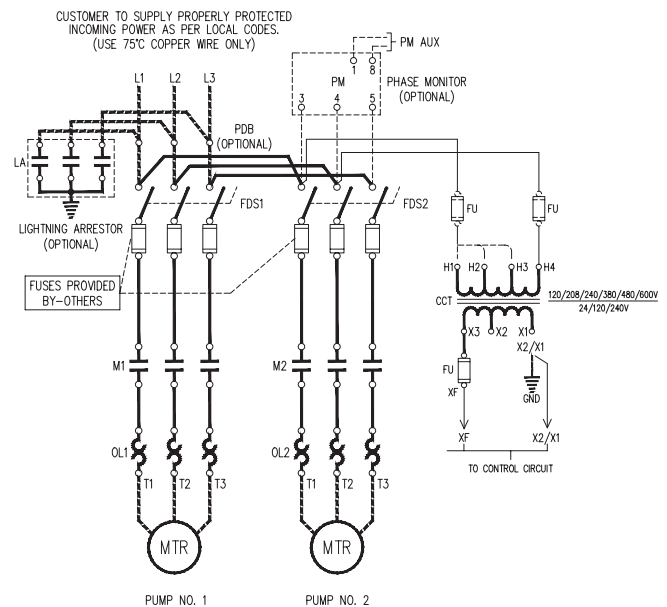


NOTE:


- 1). X2 TERMINAL GROUNDED AS STANDARD, REMOVE IF NOT REQUIRED.

Combination Fusible Switch 3-PH FVNR Duplex Alternating Panel

W/ H-O-A, alarm CKT, Lead, Lag, Stop, 1-Pole Float Switches, Alarm Circuit.

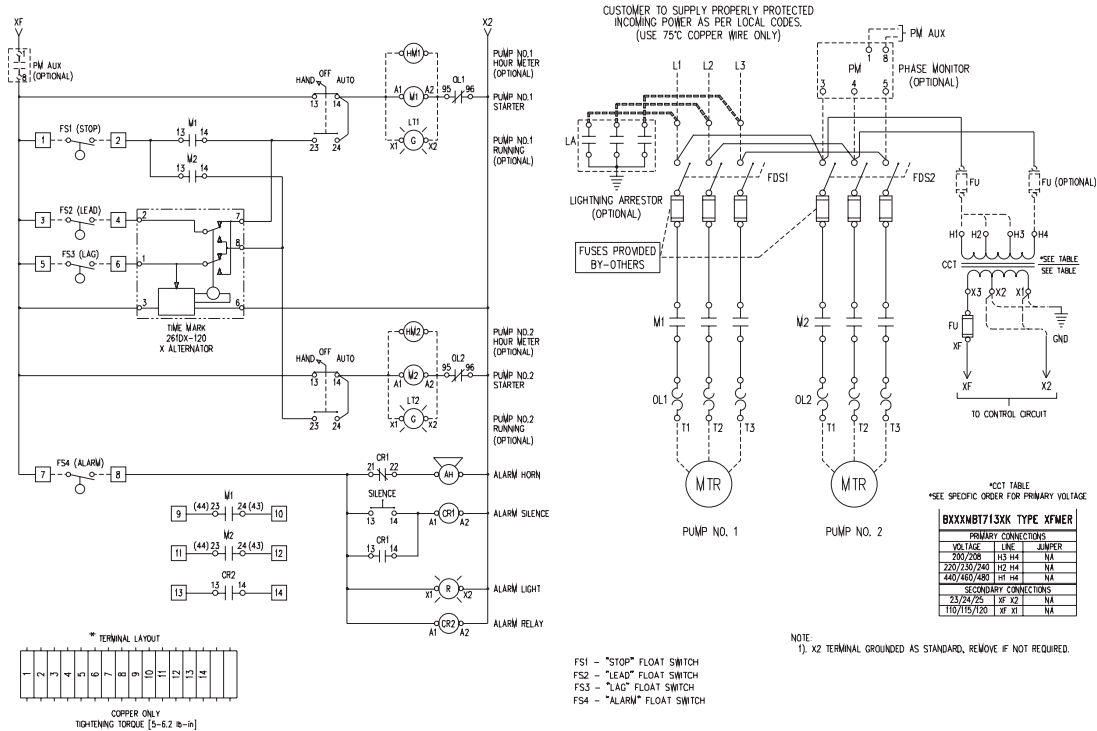



DC Control Configuration for CAT7

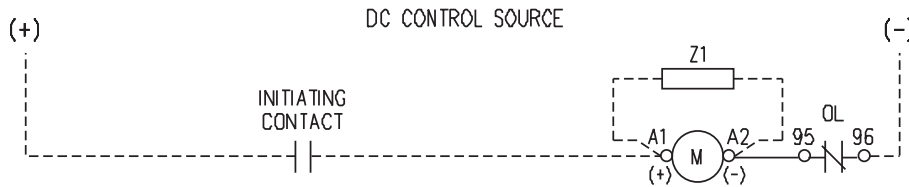

Z1 - VOLTAGE LIMITING ELEMENT
BUILT-IN ON CA7-9E THRU CA7-55E
BUILT-IN ON CA7-60D THRU CA7-97D



TYPICAL 2-WIRE CONTROL CIRCUIT FOR
CA7-9E THRU CA7-97D WITH DC COIL

CAL7 Lighting Contactor - 4 Pole

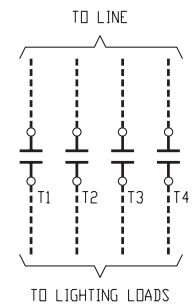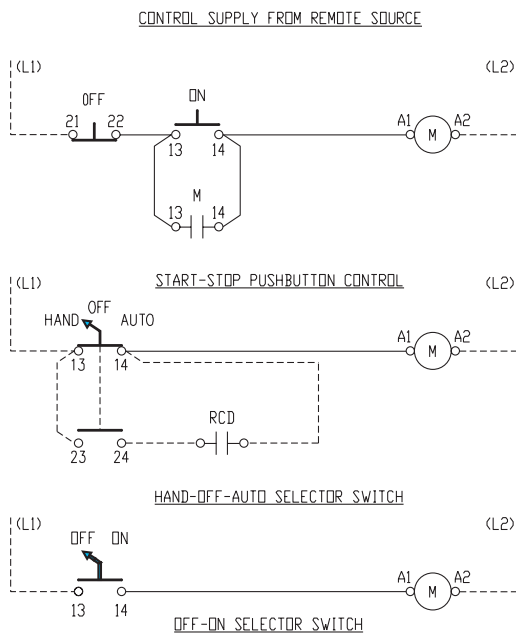


NOTES:
1.) RCD: STANDS FOR REMOTE CONTROL DEVICE BY CUSTOMER.

CAL7 Lighting Contactor - 8 Pole

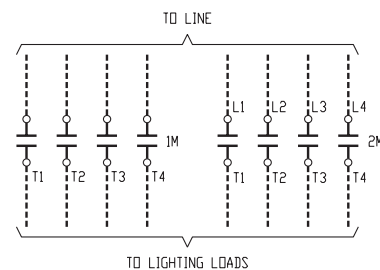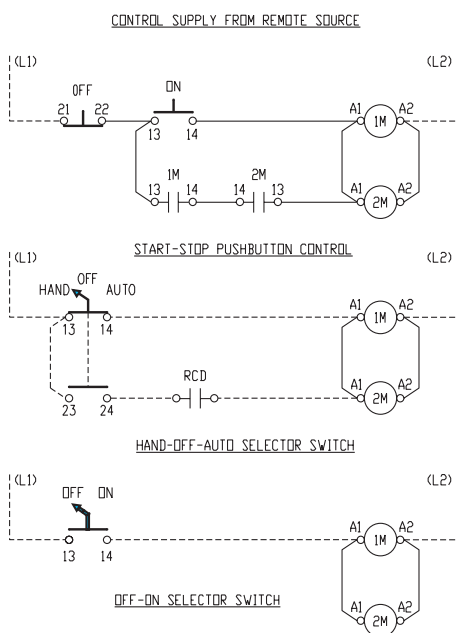


NOTES:
1.) M1: STANDS FOR MECHANICAL INTERLOCK.
2.) RCD: STANDS FOR REMOTE CONTROL DEVICE BY CUSTOMER.

CAL7 Lighting Contactor with CAV Mechanical Latch B

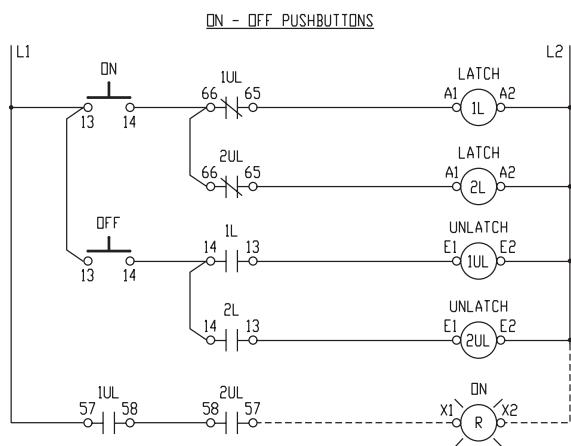

CAV OPERATION:


CAV CONSISTS OF CA7 CONTACTOR "L" WITH CV7-11 MECHANICAL LATCH "UL".
AFTER "L" COIL IS ENERGIZED AND THE CONTACTOR CLOSES, THE MECHANICAL LATCH MECHANICALLY LOCKS THE CONTACTOR IN THE CLOSED POSITION. THE "L" COIL IS THEN DE-ENERGIZED BY THE COIL CLEARING CONTACT "UL" TO REMOVE VOLTAGE.
AFTER THE "UL" COIL IS ENERGIZED, THE MECHANICAL LATCH RELEASES THE CONTACTOR. THE "UL" COIL IS IMMEDIATELY DE-ENERGIZED BY THE COIL CLEARING CONTACT "L" TO REMOVE VOLTAGE. THE CONTACTOR IS NOW OPEN.

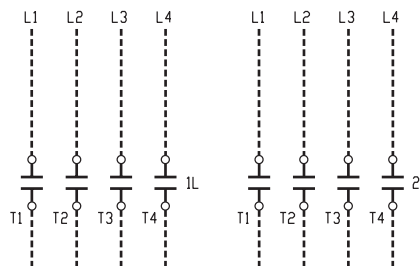

NOTES:

- 1) "L": CA7 CONTACTOR.
- 2) "UL": CV7-11 MECHANICAL LATCH. (THE CV7 COIL IS MOMENTARY RATED ONLY)
- 3) CONNECT CONTROL CIRCUIT DIRECTLY TO LINE (L1) & (L2) OF CONTACTOR IF COIL VOLTAGE IS 208V OR ABOVE.
- 4) DO NOT CONNECT CONTROL CIRCUIT DIRECTLY TO LINE (L1) & (L2) OF CONTACTOR IF COIL VOLTAGE IS 120V OR LESS. (FACTORY WIRING STANDARD)
- 5) X1 & X2 INDICATES CONNECTION TO REMOTE CONTROL SOURCE.

Fireman (-FD12) Damper Override at 120V

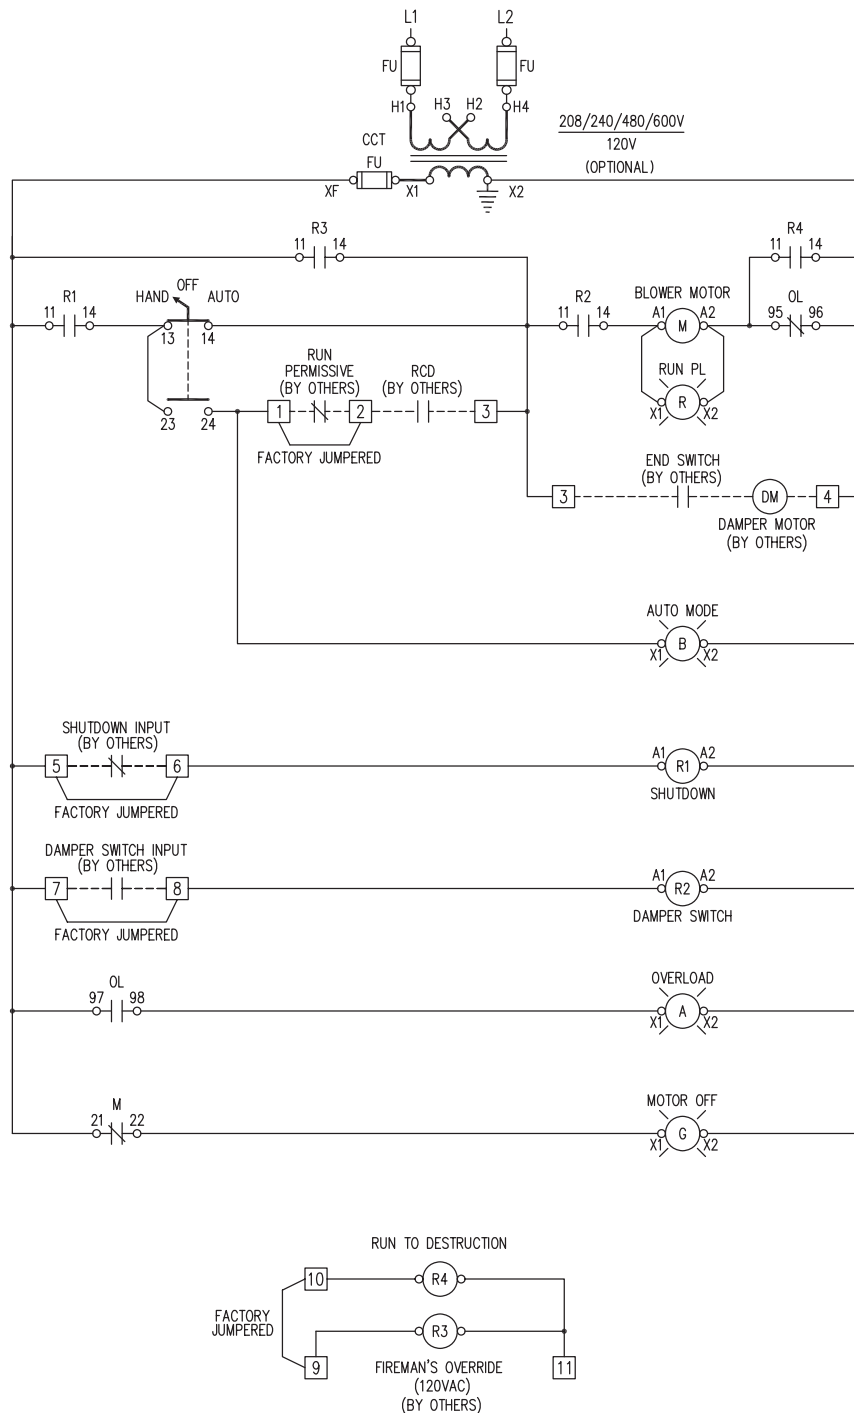

Enclosure Dimensions Figure 1-8

- See enclosure drawings by Figure No. on the next page
- Dimensions are in decimal inches
- Dimensions not intended for manufacturing purposes
- For other dimensions, please refer to factory

TYPE 1 - GENERAL PURPOSE ENCLOSURE										
Encl. ID Dim.	Figure No.	Enclosure Size			Mtg Depth	Mtg Centers		Panel Size		H
		A	B	C		D	E	F	Sub-Pan	
A	2	10	8	6	5.5	7	7	8.25	6.25	N/A
B	2	12	10	6	5.5	9	9	10.25	8.25	N/A
C	2	16	12	6.62	6	7	13.88	13	10.5	N/A
C2	2	16	12	8.62	8	7	13.88	13	10.5	N/A
D	2	20	16	6.62	6	11	17.88	17	14.5	N/A
D3	2	20	16	8.62	8	11	17.88	17	14.5	N/A
E	2	24	20	8.62	8	15	21.88	21	18.5	N/A
E2	2	24	20	10.62	10	15	21.88	21	18.5	N/A
F	2	30	24	8.62	8	16.75	27.5	26	22.5	N/A
G	2	30	24	12.62	12	16.75	27.5	26	22.5	N/A
H	2	36	30	12.62	12	22.75	33.5	32	28.5	N/A
I	2	42	30	13.25	12.09	22.76	39.88	39	27	N/A
J	2	48	36	13.25	12.09	28.76	45.88	45	33	N/A
J2	(Type 12 Enclosure, See Table Below)									
K2	(Type 12 Enclosure, See Table Below)									
K3	(Type 12 Enclosure, See Table Below)									
M	2	10	8	6	5.5	7	7	8.25	6.25	N/A
O	2	14	12	6	5.47	10.98	11.02	12.25	10.25	N/A
S	2	36	24	8.62	8	16.75	33.5	32	22.5	N/A

TYPE 12 - INDUSTRIAL DUST TIGHT ENCLOSURE										
Encl. ID Dim.	Figure No.	Enclosure Size			Mtg Depth	Mtg Centers		Panel Size		H
		A	B	C		D	E	F	Sub-Pan	
C2	4	16	14	8	7.53	12	16.75	14.75	12.88	17.5
C3	4	16	14	10	9.53	12	16.75	14.75	12.88	17.5
H	5	36	30	12	12	24	37.25	33	27	38.5
I	5	42	30	12	12	24	43.25	39	27	44.5
J	5	48	36	12	12	30	49.25	45	33	50.5
J2	5	48	36	16	16	30	49.25	45	33	50.5
K2	5	60	36	16	16	30	61.25	57	33	62.5
K3	5	60	36	12	12	30	61.25	57	33	62.5
L	4	8	6	6	5.53	4	8.75	6.75	4.88	9.5
M	4	10	8	6	5.53	6	10.75	8.75	6.88	11.5
O	4	14	12	6	5.53	10	14.75	12.75	10.88	15.50
Q	5	20	16	8	8	10	21.25	17	13	22.5
Q2	5	20	16	10	10	10	21.25	17	13	22.5
R	5	24	20	8	8	14	25.25	21	17	26.5
R2	5	24	20	10	10	14	25.25	21	17	26.5
T	5	30	24	10	10	18	31.25	27	21	32.5
W	5	42	36	12	12	30	43.25	39	33	44.5

TYPE 3R - RAIN TIGHT ENCLOSURE										
Encl. ID Dim.	Figure No.	Enclosure Size			Mtg Depth	Mtg Centers		Panel Size		H
		A	B	C		D	E	F	Sub-Pan	
L	7	10	8	6	5.46	3	11	8.25	6.25	12
M	7	12	10	6	5.46	3	13	10.25	8.25	14
O	8	18	18	10	8.1	13	19	15	15	20
Q	8	20	20	8	6.98	13	21	17	17	22
R	8	24	20	8	6.98	13	25	21	17	26
R2	8	24	24	10	8.81	13	25	21	21	26
T	5	30	24	10	8.81	13	31	27	21	32.5
H	8	36	30	12	10.97	27	37	33	27	38
I	8	42	30	12	10.97	27	43	39	27	44
W	8	42	36	12	10.97	27	43	39	33	44
J	8	48	36	12	10.97	27	49	45	33	50

Enclosure Dimensions Figure 1-8

See dimension tables on previous page.

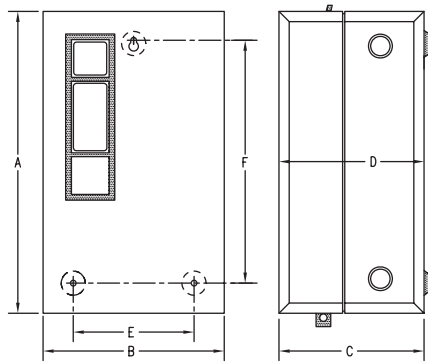


FIGURE NO. 1

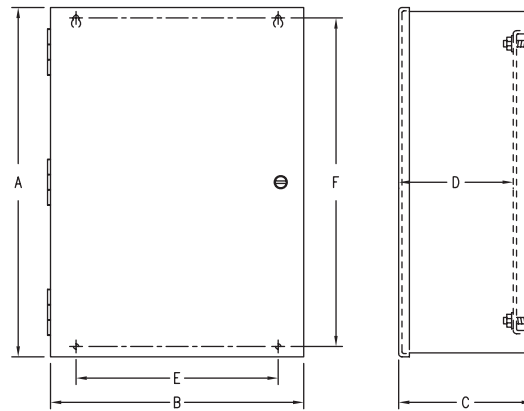


FIGURE NO. 2

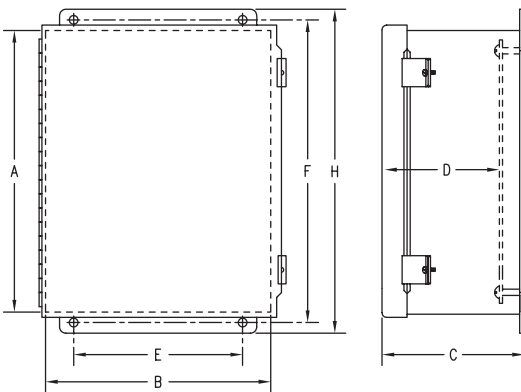


FIGURE NO. 4

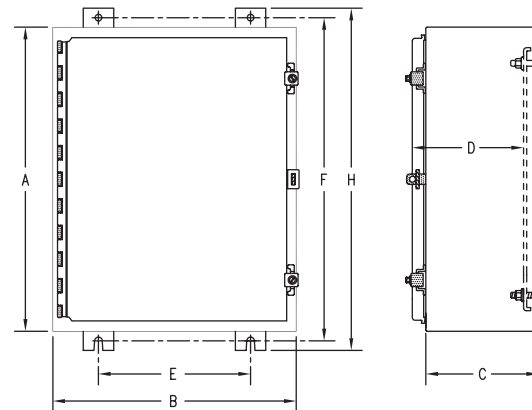


FIGURE NO. 5

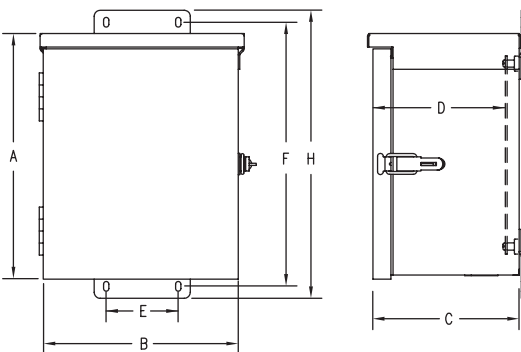


FIGURE NO. 7

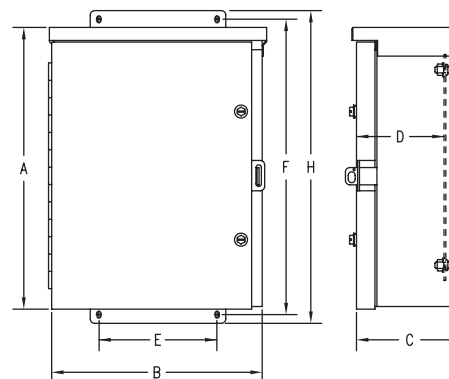


FIGURE NO. 8

Enclosure Dimensions Figure 9-14

- See enclosure drawings by Figure No. on the opposite page
- Dimensions are in decimal inches
- Dimensions not intended for manufacturing purposes
- For other dimensions, please refer to factory

TYPE 4 - WATER TIGHT ENCLOSURE

Encl. ID Dim.	Figure No.	Enclosure Size			Mtg Depth		Mtg Centers		Panel Size Sub-Pan		H
		A	B	C	D	E	F				
C	10	16	12	6	6	9.5	17.24	13	9	18.5	
C2	10	16	12	8	8	9.5	17.24	13	9	18.5	
H	10	36	30	12	12	24	37.24	33	27	38.5	
J	10	48	36	12	12	30	49.24	45	33	50.5	
M	9	10	8	6	5.53	6	10.75	8.75	6.88	11.5	
N	9	12	10	5	4.53	8	12.75	10.75	8.88	13.5	
O	9	14	12	6	5.53	10	14.75	12.75	10.88	15.5	
Q	10	20	16	8	8	10	21.24	17	13	22.5	
Q2	10	20	16	10	10	10	21.24	17	13	22.5	
R	10	24	20	8	8	14	25.24	21	17	26.5	
R2	10	24	20	10	10	14	25.24	21	17	26.5	
T	10	30	24	10	10	18	31.24	27	21	32.5	

TYPE 4X - WATER TIGHT, CORROSION RESISTANT, NON-METALLIC ENCLOSURE

Encl. ID Dim.	Figure No.	Enclosure Size			Mtg Depth		Mtg Centers		Panel Size Sub-Pan		H
		A	B	C	D	E	F				
S1	13	7.32	5.94	5.50	4.52	5.16	6.54	4.13	5.5	N/A	
U1	13	11.89	7.32	6.93	5.85	6.54	11.10	5.47	8.98	N/A	
V1	13	14.65	11.89	6.93	5.85	11.10	13.86	10	11.73	N/A	
V2	13	14.65	11.89	9.69	8.23	11.10	13.86	10	11.73	N/A	
W1	13	23.74	14.65	6.93	5.85	13.78	22.91	12.76	20.78	N/A	
W2	13	23.74	14.65	9.69	8.23	13.78	22.91	12.76	20.78	N/A	
X1	14	30.25	24.63	11.80	10.25	18	31.95	27	21	33.13	
A2	14	36.25	30.63	13.8	12.25	24	37.58	33	27	39.13	
Y1	14	48.25	36.63	13.8	12.25	30	49.58	45	33	50.82	
Z1	14	60.25	36.63	13.8	12.25	30	61.58	57	33	62.82	

C8

Starters & Enclosed Products

Enclosure Dimensions Figure 9-14

See dimension tables on previous page.

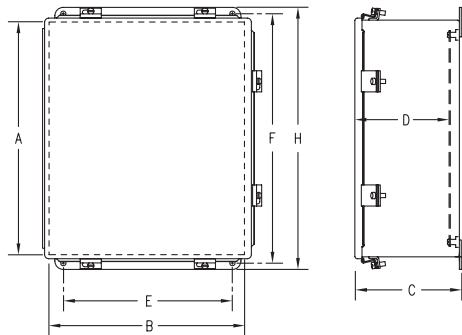


FIGURE NO. 9

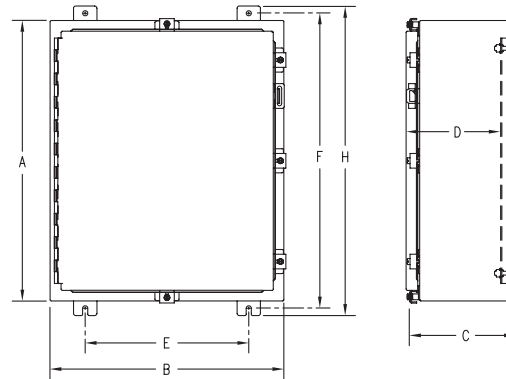


FIGURE NO. 10

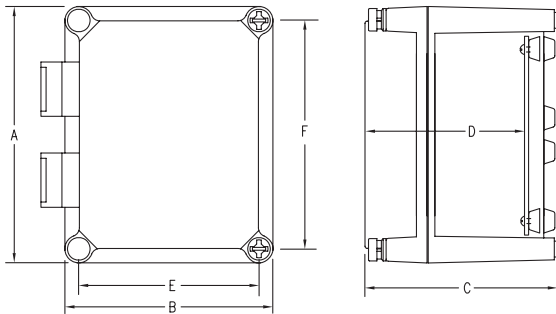


FIGURE NO. 13

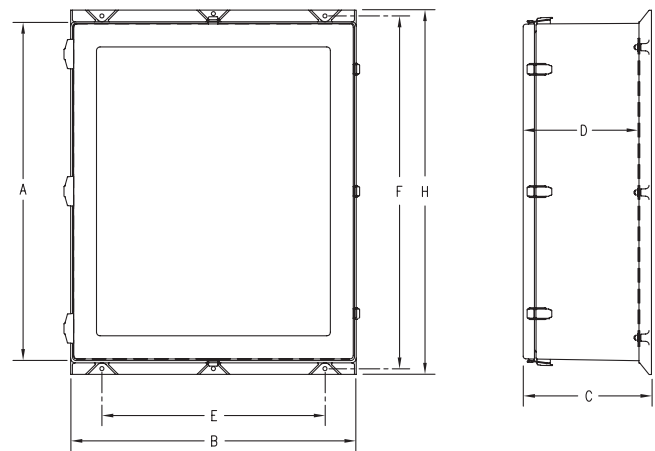


FIGURE NO. 14

Type 7/9 - Explosion Proof Enclosure Dimensions

Dimensions are in decimal inches. Dimensions not intended for manufacturing purposes.

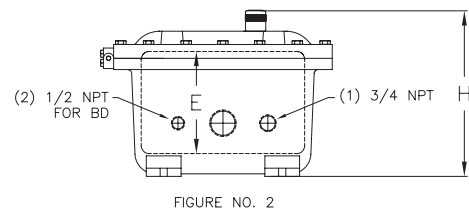
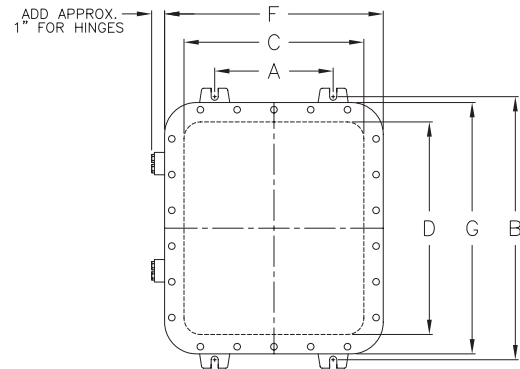
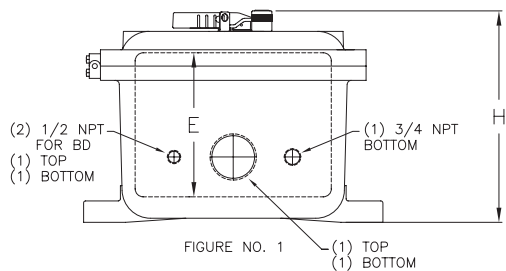
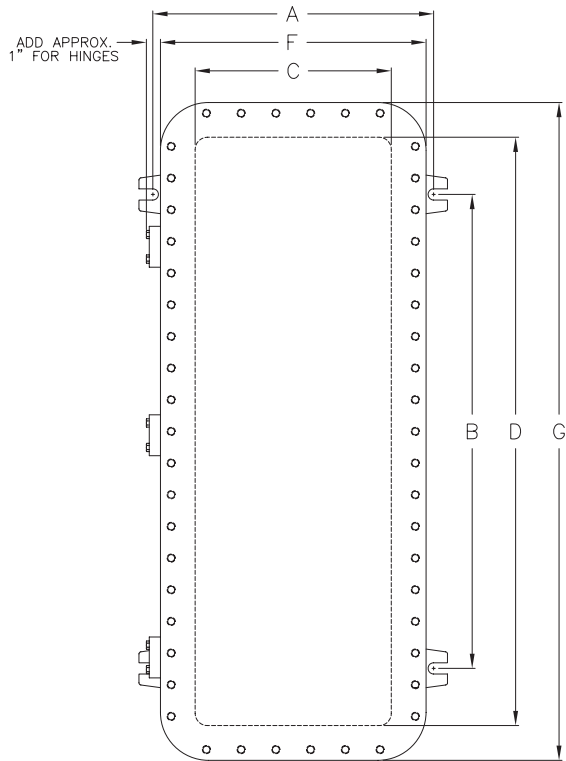


FIGURE NO. 2

Encl. ID Dim.	Figure No.	Mounting Dims		Inside Dims			Overall Dims			Panel Size Sub-Pan		Conduit Entry Top & Bot
		A	B	C	D	E	F	G	H			
A7	2	7.25	14.50	10.0	12.0	7.25	13.38	15.38	10.13	10.88	8.88	1.25
B7	2	8.50	27.13	12.0	24.0	8.94	16.25	28.25	12.5	11.0	23.0	2.0
C7	1	15.75	29.0	12.0	36.0	8.94	16.25	40.25	12.94	10.75	34.75	2.5
D7	1	19.75	39.0	16.0	46.0	11.81	20.88	50.88	15.81	14.50	44.50	4.0
E7	2	7.25	16.19	10.0	14.0	6.75	13.38	17.38	9.69	8.88	12.88	1.0
F7	2	8.50	27.13	12.0	24.0	6.94	16.25	28.25	10.50	11.0	23.0	1.5
G7	1	15.75	29.0	12.0	36.0	8.94	16.25	40.25	12.94	10.75	34.75	2.0
H7	1	19.75	39.0	16.0	46.0	11.81	20.88	50.88	15.81	14.50	44.5	4.0