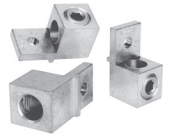
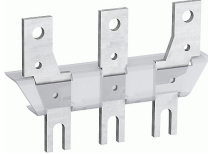



A3

CA9 Contactors

Terminal Lugs and Accessories

Lug or Accessory	Connection	Wire Sizes	For use with...	Catalog Number
 Order 1 Pkg for 2 kits	Terminal Lug Kit - - Standard for CA9-116-_-L...146-_-L - Includes 2 sets, one for Line side and one for Load Side	2 x 6 AWG...3/0 AWG	CA9-116(-EI)...146(-EI)	CA9-CL146
 Order 1 Pkg for 3 lugs	Terminal Lugs ❶ - Includes 1 set of 3 lugs for use on either Line or Load Side. - Order qty of 2 for both.	6 AWG...300 MCM	CA9-190(-EI)...205(-EI)	CA9-TL205
		4 AWG...400 MCM	CA9-265(-EI)...370(-EI)	CA9-TL370
		2 x 4 AWG...500 MCM	CA9-265(-EI)...370(-EI)	CA9-TL370B
		2 x 2/0 AWG...500 MCM	CA9-400-EI...460-EI	CA9-TL580
		3 x 2/0 AWG...500 MCM	CA9-580-EI...750-EI	CA9-TL750
		4 x 4/0 AWG...500 MCM	CA9-860-EI	CA9-TL860
		4 x 1/0 AWG...750 MCM	CA9-1060-EI	CA9-TL1060
	Terminal Enlargements ❷ Enlargement pieces designed to increase the width of the contactor terminal pads in order to allow larger connections to be mounted		CA9-116(-EI)...146(-EI)	CA9-TE146
			CA9-190(-EI)...205(-EI)	CA9-TE205
			CA9-265(-EI)...370(-EI)	CA9-TE370
			CA9-400-EI...460-EI	CA9-TE460
			CA9-580-EI...750-EI	CA9-TE750
			CA9-1260-EI	CA9-TE1260
	Terminal Extensions Extension pieces designed to extend the main terminals of contactors for combined mounting of contactors and connection sets		CA9-116(-EI)...146(-EI)	CA9-TX146
			CA9-190(-EI)...205(-EI)	CA9-TX205
			CA9-265(-EI)...370(-EI)	CA9-TX370
			CA9-400-EI...460-EI	CA9-TX460
			CA9-580-EI...750-EI	CA9-TX750

Terminal Shrouds

Accessory	Description	For use with...	Catalog Number
	For contactors with Compression Lugs - Package contains 2 shrouds, one for Line and one for Load side - Not applicable when using CA9-PW-power wiring kits.	CA9-116(-EI)...146(-EI)	CA9-TS146L
		CA9-190(-EI)...205(-EI)	CA9-TS205C
		CA9-265(-EI)...370(-EI)	CA9-TS370C
		CA9-400-EI...460-EI	CA9-TS460C
		CA9-580-EI...750-EI, 1260-EI	CA9-TS750C
	For contactors with Terminal Lugs - Package contains 2 shrouds, one for Line and one for Load side - Not applicable when using CA9-PW-power wiring kits.	CA9-190(-EI)...205(-EI)	CA9-TS205L
		CA9-265(-EI)...370(-EI)	CA9-TS370L ❷
		CA9-400-EI...460-EI	CA9-TS460L
		CA9-580-EI...750-EI	CA9-TS750L
	For IP20 protection between contactor and overload relay on a non-reversing starter	CAT9-116(-EI)...146(-EI)	CA9-TC146
		CAT9-190(-EI)...205(-EI)	CA9-TC205
	For IP20 protection between contactor and overload relay on a reversing starter	CAUT9-116(-EI)...146(-EI)	CA9-TCR146
		CAUT9-190(-EI)...205(-EI)	CA9-TCR205

❶ Contactors CA9-1260...2650 are intended for busbar connection only. Lugs should be sourced separately and are not available from Sprecher + Schuh

❷ Not applicable with CA9-TL370B dual lugs.

❸ Not applicable with CA9-TL___ lugs. The intention for landing a wire is using compression (ring) lugs.

See page A3:21 for terminal wire ranges.